



# DUST MANAGER CYCLONIC

GENERATION FUTURE



ENGLISH

GB

## USER INSTRUCTIONS

DIAGRAM A

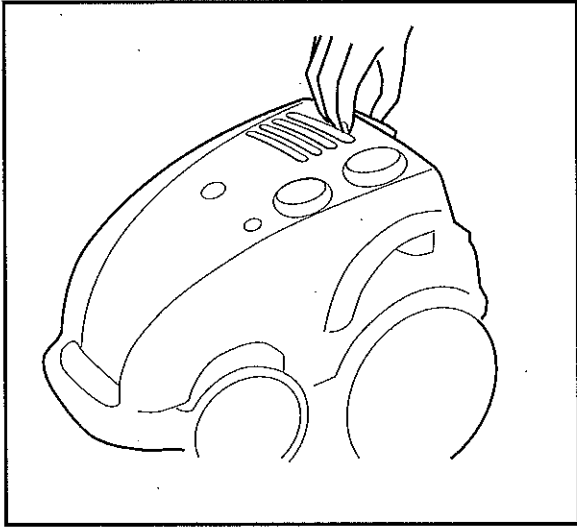


DIAGRAM B

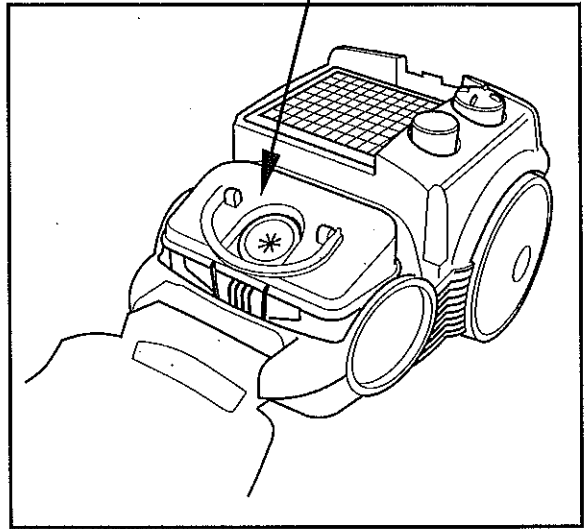


DIAGRAM C(1,2)

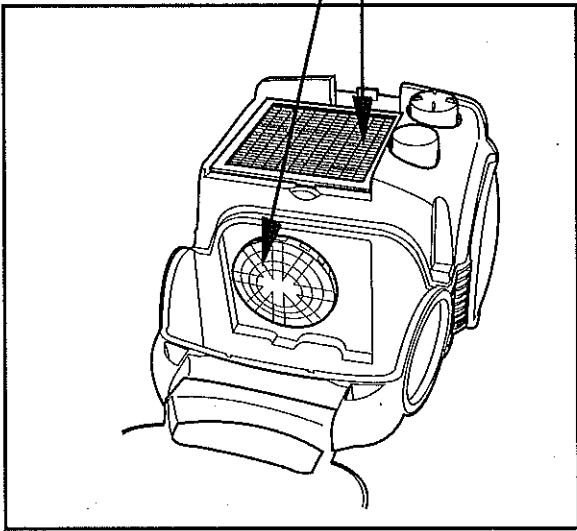


DIAGRAM D

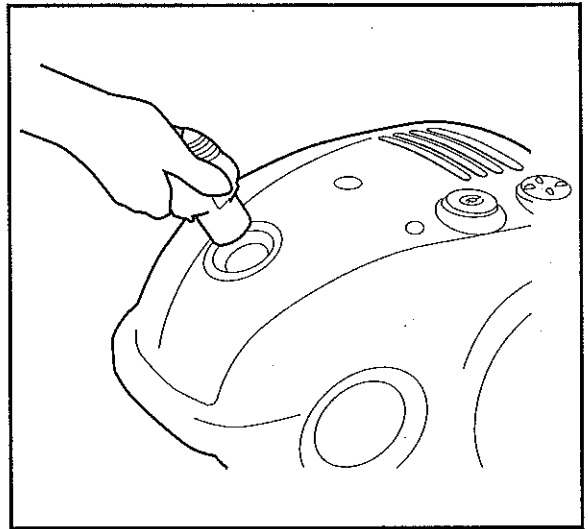


DIAGRAM E

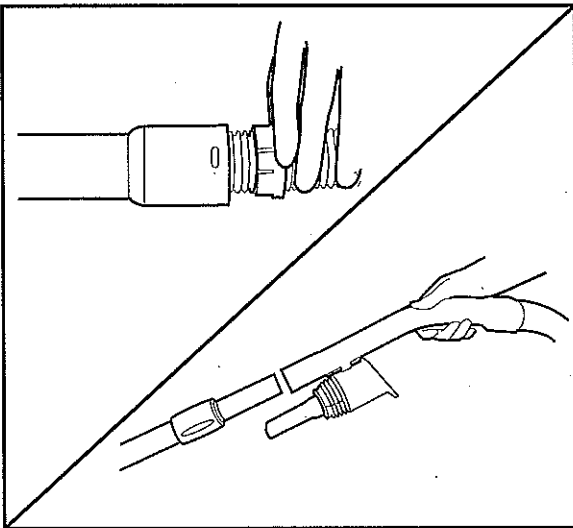


DIAGRAM F2

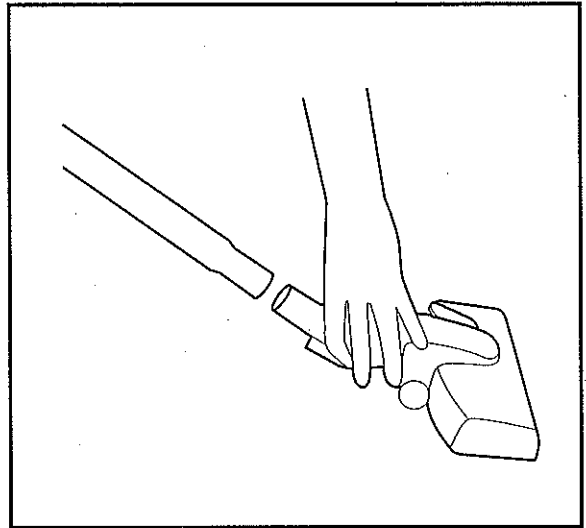


DIAGRAM F1

DIAGRAM G

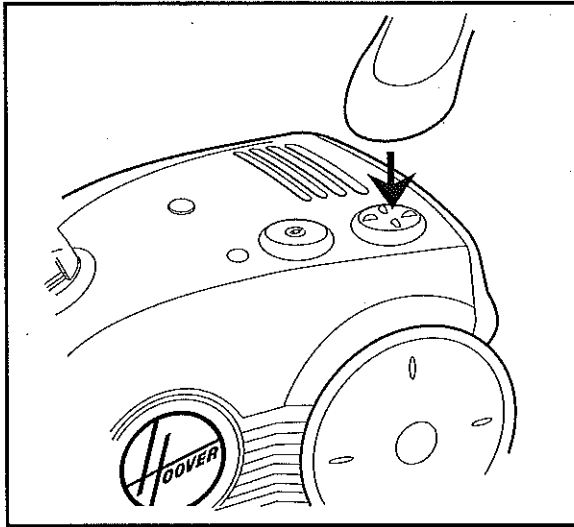


DIAGRAM H

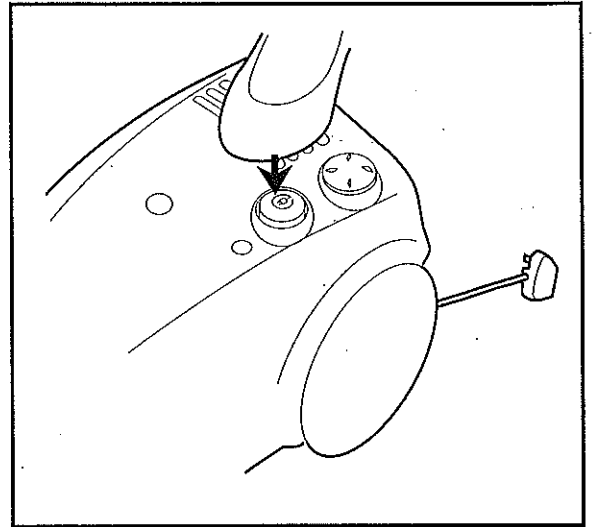


DIAGRAM I

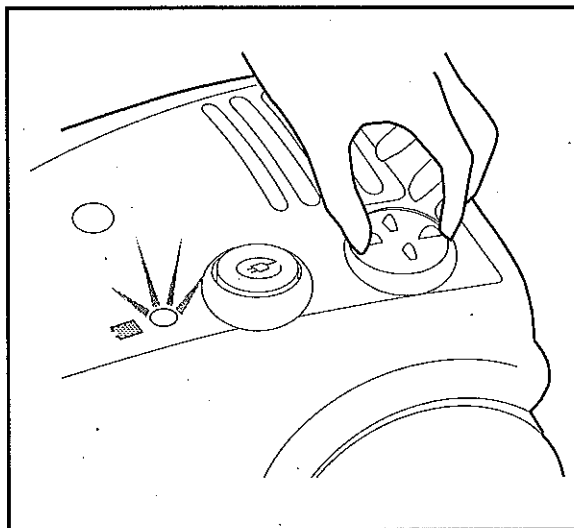


DIAGRAM J

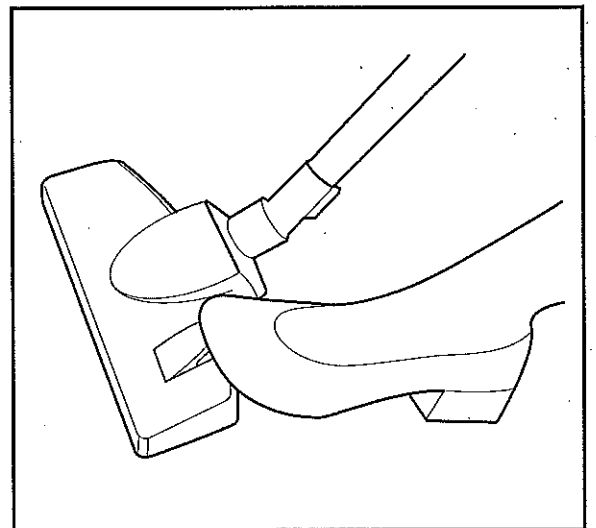


DIAGRAM K1

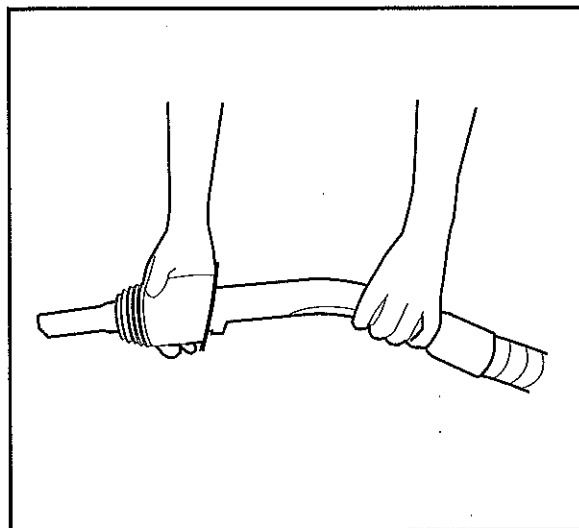


DIAGRAM K2

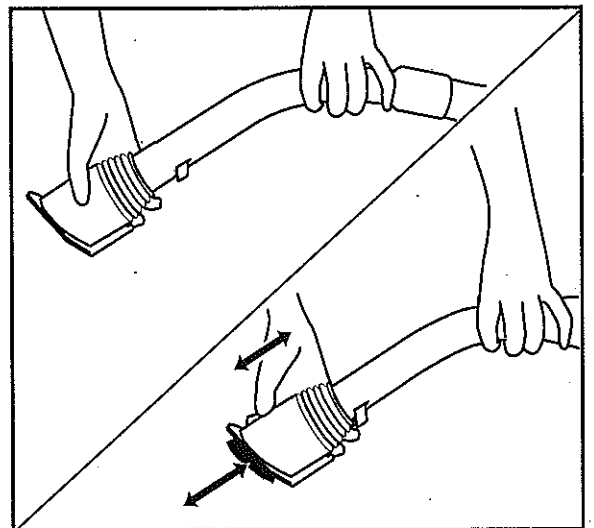


DIAGRAM L

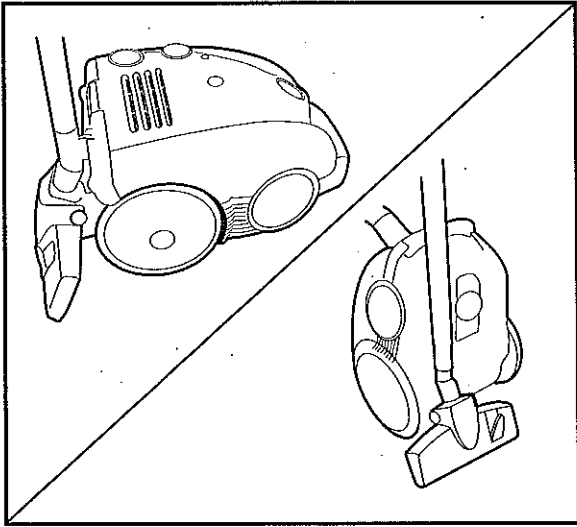


DIAGRAM M

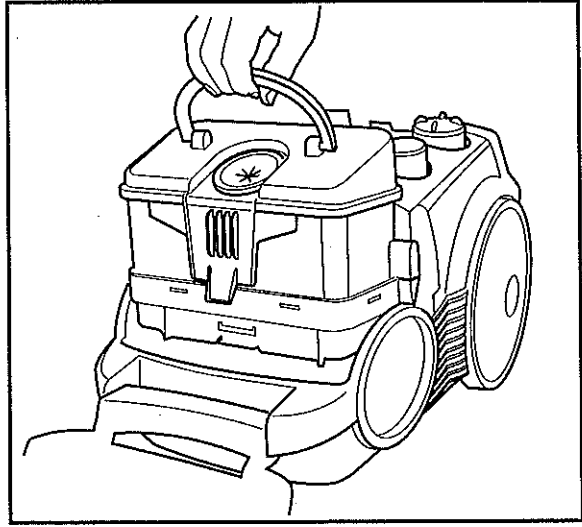


DIAGRAM N

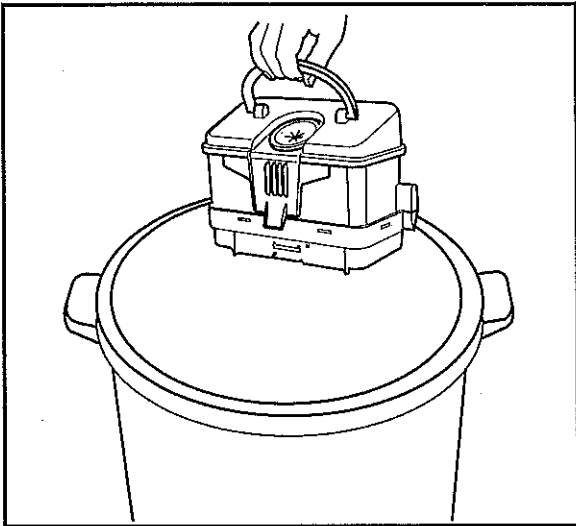


DIAGRAM O

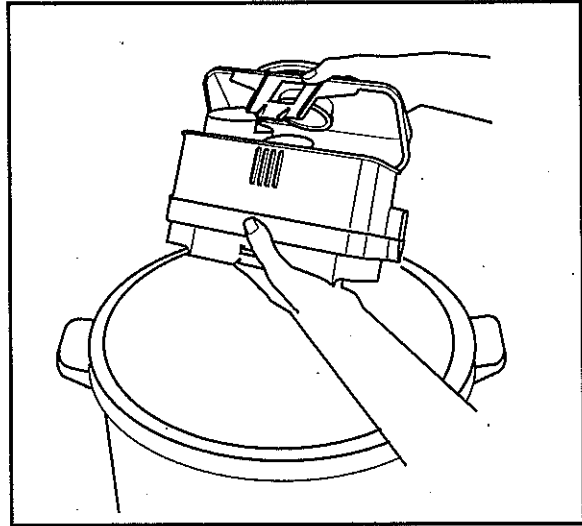


DIAGRAM P

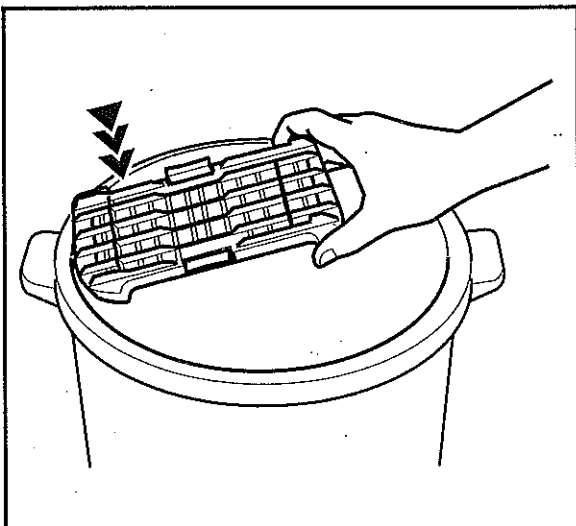


DIAGRAM Q

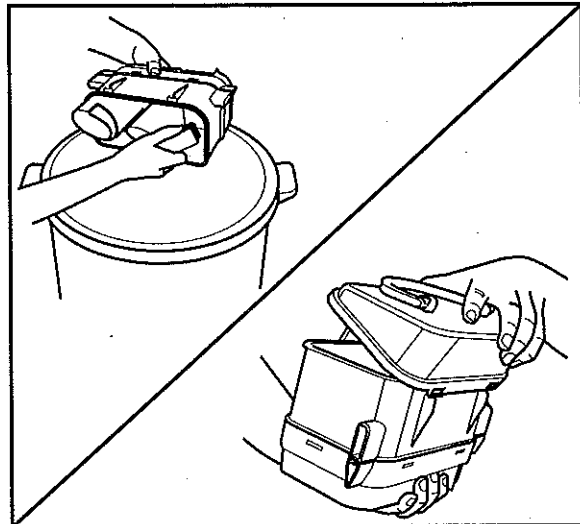


DIAGRAM R

DIAGRAM S

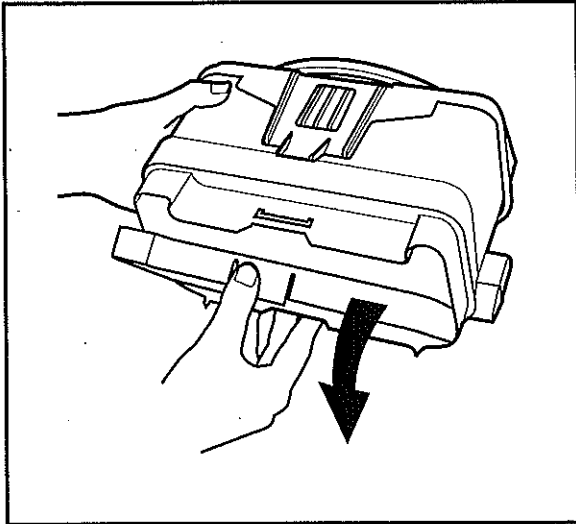


DIAGRAM T

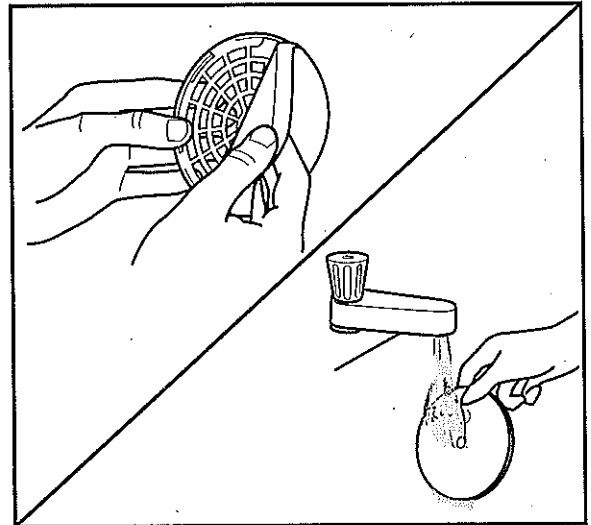


DIAGRAM U

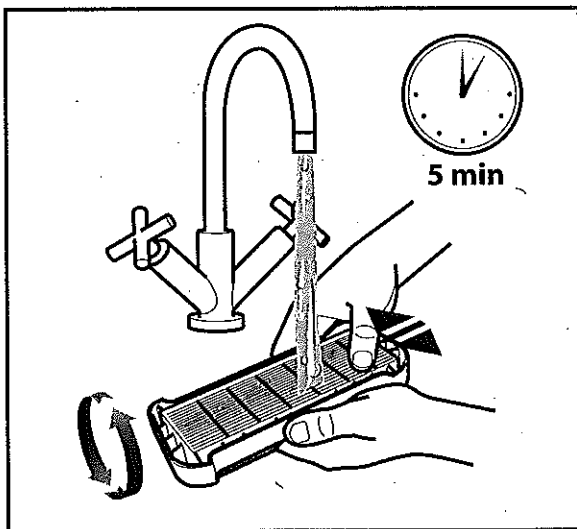


DIAGRAM V

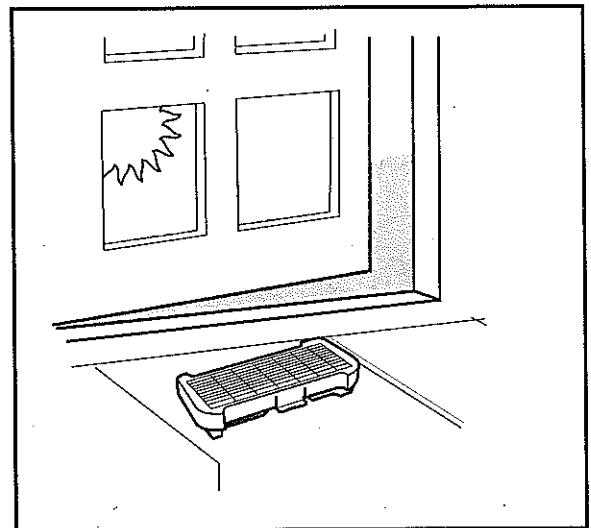


DIAGRAM W

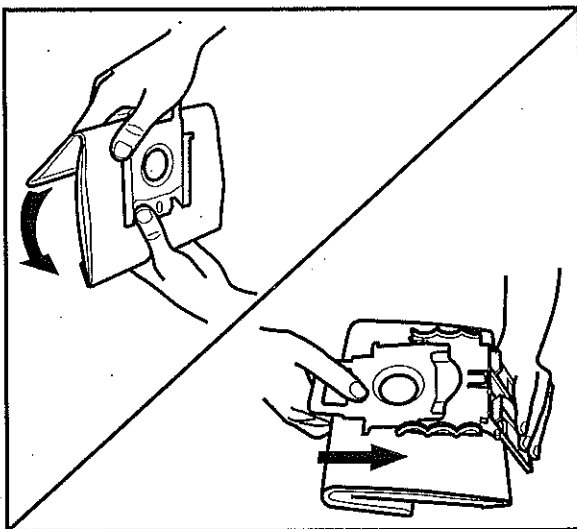


DIAGRAM Y

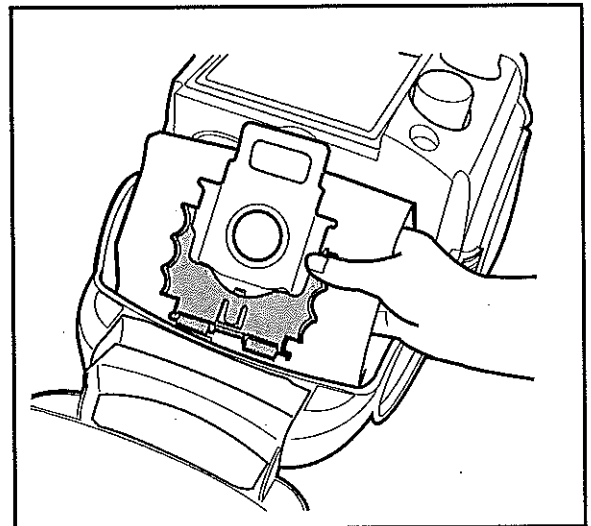


DIAGRAM X

Please read this manual carefully before use.

**Contents:**

Important safety reminders . . . . . 1  
Assembling and getting to know your cleaner. . . . . 2  
Using your cleaner. . . . . 2  
Cleaner maintenance . . . . . 3  
Reverter System . . . . . 4  
Removing blockage . . . . . 4  
Before calling Hoover Check list . . . . . 4  
Accessories . . . . . 5  
Your Guarantee . . . . . 6

**Important safety reminders:**

This cleaner should only be used for domestic cleaning as described in this user guide. Please ensure that this guide is fully understood and kept for reference before operating this appliance.

Warning: - Electricity can be extremely dangerous. This appliance is double insulated, and must not be earthed. This plug is fitted with a 13 Amp fuse. (UK only).

Important: - The wires in the mains lead are coloured in accordance with the following code: -

BLUE – Neutral                      BROWN – Live

Static Electricity: - Some carpets can cause a small build up of static electricity.. Any static discharge is not hazardous to health.

REMEMBER: - After use, switch the cleaner off and remove the plug from the electricity supply. Always switch off and remove the plug before cleaning the appliance or attempting any maintenance.

**DO NOT:**

- Position the cleaner above you when cleaning stairs.
- Use your cleaner out of doors, on wet surfaces or for wet pick-up.
- Pick up matches, hot ash and cigarette ends, hard or sharp objects or anything that may obviously damage the cleaner.
- Spray with or pick up flammable liquids, cleaning fluids, aerosols, or their vapours as they may cause risk of fire / explosion.
- Run over the supply cord whilst using the cleaner or remove the plug by pulling the cord.
- Stand on or wrap the power cord around arms or legs when using the cleaner.
- Continue to use the cleaner if it appears to be faulty. If the supply cord is damaged then stop using the cleaner immediately. The supply cord must be replaced only by an authorised Hoover service engineer to avoid a safety hazard.

TO AVOID SAFETY HAZARDS THE CLEANER MUST ONLY BE REPAIRED BY A HOOVER SERVICE ENGINEER.

## Assembling and getting to know your cleaner

By following this step by step guide your new Hoover Dust Manager will be ready for use:

- Remove the cleaner from the packaging. Please dispose of the bags and other packaging material in a safe and conscientious way.
- Open the top cover (A) ensuring that the Dust Manager Cyclonic Cassette (B), premotor filter (C1) and exhaust filter (C2) are fitted correctly. Close the top cover.
- Insert the hose end into the top cover, ensuring it clips and lock into position (D). To release simply press the two latches and pull.
- Fit the free end of the hose into the handle using the lock ring (E)
- Fit the extension tubes (F1), floor nozzle (F2), and other accessories as required for use.
- Your Dust Manager Cyclonic is now ready for use.

## Using your cleaner

Hoover's unique **Dust Manager Cyclonic Cassette** is the bagless system that separates and collects the dust from the air thanks to its internal centrifugal force thus ensuring maximum hygiene and environment safeguard.

- **On/Off button (G)**. Once plugged in, press this button to start the cleaner. Press it again to stop the cleaner before removing the plug after use.
- **Cord rewind button (H)**. Remove the plug from the power supply. Press this button to wind the power cord back into the cleaner.
- **Electronic Cassette or Bag check indicator (I)**. When active this device flashes a Red light to warn about the following.
  - A.** On all models the device flashes to warn you that the Dust Manager Cyclonic Cassette or the PureHepa bag (depending on your selection) is full and requires emptying (cassette) or replacement (PureHepa bag). Please refer to chapters "Emptying the Dust Manager Cyclonic Cassette" and "Maintaining the Dust Manager Cyclonic Cassette filter" or "Reverter System" and "Maintaining pre-motor and exhaust filter" in case of PureHepa bag mode.
  - B.** If after emptying the Dust Manager Cyclonic Cassette the light is still flashing a blockage has occurred. Please refer to chapter "Removing a blockage from the system".
- **Thermo Protection Switch**. Cleaner automatically switches off. In this event extract the plug from the socket and allow cleaner to cool for 30 minutes. Check if the Dust Manager Cyclonic Cassette needs cleaning or if there is a blockage in the system (see chapter: "Maintaining the Dust Manager Cyclonic Cassette filter" and "Removing a Blockage from the System").
- **Fixed Power Control** (depending on model). The cleaner will operate at a fixed power setting.
- **Variable power control (I)** (depending on model). Rotate the on/off button to increase or decrease suction. Use low suction for delicate fabrics.
- **Carpet and floor nozzle (J)**. Press pedal on the nozzle to lower the brushes when cleaning hard floors. Press the pedal again to lift the brushes when cleaning carpets.
- **Turbo nozzle** (depending on model). Use the Turbo nozzle for deep cleaning on carpets. **IMPORTANT:** do not use Turbo nozzle on rugs with long fringes, animal

hide and over carpet piles with a depth exceeding 15mm. Do not keep the nozzle stationary while the brush is rotating. Also available as an additional accessory. Order Pack No. J22 04845 0591

- **Caresse nozzle** (depending on model). Designed for use on wooden or any delicate floors. Also available as an additional accessory. Order Pack No. G50 0484 5044.
- **Multi function tool**. Tool is stored on the handle (F1). Remove tool and use as:
  - a) Crevice tool: for corners and hard to reach areas (K1).
  - b) Furniture nozzle: for soft furnishings and fabrics (K2).
  - c) Dusting brush (depending on model): for bookshelves, frames, keyboards etc. (K2). The dusting brush can be activated by pressing the side latch and sliding outwards.
- **Tube Parking and Storage (L)**. The tubes can be parked at the rear of the cleaner or stored into the storage slot underneath the cleaner.

## Cleaner maintenance

### Emptying the Dust Manager Cyclonic Cassette

**Check and empty the Dust Manager Cyclonic Cassette regularly, best after each use.**

- Extract the Dust Manager Cyclonic Cassette (M).
- Use the handle to carry the Dust Manager Cyclonic Cassette to the dustbin (N).
- Pull the latch to remove the cover from the Dust Manager Cyclonic Cassette (O).
- Grip the Dust Manager Cyclonic Cassette firmly and tip the contents into the dustbin. Shake the Dust Manager Cyclonic Cassette if required or use a brush to remove any of the remaining dust or debris (P, and Q).
- Wash the Dust Manager Cyclonic Cassette if required. See chapter "Maintaining the Dust Manager Cyclonic Cassette filter".
- To close the Dust Manager Cyclonic Cassette locate the cover rear guides onto the container then close firmly.
- Return the Dust Manager Cyclonic Cassette to its original position in the cleaner.

### Maintaining the Dust Manager Cyclonic Cassette filter

**To maintain the best performance, we recommend that you wash the Dust Manager Cyclonic Cassette filter every month or as soon as you notice a drop in performance removing even the finest dust retained in it.**

- Shake out the Dust Manager Cyclonic Cassette to remove large dirt and debris as described in "Emptying the Dust Manager Cyclonic Cassette."
- Brush the inside of the Dust Manager Cyclonic Cassette to remove the fine dust that may have formed on the walls of the Dust Manager Cyclonic Cassette (Q).
- Push the latches to remove the bottom filter grill (S).
- Tap filter against bin until fine dust is removed .
- Rinse filter under lukewarm water and agitate inner pleats, ensuring both sides are cleaned.
- Remove excess water with a dry cloth and leave to air dry for 24 hours or until fully dry.

**IMPORTANT: DO NOT USE THE CLEANER WHEN FILTER NOT COMPLETELY DRY.**

- After completing the washing and drying operations, locate the filter in its original position. Return the Dust Manager Cyclonic Cassette to its original position.



## Reverter System - how to change from Dust Manager Cyclonic Cassette to PureHepa bag mode

Depending on your preference and environment, you may wish to use this cleaner with the Hoover exclusive PureHepa bag instead of the Dust Manager Cyclonic cassette.

- Switch the cleaner off and remove the plug from the electricity supply.
- Open cover, grip Dust Manager Cyclonic Cassette handle and pull upward to remove it (M).
- Fold and fit the PureHepa bag into the bag holder which is provided with the cleaner (W). Insert the bag collar into the location grooves ensuring that the bag collar is fully located (X)
- Place the bag holder in the correct locations and close the cover (Y).

When full, please dispose of the bag immediately

- Open cover, grip the bag holder and pull upward to remove.
- Pull the tongue to remove and seal the bag. Dispose the full bag into the bin.
- **Only use Hoover genuine PureHepa bags.**

## Maintaining pre-motor and exhaust filter

To maintain best performance we recommend that you wash the filters in the cleaner at least every month.

- To access the filters please refer to diagram (C1, 2).
- Rinse both filters under hand warm water (T, and U).
- Do not scrub the filters, use washing up liquid or place in a dishwasher.
- Remove excess water with a dry cloth and leave to air dry for 24 hours or until fully dry (V).
- After completing the washing and drying operations, locate the filters in their original positions in the cleaner.

## Removing a blockage from the system

If there is a noticeable drop in the performance see the following 2 points:

- 1) Check if the Dust Manager Cyclonic Cassette is full (If so refer to chapter "Emptying the Dust Manager Cyclonic Cassette".
- 2) If not full then:
  - a) Have you cleaned the Dust Manager Cyclonic Cassette filters recently? If not please refer to the chapter "Maintaining the Dust Manager Cyclonic Cassette filter".
  - b) Check if there is any other blockage in the system.
    - Use a rod or pole to remove any blockage from the tubes and flexible hose.
    - It may also be possible to remove an obstruction in the flexible hose by lightly squeezing or bending it.
    - Check and clean if required the underside of the nozzle by using the crevice tool.

## Simple user check list before calling for service

- 1) Is there a working electricity supply to the cleaner? Check with another appliance.
- 2) Is there a restriction?
  - a) Is the Cyclonic Cassette full? Please refer to the chapter "Emptying the Dust Manager Cyclonic Cassette".
  - b) Are the filters or Dust Manager Cyclonic Cassette blocked? Please refer to chapter "Maintaining the Dust Manager Cyclonic Cassette filter".

- c) Is the hose or nozzle blocked? Please refer to chapter "Removing a Blockage from the System".
- 3) Has the cleaner automatically switched off? In this case the Thermo Protection System has been activated. Please refer to chapter "Using Your Cleaner", paragraph "Thermo Protection Switch".

### **Please remember that:**

- 1) Some carpets can cause a small build up of static electricity. Any static discharge is not hazardous to health or the product.
- 2) A service charge will be made if the cleaner is examined and found in working order, has not been assembled in accordance with these instructions, or has been misused.

### **DO**

- Call Hoover Customer Help Line 08705 400 600 in the event of dissatisfaction.
- Ensure that all service and repairs are carried out by an authorised Hoover Service Engineer.
- Only use genuine Hoover parts.
- Empty the Dust Manager Cyclonic Cassette regularly. Best after each use.
- Always switch off and remove the power plug from the electricity supply after use and before cleaning the appliance or attempting user maintenance as described in these instructions.
- **Remember: Electricity can be dangerous.**

**ACCESSORIES:** For accessories please quote the following pack numbers

- Turbo Nozzle pack No. J22 04845 0591
- Caresse Nozzle pack No. G50 0484 5044
- PureHepa bag pack No. H52 09192402 or H60 35600392

Any questions you may have, please call:

Hoover Help Line 08705 400 600

Hoover Spares 01204 556 111

## **Safety and the environment**

As the owner of a new Hoover product we would like to tell you more about the high standards we have set in safety and the environment:

### **Safety**


Although safety certification is not required by law in the UK, Hoover believe that independent approval is the best way of demonstrating safety in design and manufacture. The British Electro technical Approvals Board (BEAB), the independent UK national authority for the safety of domestic appliances, ensure that European safety standards are met and maintained throughout the production life of the appliance. All appliances, which pass these tests are permitted to carry the BEAB safety mark.

### **The Environment**

Hoover has made a long-term commitment, in all its activities, to safeguarding the environment. Our environmental policy states: "To adopt the best practicable environmental methods in design, production, packaging, use and disposal of products, whilst continuing to improve benefits to the consumer".

The majority of materials used in the appliance are recyclable. Please use the best available disposable method to take advantage of this feature.

**GB**

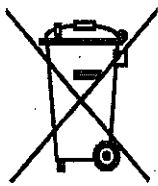

This appliance is marked according to the European directive 2002/96/EC on Waste Electrical and Electronic Equipment (WEEE). By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. The symbol on the product indicates that this product may not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. Disposal must be carried out in accordance with local environmental regulations for waste disposal. For more detailed information about treatment, recovery and recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

**ISO9001**

BEAB Approved

**Quality:** Our factories meet the strict quality standards of BEAB - the British Electrotechnical Approvals Board - that ensures European safety standards are met and maintained throughout the production life of an appliance.

**Safety:** We gain independent approval from BEAB to demonstrate that our domestic electrical appliances are safe.



Hoover Limited  
Pentrebach  
Merthyr Tydfil  
Mid Glamorgan  
CF48 4TU

Part Number: 0565-5203