

# HOOVER

 
 
 
 
 
## FREEMOTION

 
 
 
 
 
### User Instructions

ENGLISH	GB
FRANÇAIS	FR
DEUTSCH	DE
ITALIANO	IT
NEDERLANDS	NL
PORTUGUES	PT
ESPAÑOL	ES
DANSK	DK
NORSK	NO
SVENSKA	SE
SUOMI	FI
ΕΛΛΗΝΙΚΑ	GR
РУССКИЙ	RU
POLSKI	PL
ČESKY	CZ
SLOVENČINA	SL



GENERATION FUTURE

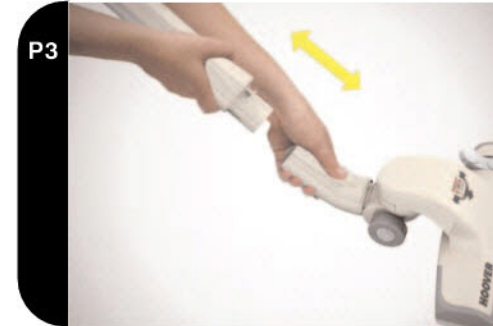

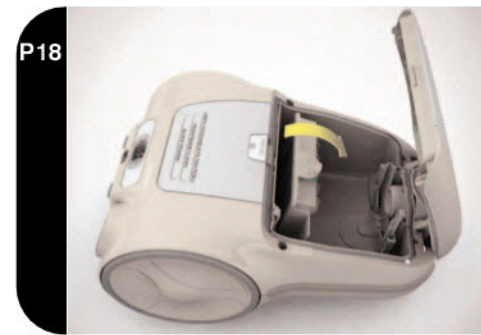



**HOOVER FREEMOTION USER GUIDE**

Contents

Important Safety Reminders.....4  
 It is important that you do not.....4  
 Assembling Your Cleaner .....4  
 Using your cleaner .....4  
 Cleaner Maintenance .....5  
 Accessories .....5  
 User Checklist.....5  
 Important Information .....6  
 Your guarantee .....6

**IMPORTANT SAFETY REMINDERS:**

This cleaner should only be used for domestic cleaning, as described in this User Guide. Please ensure that this guide is fully understood before operating the appliance.

**Warning:** Electricity can be extremely dangerous. This appliance is double insulated, and must not be earthed. This plug is fitted with a 13 amp. fuse. (UK Only).

**Important:** The wires in the mains power lead are coloured in accordance with the following code:  
 Blue - Neutral                      Brown - Live

**Static Electricity:** Some carpets can cause a small build up of static electricity. Any static electricity discharge is not hazardous to health.

**Remember:** After use, switch the cleaner off, and remove the plug from the electricity supply. Always switch off and remove the plug before cleaning the appliance or attempting any maintenance.

**IT IS IMPORTANT THAT YOU DO NOT:**

- Position the cleaner above you when cleaning the stairs
- Use the cleaner out of doors, on wet surfaces, or for wet pickup
- Pick up matches, hot ash, cigarette ends, hard or sharp objects or anything that may damage the cleaner
- Spray with, or pick up flammable liquids, cleaning fluids, aerosols, or their vapours, as this may cause risk of fire/explosion
- Run over the supply cord whilst using the cleaner, or remove the plug by pulling on the cord
- Stand on, or wrap the power cord around arms or legs when using the cleaner
- Continue to use your cleaner if it appears to be faulty. If the supply cord is damaged, stop using the cleaner IMMEDIATELY: to avoid a safety hazard, an authorised Hoover Service engineer must replace the supply cord

**ASSEMBLING YOUR CLEANER:**

- Connect hose to cleaner main body, as shown in P1
- Connect tube upper end to handle, as shown on P2
- Connect floor nozzle to lower tube end, as shown in P3

**USING YOUR CLEANER:**

1. Power Supply - Extract cord fully and plug it into a power supply (P4).
2. Navigator System - For outstanding ease of use, grip the handle as shown (P5). Pull the TeleZoom trigger to adjust the length of the metal tubes and find the most comfortable cleaning position (P5).
3. Front&Side Clean nozzle - Press the pedal on the nozzle (P6) to select the ideal cleaning mode for the floor type.  
 Hard Floor: The brushes are lowered to protect the floor  
 Carpet: With lifted brushes for the deepest clean  
 The Front and Side Clean nozzle rotates each way (P7) to reach into the narrowest spaces. Tip one end of the nozzle to bring it back to normal working position.
4. Turn the cleaner on - Depending on model this is achieved by:
  - Pressing the On/Off button on the Navigator System handle (P8)
  - Pushing the power control slider on the cleaner body (P9)
  - Pushing the On/Off button on the cleaner body (P10)
5. Adjust the power setting - Depending on model this is achieved by:
  - Selecting the cleaning programme in the Navigator handle (P12)
  - Sliding the power control to suit the surface to be cleaned (P11)
6. Switch off at the end of use by reversing the action to switch on. Unplug then gently pull the power cord out of the cleaner (P4) and the cord will then begin to automatically retract back into the cleaner.
7. Parking and Storage - The tube can be parked for temporary storage while in use (P13), or in the storage position when not in use (P14).

Please Read Carefully Before Use

#### CLEANER MAINTENANCE:

**Replacing The Dust Bag** - If the bag check indicator flashes please check and, if necessary, replace the bag (P15).

1. Press the button (P16) to open the cover and pull the bag collar to remove the bag. The full dust bag should be disposed of correctly and carefully (P17).
2. Fold a new bag as shown on the bag and fit by inserting the collar into the bag holder (P17).
3. Close the cover.

Remember: The bag check indicator may also flash if an obstruction has occurred. In this case refer to 'Removing A Blockage From the System'.

**Cleaning the Lifetime Washable Filter** - To maintain optimum performance of your cleaner, please wash the Pre-Motor filter after each 5 bag changes.

Remove the Pre-Motor filter (P18). Wash it in hand warm water, and allow it to dry thoroughly before replacing to the cleaner.

Remember: Do not use hot water or detergents. In the unlikely event of the filters becoming damaged, fit a Genuine Hoover replacement. Do not try and use the product without a dust bag or filter fitted.

**Removing a Blockage From The System** - If the bag check indicator is illuminated or flashing (P15):

1. Check if the bag is full. If so refer to 'Replacing The Dust Bag'.
2. If it is not full, then;
  - a. Do the filters need cleaning? If so refer to 'Cleaning the Lifetime Washable Filter'.
  - b. Check if there is any other blockage in the system - Use a rod or a pole to remove any blockage from the Teletube or flexible hose.

**Warning** - The bag check indicator will flash intermittently if the cleaner is used when full, if there is a blockage or if the filters are dirty. If the cleaner is used for a significant period of time with the bag check indicator continuously flashing, a thermal cut out will switch the cleaner off to prevent overheating. The bag check indicator will remain lit once the cleaner has switched off to signal that the thermal cut out has been activated. If this should happen, then switch the cleaner off, unplug and correct the fault. It will take about 30 minutes for the cut out to automatically reset.

#### ACCESSORIES:

Please see model specification on packaging label for inclusion of accessories to individual models. However all accessories can be purchased separately from Hoover.

**3 in 1 Tool** - Combines several functions in one, with maximum flexibility by the rotating body. Reach into awkward areas by rotating the body (P19 and 20). The 3 in 1 tool can be stored neatly underneath the hose handle (P22).

- **Crevice Tool:** for corners and hard to reach areas. The length can be adjusted by pulling on the end. Once finished, push to retract (P21)
- **Furniture Nozzle** for soft furnishings and fabrics (P23)
- **Dusting Brush** for bookshelves, frames, keyboards and other delicate areas (P23). To extend the brushes push the button on the body of the tool

**Allergen Remover Turbo Nozzle** - Use the Turbo Nozzle for deep cleaning on carpets. Important: Do not use the Turbo Nozzle on rugs with long fringes, animal hide, and with carpet piles deeper than 15mm. Do not keep the nozzle stationary while the brush is rotating (P24).

**Allergen Remover Mini Turbo Nozzle** - Use the mini turbo nozzle for cleaning stairs and other hard to clean areas (P25).

#### USER CHECKLIST:

Should you have a problem with the product, complete this simple user checklist before calling your local Hoover Service.

- Is there a working electricity supply to the cleaner? Please check with another electrical appliance
- Is the dust bag over-filled? Please refer to 'Cleaner Maintenance'
- Is the Filter blocked? Please refer to 'Cleaning the lifetime washable filter'
- Is the hose or nozzle blocked? Please refer to 'Removing a blockage from the system'
- Has the cleaner overheated? If so, it will take approximately 30 minutes to automatically reset

Please Read Carefully Before Use

**IMPORTANT INFORMATION:**

**Genuine Hoover Spares and Consumables**

Always replace parts with Genuine Hoover spares and consumables. These are available from your local Hoover Dealer or direct from Hoover.

Please ask for:

- Pack of new bags: H60
- HEPA Pre-Motor Filter: S81
- Front and Side Nozzle: G83
- Front and Side Caresse Nozzle: G84
- Allergen Remover Turbonozzle: J24
- Allergen Remover Miniturbonozzle: J25

**Hoover Service**

Should you require service at any time, please call your local Hoover Service office.

**Safety and the Environment**

As the owner of a new Hoover product we would like to tell you about the high standards we have set in safety and the environment.

**Safety:**

Although safety certification of electrical appliances is not required by law in the UK, Hoover believe that independent approval is the best way of demonstrating safety in design and manufacture. The British Electrotechnical Approvals Board (BEAB), the independent UK national authority for the safety of domestic electrical appliances, ensures that European safety standards are met and maintained throughout the production life of an appliance. All appliances that pass the requirements are permitted to carry the BEAB mark of safety.

**The Environment:**

This appliance is marked according to the European Directive 2002/96/EC on Waste Electrical and Electronic Equipment (WEEE).

By ensuring this product is disposed of correctly you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product.

The symbol of the product indicates that this product may not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment.

Disposal must be carried out in accordance with the local environmental regulations for waste disposal.

For more detailed information about treatment, recovery and recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

**Your Guarantee:**

The guarantee conditions for this appliance are as defined by our representative in the country in which it is sold. Details regarding these conditions can be obtained from the dealer from whom it was purchased. The bill of sale or receipt must be produced when making any claim under the terms of this guarantee. Subject to change with out notice.



**HOOVER**  
FREEMOTION



Please Read Carefully Before Use