

# HOOVER

## FREESPACE Cyclonic



### User Instructions

ENGLISH	GB
FRANÇAIS	FR
DEUTSCH	DE
ITALIANO	IT
NEDERLANDS	NL
PORTUGUES	PT
ESPAÑOL	ES
DANSK	DK
NORSK	NO
SVENSKA	SE
SUOMI	FI
ΕΛΛΗΝΙΚΑ	GR
РУССКИЙ	RU
POLSKI	PL
ČESKY	CZ
SLOVENČINA	SL



GENERATION FUTURE









### IMPORTANT SAFETY REMINDERS:

This cleaner should only be used for domestic cleaning, as described in this User Guide. Please ensure that this guide is fully understood before operating the appliance.

**Warning:** Electricity can be extremely dangerous. This appliance is double insulated and must not be earthed. This plug is fitted with a 13 amp fuse (UK Only).

**Important:** The wires in the mains power lead are coloured in accordance with the following code:

Blue - Neutral

Brown - Live

**Static electricity:** Some carpets can cause a small build up of static electricity. Any static electricity discharge is not hazardous to health.

**Remember:** After use, switch the cleaner off and remove the plug from the electricity supply. Always switch off and remove the plug before cleaning the appliance or attempting any maintenance.

**Safety with children, elderly or the infirm:** Do not let children play with the appliance or its controls. Please supervise the use of the appliance by older children, the elderly or the infirm.

### IT IS IMPORTANT THAT YOU DO NOT

- Position the cleaner above you when cleaning the stairs.
- Use the cleaner out of doors on wet surfaces or for wet pickup.
- Pick up matches, hot ash, cigarette ends, hard or sharp objects or anything that may damage the cleaner.
- Spray with or pick up flammable liquids, cleaning fluids, aerosols or their vapours as this may cause risk of fire/explosion.
- Run over the supply cord whilst using the cleaner or remove the plug by pulling on the cord.
- Stand on or wrap the power cord around arms or legs when using the cleaner.
- Continue to use your cleaner if it appears to be faulty. If the supply cord is damaged, stop using the cleaner IMMEDIATELY. To avoid a hazard, an authorised Hoover service engineer must replace the supply cord.
- Remove the cyclonic cassette before removing the hose from the cleaner.
- Use the appliance to clean people or animals.



## ASSEMBLING YOUR CLEANER

Remove the cleaner and accessories from their packaging. Please dispose of the packaging material in a safe and conscientious way.

Insert the hose end into the cleaner, ensuring it clips and locks into position. To release: simply press the two buttons on the hose end and pull (P1).

Fit the hose/handle and floor nozzle onto opposite ends of the telescopic tube (P2 & P3). The accessory tools can be stored on the tool holder fixed to the telescopic tube (P3).

## USING YOUR CLEANER

**Power supply** - Pull cord and plug into power supply (P4). Please make sure the cord is fully extended before using the cleaner. Press the on/off pedal once to start the cleaner (P5). Press it again to stop the cleaner before removing the plug after use. Press the cord rewind button to wind the power cord back into the cleaner (P6).

**Fixed power control (depending on model)** - Adjust the suction by moving the handle valve: suction will decrease when opening the valve (P7). Use low suction for delicate fabrics.

**Variable power control (depending on model)** - Slide the variable power adjuster to increase or decrease the suction (P8). Use low suction for delicate fabrics.

**Telescopic Tritube** – The telescopic Tritube can be extended or collapsed by pressing the latches forward and pulling or pushing the tubes to the desired length (P9).

**Carpet & Floor Nozzle** - Press pedal on the nozzle to lower the brush head when cleaning hard floors (P10). Press the pedal again to lift the brush head when cleaning carpets.

**Mini Turbo Nozzle (depending on model)** - Use the mini turbo nozzle (P11) for deep cleaning on textile surfaces. Important: do not use the Mini Turbo Nozzle on rugs with long fringes, animal hide and with carpet piles deeper than 15mm. Do not keep the nozzle stationary while the brush is rotating.

**Multifunction Tool** - (P12) This tool can be used as:

1. Crevice tool: for corners and hard to reach areas
2. Dusting brush: for bookshelves, frames, keyboards etc.



**Furniture Nozzle (depending on model)** - For soft furnishings and fabrics (P12).

**Parking and storage** - The telescopic Tritube can be parked for temporary storage during cleaning or in the storage position when not in use (P13 & P14).

**Nanopack Storage System** - The unique Nanopack Storage System allows the cleaner to be stored in an ultra compact configuration with a significantly smaller storage volume than other cleaners.

To store the cleaner using the Nanopack system:

1. Detach the floor nozzle and hose handle from the Tritube then collapse the Tritube to its minimum storage length (see 'Telescopic Tritube').
2. Position the cleaner in the upright position and slot the tool storage bracket on the Tritube into the recess located on the base of the cleaner (P15).
3. Wrap the hose around the product before fitting the hose handle and floor nozzle into the locations provided on the tool storage bracket (P16).

#### CLEANER MAINTENANCE

**Emptying the cyclonic cassette** - Please empty the cassette after each use of the cleaner or if the cassette-check indicator is illuminated (P17).

1. Remove the hose from the cleaner (P1).
2. Press buttons on handle (P18) and lift cyclonic cassette out of the cleaner (P19).
3. Hold the cassette upside down so that the filter panel faces upwards. Unlatch the filter panel and open the cassette (P20). Carefully tip the contents of the cassette into a bin.
4. Use the brush nozzle when necessary, to remove excessive dust from the internal surface of the cassette.
5. Close the cassette door. Re-fit Freespace cyclonic cassette into the cleaner and push down on the cassette to secure.

**Important:** The hose must be removed before removing or replacing the cyclonic cassette.

**Remember:** The cassette check indicator will also illuminate if an obstruction has occurred. In this case refer to the section "Removing a blockage from the system".

**IMPORTANT: Cleaning the washable filters** - To maintain optimum performance please tap and, if necessary, wash the cyclonic cassette hepa filter and exhaust filter after 5 cassette empties using handwarm water. Remove excess water from the filters with a dry cloth and leave to dry fully before replacing.

**Important:** Do not use hot water or detergents. In the unlikely event of the filters becoming damaged, fit a genuine Hoover replacement. Do not try and use the product without the cassette or filters fitted.



To remove the cyclonic cassette Hepa filter:

1. Remove the cyclonic cassette (see Emptying the cyclonic cassette).
2. Unlatch then unhinge the filter panel from the bottom of the cyclonic cassette (21).
3. Press the release latch on the blue filter frame to unlock the hepa filter from the filter panel (P22).
4. Remove the washable hepa filter.

To remove the Purefilt filter:

1. Unlatch and remove exhaust filter cover (P23)
2. Remove the washable exhaust filter.

**Removing a blockage from the system** - If the check indicator is illuminated:

- " Check if the cassette is full. If so refer to 'Emptying the cyclonic cassette'.
- " If the cassette is empty but the indicator is illuminated:
  1. Do the filters need cleaning? If so refer to 'Cleaning the washable filters'.
  2. Check if there is any other blockage in the system - Use a rod or pole to remove any blockage from the extension tube or flexible hose.

**Warning** -The cassette check indicator will remain illuminated if the cleaner is used when the cassette is full, if there is a blockage or if the filters are dirty. If used for a period of over ten minutes with the cassette check indicator illuminated, an electronic cut out will switch the cleaner off to prevent any risk of overheating. If this should happen, switch the cleaner off, unplug and correct the fault (see ' Removing a blockage from the system'). The cut out will automatically reset upon switching the cleaner back on.

#### USER CHECKLIST

Should you have a problem with the product, complete this simple user checklist before calling your local Hoover service.

- Is there a working electricity supply to the cleaner? Please check with another electrical appliance.
- Is the cyclonic cassette over-filled? Please refer to 'Cleaner Maintenance'.
- Is the filter blocked? Please refer to 'Cleaner Maintenance'.
- Is the hose or nozzle blocked? Please refer to 'Removing a blockage from the system'.



#### IMPORTANT INFORMATION

**Genuine Hoover Spares and Consumables** - Always replace parts with Genuine Hoover Accessories and Consumables. These are available from your local Hoover Dealer or you can buy original Hoover consumable spares online at [www.HOOVER.CO.UK](http://www.HOOVER.CO.UK) or call 01204 556111:

Cyclonic Cassette Hepa Filter: T90 - pack number 35600636

Purefilt Exhaust Filter: T87 - pack number 35600541

Mini Turbo Nozzle: J26 - pack number 35600543

Flexible Hose: D95 - pack number 35600544

C&F Nozzle: G85- pack number 35600545

Caresse Nozzle: G81-pack number 35600391

Should you require service at any time, please call your local Hoover Service office.

#### The Environment

This appliance is marked according to the European Directive 2002/96/EC on Waste Electrical Electronic Equipment (WEEE).

By ensuring this product is disposed of correctly you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product.

The symbol on the product indicates that this product may not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment.

Disposal must be carried out in accordance with local environmental regulations for waste disposal.

For more detailed information about treatment, recovery and recycling of this product, please contact your local city office, your household waste disposal service or shop where you purchased the product.

#### Guarantee

The guarantee conditions for this appliance are as defined by our representative in the country in which it was sold. Details regarding these conditions can be obtained from the dealer from whom it was purchased. The bill of sale or receipt must be produced when making any claim under the terms of this guarantee. Subject to change without notice.