

## COMBINED FROST FREE


### CONTROL PANEL

Open the top door of the fridge in order to access the control panel.

#### SWITCHING THE PRODUCT ON AND OFF


The product is electronically powered by connecting the power cable to the power outlet and remains powered on until cable is removed.

When " - " is displayed on the digital controls, it indicates that the product is in stand-by mode, therefore it is connected to the power outlet but it is not working. To switch the appliance on, press the MODE button. To turn the product to standby mode, press the MODE button for a few seconds. When the product is in standby mode, any food in your fridge or freezer will not be cooled.

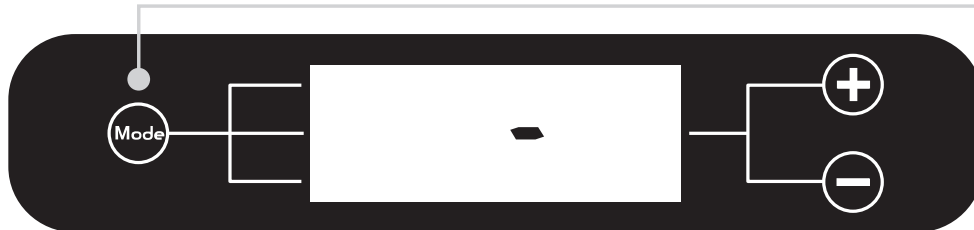

(Figure 1)

Once the plug has been connected, the product will show the recommended temperature for the fridge compartment on the display +5°C. For the freezer compartment, the product will automatically switch to the recommended temperature of -18°C.

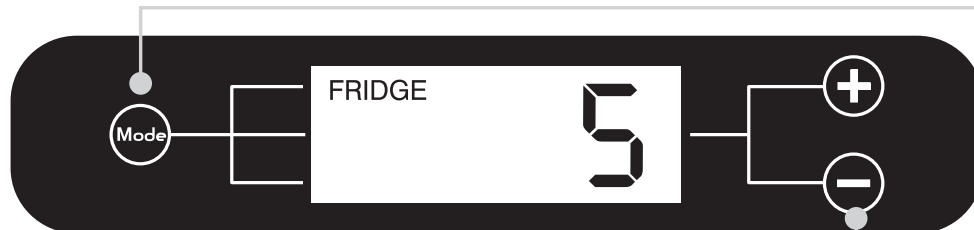


#### SETTING THE TEMPERATURE OF THE FRIDGE COMPARTMENT

It is possible to modify the temperature by pressing the buttons (+) and (-). The maximum temperature is 7, and the minimum is 1. The manufacturer's recommended temperature is 5.

When the temperature of the fridge compartment is being set, the word FRIDGE flashes.

#### SETTING THE TEMPERATURE OF THE FREEZER COMPARTMENT

It is possible to switch from Fridge to Freezer mode by pressing the MODE button. The word FREEZER will now be displayed. Subsequently, the recommended temperature -18 will be displayed. It is possible to modify the temperature from -16°C to -22°C.

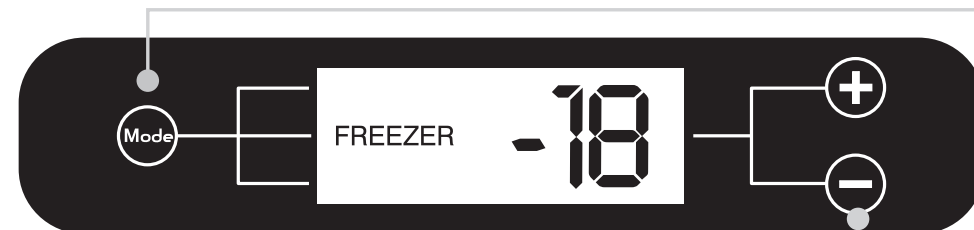


(Figure 2)

To modify the temperature, press the buttons (+) and (-) until you reach the desired temperature.

## FREEZING / SUPER OPTION

The SUPER option can be selected for fast freezing food items. Ideal to use when a large amount of food has been added to your freezer.

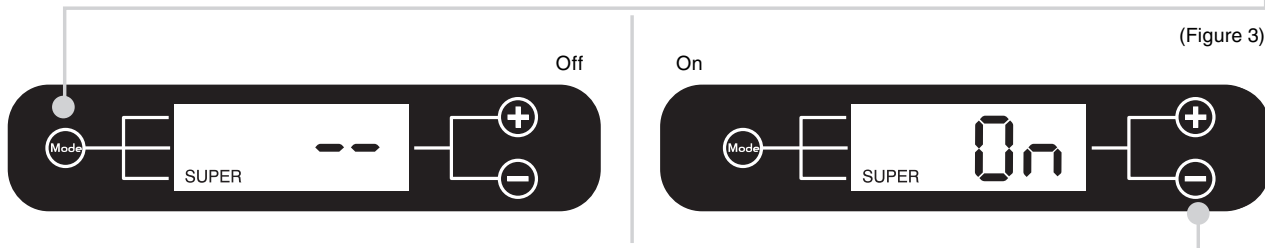

(Figure 3)

Press the (+) button in order to activate the SUPER function. After 36 hours the product will automatically leave the SUPER function, if you wish to interrupt the SUPER function at anytime press the (-) button. For optimum usage the manufacturer recommends that the super freeze function is activated a few hours before putting the selected food items in the freezer. The rating plate states the maximum quantity of foods that can be frozen, (see figure 6).

## FAULTS AND ERRORS

Every error or fault that occurs will be automatically shown on the display which will indicate a number followed by the letter "E" (Error). If this occurs switch the product off and back on again, if the error persists, please contact for technical assistance.




(figure 4)

In the event of a power failure the message "PF" (Power Fail) will be shown on the display once power is returned to the machine. In case of a power cut lasting 10-12 hours, check that the food items have remained unchanged. Any food that has been fully or partially defrosted needs to be consumed within 24 hours and NOT refrozen.



(figure 5)

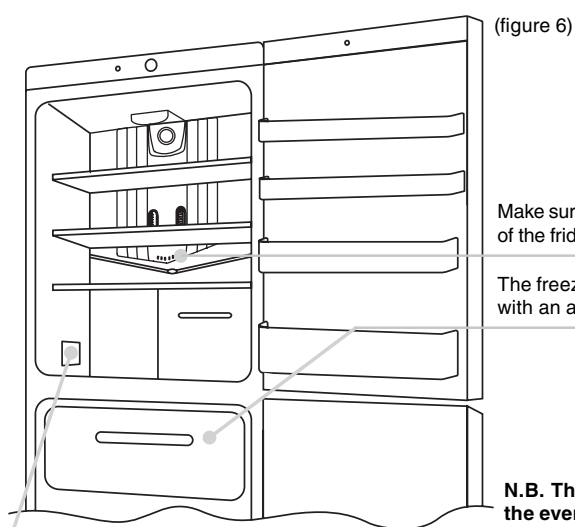

(figure 6)

Make sure the water outlet is always clean. Make sure foods do not touch the back or sides of the fridge compartment.

The freezer compartment does not require defrosting because this product is equipped with an automatic system that prevents the formation of ice (frost free).

**N.B. This is the rating plate. If you need to contact our Service Department in the event of faults. Please remember to give them the information on the plate.**

## A SPACE IS NEEDED BETWEEN „GENERAL“ AND „RECOMMENDATIONS“

This appliance is only intended for storing foods. Any other use is considered hazardous and the manufacturer may not be held liable for any damages.

**Conformity declaration:** the parts of this appliance intended to come into contact with foodstuffs conform to the directive 89/109/EEC and the Italian Law decree no. 108 of 25/01/92 implementing this directive.

CE Appliance conforming to the European directives 89/336/EEC and 73/23/EEC and subsequent amendments.

The dealer shall be notified of any damage within 7 days from purchasing the appliance.

We also recommend you read the terms of the warranty.



This appliance is marked according to the European directive 2002/96/EC on Waste Electrical and Electronic Equipment (WEEE).

By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product.

The symbol on the product indicates that this product may not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment.

Disposal must be carried out in accordance with local environmental regulations for waste disposal.

For more detailed information about treatment, recovery and recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

Leave the power plug accessible even after the installation of the apparatus.


Do not use electrical devices inside the food compartments, except for the ones equipped with the apparatus or available from our service centres.

Before plugging in the appliance, make sure the voltage on the rating plate is the same as the voltage in your home. The rating plate is inside the appliance, in the bottom left-hand corner of the fridge compartment.

The manufacturer may not be held liable for any damage caused by unearthen wiring systems.

After you have installed the fridge, wait for at least two hours before turning it on.

To ensure your appliance works as efficiently as possible, leave at least a 5 cm gap between the fridge and the wall and between the fridge and items behind or above it (see diagram below).

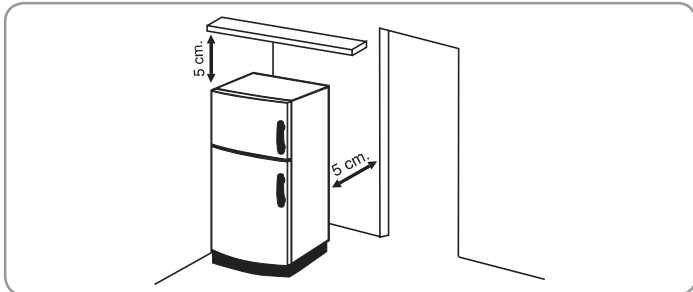


### What to avoid...

Do not install the fridge close to sources of heat.

Do not alter plugs or use adapter plugs or extension leads.

If you have purchased a stainless steel fridge, it will have a peel-off film protecting the surface. Do not use sharp implements to remove the film, as these could damage the steel.

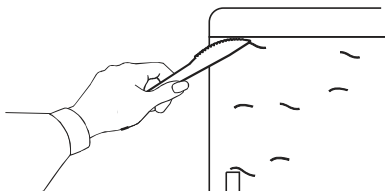

Do not install the appliance outside.

The appliance works properly at the following temperature ranges:

Climatic class: SN +10 +32°C


Climatic class: N +16 +32°C

Climatic class: ST +18 +38°C

Climatic class: T +18 +43°C

Climatic class: N/ST +16 +38°C

(See appliance's rating plate)

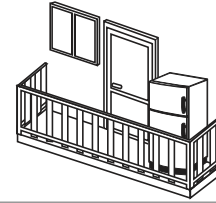


### RECOMMENDATIONS

We recommend the following, for greater energy saving:


- Do not put hot foods in the fridge.
- Do not pack foods close together as this prevents air circulating.
- Make sure foods do not touch the back of the fridge.
- If the electricity goes off, do not open the fridge door.

The fridge **makes some noises when working**. This is entirely normal and you might hear HUMMING, GURGLING, RUSTLING AND WHISTLING, as well as slight CLICKING OR JUMPING noises.


Adjust the feet to level the appliance.

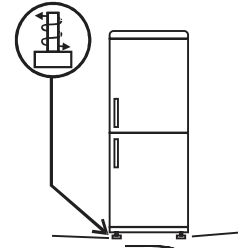


Make sure glass containers do not touch in the appliances.

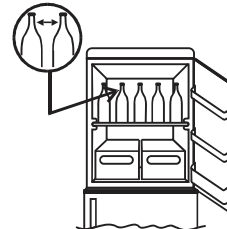

Install the fridge leaving a gap between it and other furniture or appliances.

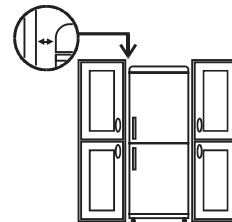

Make sure accessories are installed properly.

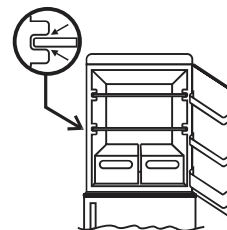

If you have followed the instructions, but your product continues to make irritating noises, other than those resulting from a normal functioning, please contact the technical support service.

## MAINTENANCE

Proper maintenance will ensure a long life for your appliance.

Remember to remove the plug before you clean/defrost the fridge, change the fridge light bulb, etc.

### Cleaning

Clean the outside of the fridge at regular intervals with a damp cloth. Use a solution of bicarbonate of soda and water to clean the inside. Do not use abrasive products.

An outlet for draining water is located in the middle of the back of the fridge. Make sure this outlet is not obstructed; clean regularly.

### Defrosting


It is recommended to defrost the refrigerator each time an excessive layer of frost is formed, then leave the doors open with the apparatus switched off and avoid using sharp or mechanical objects (knives, scissors, etc) to remove the ice from the internal parts, in order to avoid damaging the refrigerating circuit.

NOTE: a small amount of ice on the back of the fridge compartment is normal.


### Replacing the fridge light bulb

To replace the light bulb in the fridge compartment:


Adjust the thermostat to „0“ and remove the plug from the socket.

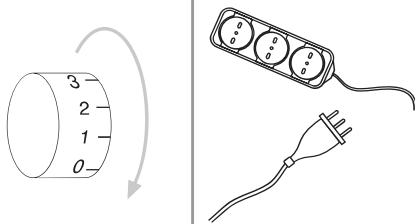


Use a flat screwdriver to lift up the grid and remove the see-through cover

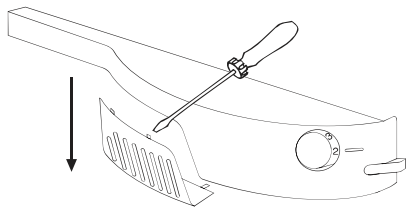

 Remove the light bulb and replace with the same type and same watt bulb.




Re-fit the cover and plug in the appliance.

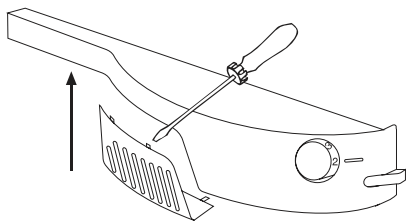

## STORING AND FREEZING FOODS

To make sure foods retain their flavour and substance and stay fresh, store them in the fridge compartment as shown in the figure below. Wrap foods in tin foil or cling film or put them in closed containers.

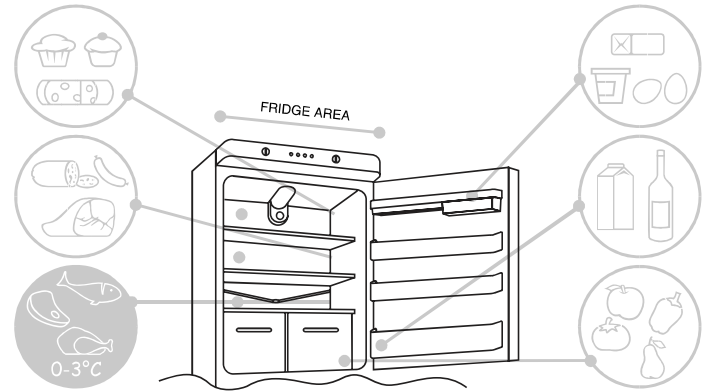

Frozen foods can be stored for approximately one month in compartments **\*\* \***

See the table for storing foods in **\* \*\* \*** compartments

Foods can only be frozen in **\* \*\* \*** compartments

2-3 MONTHS			
4-6 MONTHS			
6-8 MONTHS			
10-12 MONTHS			

## Trouble-shooting

Please contact our service department if you have any difficulties. However you can often solve small or apparently alarming problems yourself. In fact problems may be caused by incorrect use or installation or by unsuitable ambient conditions and in these cases you will be charged

### THE FRIDGE DOES NOT WORK

- Make sure the plug is inserted properly in the socket.
- Make sure the thermostat is not set to „0“ or Stop.
- Make sure the electricity is working.

### THE FRIDGE IS NOT COLD ENOUGH

- Make sure the thermostat is set properly. Adjust to higher settings.
- Make sure the fridge doors have not been left open for too long.
- Make sure you haven't stored too much food in the fridge.
- Make sure you haven't put hot foods in the fridge.

### THERE IS TOO MUCH FROST

- Make sure the door has not been left open for too long. Unplug the fridge, defrost and then turn it back on.
- Make sure the thermostat is not set at a temperature which is too cold (high settings). Adjust to lower settings.

### THERE IS TOO MUCH CONDENSATION

- Make sure the door has not been left open for too long.
- Make sure you haven't stored too many fresh foods in the fridge.
- Make sure you haven't put hot foods in the fridge.

### THERE IS WATER IN THE FRIDGE COMPARTMENT

- A few drops of water on the sides of the fridge compartment is normal, particularly when a room is humid/damp.
- Make sure the water outlet is not obstructed.

### THE LIGHT DOES NOT WORK

- Make sure the plug is inserted in the socket properly.
- Make sure the electricity is working.
- Follow the instructions in the technical datasheet to replace the bulb.

If the problem continues, contact our service department, giving the appliance number and serial number on the rating plate.