

HOOVER



FORNO COMPATTO ELETTRONICO

COMPACT ELECTRONIC OVEN

FOUR COMPACTE ÉLECTRONIQUE

ELEKTRONISCHE KOMPAKTMIKROWELLE

ELEKTRONISCHE COMPACTOVEN

HORNO COMPACTO ELECTRÓNICO

HBM303 EX

Data and instruction for Performance Tests according to IEC 705 and EN 60705 (1999-04)

The International Electrotechnical Commission SC 59H, has developed a Standard for comparative testing of heating performances of microwave ovens.

We recommend the following for this oven:

Test Nr. on standard	Item	Duration	Function	Power Level	Oven temp.	Weight	Standing time	Note
12.3.1	Egg custard	16 min.	only mw	1000 W	-	750 gr	5 min	The upper surface shall be evaluated after the standing time. The inner custard evaluation shall be conducted after two hours.
12.3.2	Sponge cake	6 min.	only mw	1000 W	-	475 gr	5 min	Use the borosilicate glass container stated in the Standard (max. dia. 210 mm) or a Pyrex® glass container dia. 210 mm, height 50 mm and wall thick 6 mm. Put the container on the low wire rack placed on the turntable.
12.3.3	Meat loaf	20 min.	only mw	750 W	-	900 gr	5 min	Cover the container with cling film and pierce the film. Use the rectangular borosilicate glass container stated in the Standard or the Arcopal® Cat. nr. Z1/B8 (01)10460-1.
13.3	Defrosting minced meat	11 min.	only mw	*△	-	500 gr	15 min	Place the frozen load directly on the turntable (I). Turn upsidedown the load after half of the defrosting time.
12.3.4	Potato gratin	20 min.	combi mw + fan (simult.)	750 W	190°C	1100 gr	5 min	Use the borosilicate glass container stated in the Standard (max. dia. 210 mm) or a Pyrex® glass container dia. 210 mm, height 50 mm and wall thick 6 mm. Put the container on the lower wire rack (F) placed on the turntable. Do not preheat the oven.
12.3.5	Cake	30 min.	combi mw + fan (simult.)	150 W	160°C	710 gr	5 min	Use the borosilicate glass container stated in the Standard (max dia. 210 mm) or a Pyrex® glass container dia. 210 mm, height 50 mm and wall thick 6 mm. The oven shall be preheated (in FAN ONLY function) with the lower rack (F) placed on the turntable. Once preheated, place the container on the lower rack (F).
12.3.6	Chicken	40 min.	combi mw + fan (simult.)	750 W	190°C	1200 gr	5 min	The following instruction shall be strictly observed for this type of load: put the chicken in a pyrex® glass container dia 210 mm, height 50 mm and wall thickness of 6 mm. Put the container on the lower wire rack (F) placed on the turntable.

ISTRUZIONI PER L'USO

pag. 5

INSTRUCTION MANUAL

pag. 27

MODE D'EMPLOI

pag. 49

GEBRAUCHSANWEISUNG


Seite 71

GEBRUIKSSAANWIJZINGEN

pag. 93

MANUAL DE INSTRUCCIONES

pag. 115

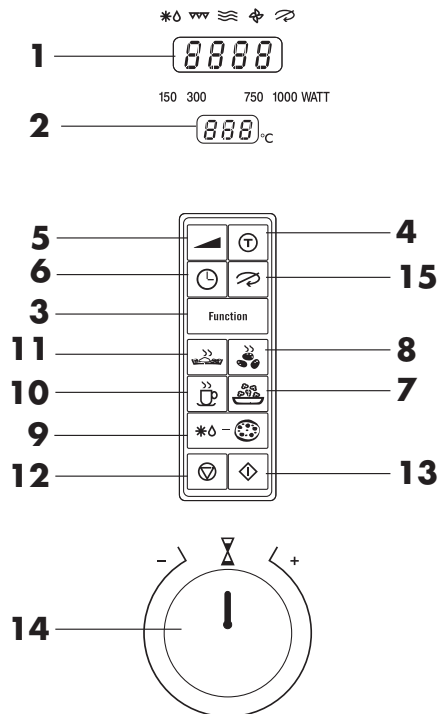

DESCRIZIONE DEL PANNELLO COMANDI

1. Display tempo e funzioni
2. Display temperatura forno
3. Tasto **Function**: selezione funzioni
4. Tasto **T**: selezione temperatura forno
5. Tasto **▲**: selezione livello di potenza microonde
6. Tasto **⌚**: regolazione orologio
- 7 - 8 - 9 - 10 - 11
Tasti "Funzioni Automatiche": cotture rapide pre-memorizzate
12. Tasto **⏏**: arresto cotture e cancellazione impostazioni
13. Tasto **▶**: partenza cotture e riscaldamento rapido
14. Manopola **⌚**: impostazione ora del giorno e durata delle cotture.
15. Tasto fermapiatto **⏏**

DESCRIPTION OF THE CONTROL PANEL

1. Time and mode display
2. Oven temperature display
3. Mode **Function**: mode selection
4. **T** key: oven temperature selection
5. **▲** key: microwave power level selection
6. **⌚** key: setting the clock
- 7 - 8 - 9 - 10 - 11
"Automatic Functions" keys: pre-memorised rapid cooking
12. **⏏** key: interruption of cooking and cancellation of settings
13. **▶** key: start of cooking and rapid reheating
14. **⌚** knob: setting of time and length of cooking
15. **⏏** turntable Stop key

DESCRIPTION DU TABLEAU DE COMMANDE F

1. Afficheur temps et fonctions
2. Afficheur température four
3. Touche **Function**: sélection des fonctions
4. Touche **T**: sélection de la température du four
5. Touche **▲**: sélection du niveau de puissance des micro-ondes
6. Touche **⌚**: réglage de l'horloge
- 7 - 8 - 9 - 10 - 11
Touches "Fonctions Automatique": cuissons rapides pré-mémorisées.
12. Touche **⏏**: interruption de la cuisson et effacement des programmations.
13. Touche **▶**: démarrage des cuissons et réchauffement rapide.
14. Bouton **⌚**: réglage de l'heure du jour et de la durée des cuissons.
15. Touche **⏏**

BESCHREIBUNG DER BEDIENBLENDE D


1. Display (Anzeige) Zeit und Betriebsarten
2. Display Backofentemperatur
3. Taste **Function**: Wahl der Betriebsart
4. Taste **T**: Wahl der Backofentemperatur
5. Taste **▲**: Wahl der Mikrowellenleistungsstufe
6. Taste **⌚**: Einstellen der Uhr
- 7 - 8 - 9 - 10 - 11
Tasten "Automatik-Funktionen": Bereits gespeicherte, rasche Garvorgänge
12. Taste **⏏**: Unterbrechung des Garvorgangs und Löschen der Eingaben
13. Taste **▶**: Start Garvorgang und rasches Erwärmen
14. Drehknopf **⌚**: Einstellen der Uhrzeit und der Kochzeitdauer
15. Taste **⏏**

BESCHRIJVING VAN HET BEDIENINGSPANEEL NL

1. Display tijd en functies
2. Display oven temperatuur
3. **Function** toets: keuze functies
4. **T** toets: keuze oven temperatuur
5. **▲** toets: keuze vermogen niveau magnetron
6. **⌚** toets: instellen klok
- 7 - 8 - 9 - 10 - 11
"Automatische Functietoetsen": voorgeprogrammeerde snelle bereidingen
12. **⏏** toets: onderbreking bereidingen en annulatie ingestelde bereidingen
13. **▶** toets: start bereidingen en snel verwarmen
14. **⌚** toets: instellen van de tijd van de dag en de duur van de bereidingen
15. **⏏** Toets

DESCRIPCION DEL PANEL DE MANDOS E

1. Visor tiempo y funciones
2. Visor temperatura horno
3. Botón **Function**: selección funciones
4. Botón **T**: selección temperatura horno
5. Botón **▲**: selección nivel de potencia microondas
6. Botón **⌚**: regulación reloj
- 7 - 8 - 9 - 10 - 11
Botones "Funciones Automáticas": cocciones rápidas pre-memorizadas
12. Botón **⏏**: paro de cocción y anulación de planteos
13. Botón **▶**: arranque cocción y calentamiento rápido
14. Selector **⌚**: planteo hora del día y duración de las cocciones
15. Botón **⏏**

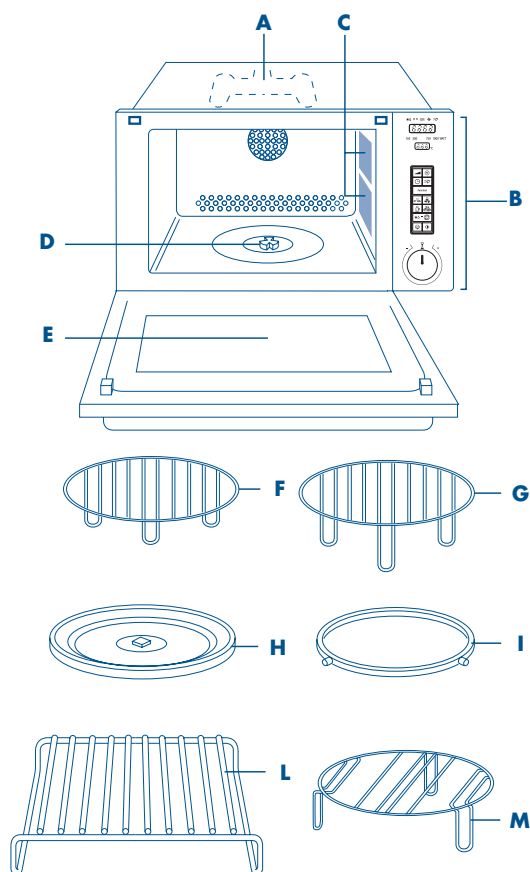**DESCRIZIONE****GB**

- | | |
|---------------------------------|--------------------------------|
| A Grill heating element | G High wire rack |
| B Control panel | H Turntable |
| C Microwave outlet cover | I Turntable support |
| D Turntable spindle | L Rectangular wire rack |
| E Inside of door | M Medium wire rack |
| F Low wire rack | |

DESCRIPTION**F**

- | | |
|---------------------------------------|--------------------------------------|
| A Résistance du grill | F Grille basse |
| B Tableau de commande | G Grille haute |
| C Couvercle sortie micro-ondes | H Plateau tournant |
| D Axe du plateau tournant | I Support du plateau tournant |
| E Côté intérieur de la porte | L Grille rectangulaire |
| | M Grille de hauteur moyenne |

DESCRIZIONE**D**

- | | |
|---|------------------------------|
| A Heizelement Grill | F Niedriger Rost |
| B Bedienblende | G Hoher Rost |
| C Abdeckblende der Mikrowellenaustrittsöffnung | H Drehteller |
| D Drehtellerstift | I Drehtellerhalterung |
| E Türinnenseite | L Rechteckiger Rost |
| | M Mittelhoher Rost |

BESCHRIJVING**NL**

- | | |
|-------------------------------------|----------------------------------|
| A Grill weerstand | G Hoog rooster |
| B Bedieningspaneel | H Draaischijf |
| C Deksel uitgang microgolven | I Houder voor draaischijf |
| D Pin draaischijf | L Rechthoekige rooster |
| E Binnenkant ovendeur | M Gemiddeld rooster |
| F Laag rooster | |

DESCRIZIONE**I**

- | | |
|-------------------------------------|----------------------------------|
| A Resistenza grill | G Griglia alta |
| B Pannello comandi | H Piatto rotante |
| C Coperchio uscita microonde | I Supporto piatto rotante |
| D Perno piatto rotante | L Griglia rettangolare |
| E Lato interno porta | M Griglia media |
| F Griglia bassa | |

DESCRIPCIÓN**E**

- | | |
|---|--------------------------------------|
| A Resistencia del grill | F Pasrilla baja |
| B Panel de mandos | G Parilla alta |
| C Tapa de salida de las microondas | H Plato giratorio |
| D Perno del plato giratorio | I Soporte del plato giratorio |
| E Lado interior de la puerta | L Rejilla rectangular |
| | M Parilla Mediana |

CHAPTER 1 – GENERAL

1.1 IMPORTANT SAFETY WARNINGS


Read carefully these instructions and keep for future reference.

N.B. This oven has been designed to defrost, heat and cook food in the home. It must never be used for other purposes, modified or tampered with in any way.

- 1) **WARNING:** If the door or door seals are damaged, the oven must not be operated until it has been repaired by a competent person (trained by the manufacturer or by its Customer Service).
- 2) **WARNING:** It is hazardous for anyone other than a competent person to carry out any service or repair operation which involves the removal of a cover which gives protection against exposure to microwave energy.
- 3) **WARNING:** Liquids and other foods must not be heated in sealed containers since they are liable to explode. Eggs in their shell and whole hard-boiled eggs should not be heated in microwave ovens since they may explode even after microwave heating has ended.
- 4) **WARNING:** Only allow children to use the oven without supervision when adequate instructions have been given so that the child is able to use the oven in a safe way and understands the hazards of improper use.
- 5) **IMPORTANT:** when operating in combi mode, the oven becomes extremely hot. Do not allow children to use it without adult supervision.
- 6) Do not attempt to operate the oven with the door open by tampering with the safety devices.
- 7) Do not operate the oven if objects for any kind get stuck between the front panel of the oven and the door. Always keep the inside of the door (E) clean, using a damp cloth and non-abrasive detergents. Do not allow dirt or remains of food to accumulate between the front panel of the oven on the door.
- 8) The following warnings must be considered when the door is open: Do not place heavy object on the door or pull the handle downwards any further as the appliance may tip over. Never place hot containers or pans (e.g. just taken off the stove) on the door.
- 9) In the case that the power cable becomes damaged, this must be substituted only by specialised personnel authorised by the manufacturer.
- 10) If smoke is observed, switch off or unplug the appliance and **KEEP THE DOOR CLOSED** in order to stifle any flames.
- 11) Only use utensils that are suitable for use in microwave ovens. In order to avoid overheating and the consequent risk of fire, it is advisable to supervise the oven when cooking food in disposable containers made of plastic, cardboard or other inflammable materials, and when heating small quantities of food.
- 12) Never place the turntable in water after it has been heated for a long time. The high thermal shock resulting would break the turntable.
- 13) When cooking "Only MICROWAVE" and "COMBINED WITH MICROWAVE", you absolutely must not pre-heat the oven (without foodstuffs in it) and you must not operate it when it is empty, because you might cause sparking.
- 14) Before using this oven, check to be certain that the utensil and containers chosen are suitable for microwave oven use (see the section on "Glassware and Similar Items").
- 15) During the use the appliance becomes hot. Do not touch the heating elements inside the oven.
- 16) When heating liquids (water, coffee, milk, etc.) it is possible that the contents may suddenly start to boil and spill violently as a result of delayed boiling, causing scalding. To avoid this happening, you should place a heat-resistant plastic spoon or a glass rod in the container before starting to heat liquids. Any-



- way, care shall be taken when handling the container.
- 17) Do not heat spirit with a high alcohol content, nor large quantities of oil, as these could catch fire !
- 18) The contents of feeding bottles and baby food jars shall be stirred or shaken and the temperature shall be checked before consumption in order to avoid burns. It is also advisable to stir or shake the food in order to ensure that it has an even temperature. **When using commercially available bottle sterilisers, before turning the oven on, ALWAYS make sure the container is filled with the quantity of water indicated by the manufacturer.**

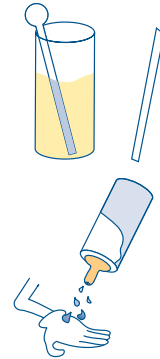

1.2 TECHNICAL DATA

ENERGY CONSUMPTION ventilated oven only function (CENELEC HD 376 norms)

To reach 200°C	0,35 kWh
To maintain a temperature of 200°C for an hour	1,15 kWh
Total consumption	1,5 kWh

• **OUTPUT POWER - MICROWAVE: 1000 W (IEC705)** For additional data, consult the serial plate glued in the right side of the oven frame. This appliance complies to E.E.C. directive no. 89/336 and 92/31 regarding Electromagnetic Compatibility, and to directive 89/109/E.E.C. regarding materials which come into contact with food.

OUTPUT POWER

The microwave output power is written on the rating plate placed on the rear side of the appliance (see "MICRO OUTPUT"). When you consult the tables, always look up your oven's output power. It will be useful also when you are consulting cookbooks intended for use with microwave ovens.



ONLY FOR SOME MODELS: The microwave output power is also indicated inside this symbol, placed on the oven door.


(ONLY FOR U.K.) The letter indicates the heating category to which your oven belongs: some pre-cooked food packages (frozen or chilled) give heating instructions corresponding to the various categories. Follow those instructions related to the category indicated for your oven.

1.3 INSTALLATION AND ELECTRICAL CONNECTION

The oven must be built-in at a minimum height of 850 mm.

- 1) Check that the turntable spindle (D) is inserted correctly in the special slot in the centre of the turntable.
- 2) Clean the inside with a soft, damp cloth.
- 3) Check that there is no damage as a result of transportation, and in particular that the door opens and closes properly.
- 4) Place the support (I) in the centre of the circular groove and fasten the turntable (H) to it. The spindle (D) should be inserted in the corresponding groove in the centre of the turntable.
- 5) Only connect the appliance to a power socket with a power capacity of at least 16A. Also make sure that the main switch installed in your home has a minimum power capacity of 16A in order to avoid it suddenly tripping while the oven is on.
- 6) Before use, check that the power supply voltage is the same as the one shown on the rating label and that the power outlet is **properly earthed: the manufacturer disclaims any liability in the event of non-compliance with this safety regulation.**

1.4 ACCESSORIES SUPPLIED

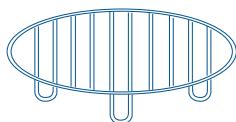


LOW WIRE RACK

Fan Oven Only mode:

for all types of traditional cooking, especially cakes.


Combined microwave and fan oven mode and microwave + grill: for rapid cooking of meat, potatoes, some leavened cakes and desserts and gratin  ed dishes (for example, baked lasagne).

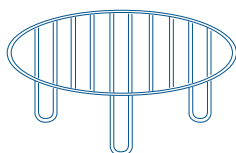

HIGH WIRE RACK


Grill Only mode:

 for all types of grilled food.



TURNTABLE


The turntable is used for all the modes.

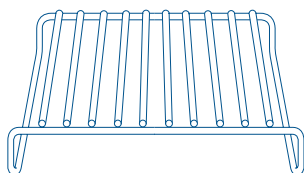

RECTANGULAR RACK

Only for ventilated oven. For all types of traditional cooking in large sized rectangular casserole dishes. Naturally, the food must be stirred and turned during the cooking process. Position this rack directly on the bottom of the oven. The rotating plate (H) can be left in place.

This rack cannot be used for microwave cooking.

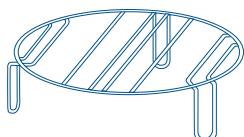

MEDIUM WIRE RACK

Microwave-only function

For all types of cooking on two levels AT THE SAME TIME

(e.g., large amounts of food or different foods).

See the instructions on page 44

1.5 OVENWARE TO BE USED

In the "Microwave Only" and "Microwave Combined" modes, all types of containers in glass (preferably Pyrex), ceramics, china and clay may be used provided that they are undecorated and free of metal parts (i.e. gilt trimmings, handles, feet etc.). Heat resistant plastic containers can also be used, but only for "Microwave Only" cooking. If you are still doubtful about using a particular container, you can perform a simple test. Place the empty container in the oven for 30 seconds at maximum power ("Microwave Only" function).

If the container is still cold or only slightly warm, it is suitable for microwave cooking. If it is very hot or gives out sparks, it is not suitable. Containers in heat-resistant plastic may also be used. Paper napkins, cardboard trays and disposable plastic plates can also be used for short cooking times. The size and shape of the containers must be such as to allow them to rotate properly inside the oven. **Metal, wood, cane and crystal containers are not suitable for microwave cooking.** It is worth remembering that - since microwaves heat the food, not the dish - it is possible to cook the food directly on the plate on which it is to be served. This means that you do not need to use, and wash up, saucepans. However, remember that heat may be transferred from the food itself to the plate, making it necessary to use an oven glove.

If the oven has the "Fan Oven Only" or "Grill only" settings, all types of ovenware may be used.

In any case, observe the guidelines shown in the following table:

	Glass	Pyrex	Glass-ceramics	Clay	Silver foil	Plastic	Paper or cardboard	Metal containers
Mode: "Microwave Only"	YES	YES	YES	YES	NO	YES	YES	NO
Modes: "Combined"	NO	YES	YES	YES	NO	NO	NO	NO
Mode: "Fan Only" "Grill Only"	NO	YES	YES	YES	YES	NO	NO	YES

ELECTRICAL CONNECTION (U.K. ONLY)

- A) If your appliance comes fitted with a plug, it will incorporate a 13 Amp fuse. If it does not fit your socket, the plug should be cut off from the mains lead, and an appropriate plug fitted, as below. **WARNING:** Very carefully dispose of the cut off plug after removing the fuse: do not insert in a 13 Amp socket elsewhere in the house as this could cause a shock hazard.

With alternative plugs not incorporating a fuse, the circuit must be protected by a 15 Amp fuse.

WARNING - THIS APPLIANCE MUST BE EARTHED IMPORTANT

The wires in the mains lead are coloured in accordance with the following code:

Green and yellow: Earth
Blue: Neutral
Brown: Live




As the colours of the wires in the mains lead may not correspond with the coloured markings

If the plug is a moulded-on type, the fuse cover must be re-fitted when changing the fuse using a 13 Amp Asta approved fuse to BS 1362. In the event of losing the fuse cover, the plug must NOT be used until a replacement fuse cover can be obtained from your nearest electrical dealer. The colour of the correct replacement fuse cover is that as marked on the base of the plug.

- B) If your appliance is not fitted with a plug, please follow the instructions provided below:

identifying the terminals in your plug, proceed as follows:

The green and yellow wire must be connected to the terminal in the plug marked with the letter E or the earth symbol  or coloured green or green and yellow.

The blue wire must be connected to the terminal marked with the letter N or coloured black.

The brown wire must be connected to the terminal marked with the letter L or coloured red.

1.6 FUNDAMENTAL RULES FOR MICROWAVE COOKING

Microwaves consist of electromagnetic radiation found in nature under the form of light waves (e.g., sunlight). Inside the oven, these waves penetrate food from all directions and heat up the water, fatty and sugar molecules. Heat is produced very quickly only in the food itself, whereas the container being used warms up indirectly by means of heat given off by the heated food. This prevents food from sticking to its container, so you can use very little fatty substance or, in some cases, no fat at all during the cooking process. Therefore cooking in a microwave oven is considered to be healthy and good for one's diet. And in contrast to traditional methods, cooking in a microwave foodstuffs are less dehydrated, lose less of their nutritional value, and retain more of their original flavour.


Basic rules for correct cooking with a microwave oven

- 1) In order to set cooking times correctly, remember (in referring to the charts on the following pages) that when you increase the amount of foodstuffs the cooking temperature must likewise be proportionately increased and vice-versa. It is important to respect the "standing" times: **standing time** means that period during which the food must be left to "rest" after being cooked so as to allow an even greater spreading of the temperature within. The temperature of meat, for example, will rise about 5°-8° C. (approx. 9°-15° F.) during the standing time. Standing times may be observed either inside or outside the oven.
- 2) One of the main things you must do is **stir** the food several times while it is being cooked. This helps make the temperature distribution more uniform and thus shortens the cooking time.
- 3) It is also advisable to **turn** the foodstuff **over** during its cooking process: this applies especially for meat, whether it is in large pieces (roasts, whole chickens, etc.) or small (chicken breasts, etc.).
- 4) **Foods having a skin, shell or peel (e.g., apples, potatoes, tomatoes, frankfurters, fish) must be pierced with a fork in several points so as to permit steam to escape and to prevent those items from exploding.**
- 5) If you are preparing a large number of portions of the same food item (e.g., boiled potatoes), **place** those portions in a Pyrex dish in order to have them cook in a uniform manner:
- 6) The lower the temperature at which a foodstuff is placed in a microwave oven, the longer the cooking time required. Food having a room temperature will cook more quickly than food having a refrigerator temperature.
- 7) Always do your cooking by placing the food container in the centre of the turntable.
- 8) It is perfectly normal for **condensation to form** inside the oven and near the air outlet. **To reduce such condensation, cover the foodstuffs with clear-sheet, wax paper, a glass lid or simply an overturned plate.** Then, too, foods having a water content (e.g., greens and vegetables) cook better when covered. The covering of food also helps keep the oven clean on the inside. Use clear-sheet made expressly for microwave ovens.
- 9) **Do not cook eggs in their shells:** the pressure which builds up on the inside would cause the egg to explode, even after cooking has finished. Do not heat up eggs which have already been cooked, unless they are scrambled.
- 10) Do not forget to open containers which are air-tight or sealed before heating or cooking food in the oven. The pressure on the inside of the container would rise, causing them to explode even after cooking has finished.


CHAPTER 2 – USING THE CONTROLS AND MODES

2.1 SETTING THE CLOCK


- When the appliance is connected to the domestic power supply for the first time, or after a power cut, four dashes will appear on the display (----).
In order to set the clock, proceed as described below:

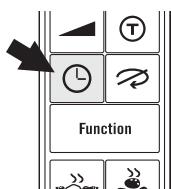



- 1 Press the ⌚ key (6).
(The hours flash on display 1)

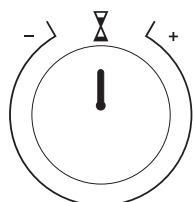


- 2 Set the desired time by turning the ⌚ knob (14).
(The hours flash on display 1)

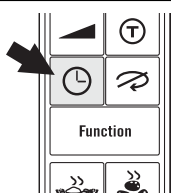

- 3 Press the ⌚ key (6) again.
(The minutes flash on display 1)

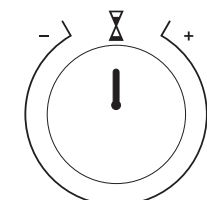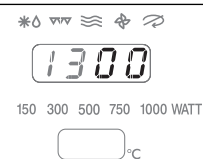

- 4 Set the desired minutes by turning the ⌚ knob (14).
(The minutes flash on display 1)

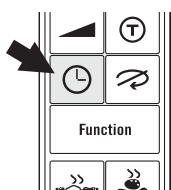


- 5 Press the ⌚ key (6) again.
(The display shows the time set)



- If you wish to change the hour on the dial once it has been set, press the ⌚ key (6) before proceeding to set the new time as described above.
- It is possible to display the current time even after starting the mode set, by pressing the ⌚ key (6) (the time is displayed for 2 seconds).

2.2 PROGRAMMING THE COOKING

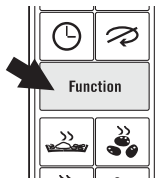


- 1** Press the **Function** key (3) (mode selection) and select the desired mode, which will be shown by the corresponding indicators coming on, on display 1. The available modes are:



INDICATOR	MODE SELECTED	INDICATOR	MODE SELECTED
	Microwave Only		Combined Microwave and Grill
	Automatic Defrosting		Fan Oven Only
	Combined Microwave and Fan Oven		Grill Only



- 2** Set the length of cooking time, in minutes, by turning the knob (14).
In order to choose the length of cooking time, always refer to the tables shown in Chapter 3.

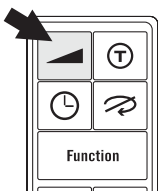


- 3** In the modes:
- Microwave Only**
 - Combined Microwave + Fan Oven**
 - Combined Microwave + Grill**



Select the power level of the microwave by repeatedly pressing the (5) key, until it begins to flash the power desired, expressed in numbers (Watt) above the display 2 (on the bottom). In order to select the power, always refer to the tables shown in Chapter 3.

- Note**
- it is not necessary to select any level of power for the **Automatic Defrosting mode**.
 - in the **Combined Microwave + Fan Oven** mode the maximum microwave power which can be selected is 750 Watts.
 - it is possible to modify the power set even during cooking, simply by pressing the key (5).

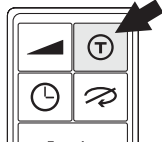


- 4** In the modes:
Combined microwave + fan oven
Fan oven only




select the cooking temperature by repeatedly pressing the **T** key (4) until display 2 (below) shows the desired temperature. In order to select the temperature, always refer to the tables shown in Chapter 3.

- Note**
- once the cooking has been started, display 2 will show the increase in real temperature inside the oven.
 - once the temperature set has been reached, a sound signal will be emitted (3 beeps). The temperature set will then remain shown on display 2.
 - it is possible to modify the power set even during cooking, simply by pressing the **T** key (4).

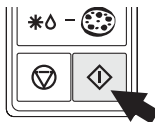

- 5** Start the cooking process by pressing the **D** key (13). The countdown of the remaining cooking time will appear on the display 1, and if included in the mode, the oven temperature on the display 2.

- Note:**
- Should the cooking process for any reason fail to start, all the settings will be automatically cancelled after 2 minutes.

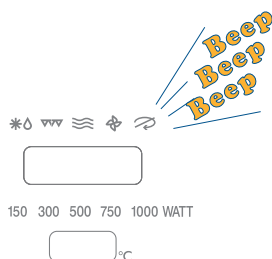


- 6** When cooking finishes, a sound signal is emitted (3 beeps) and the word "END" will appear on the display. Open the door and take out the food (the clock will appear, or if the oven is hot, the word "COOL" – see note below).

- Note:**
- It is possible to check the progress of the cooking at any time, by opening the door and inspecting the food. This interrupts the emission of microwaves and the oven stops working until the door is closed again and the **D** key (13) is pressed.
 - Should it be necessary for any reason to suspend the cooking without opening the door, you only need to press the **V** key (12).
 - In order to complete the cooking, proceed as follows:
 - if the oven door is open, press the **V** key (12) once;
 - if the door is closed and cooking is underway, press the **V** key (12) twice; the display will go back to showing the clock.
 - this model is equipped with an automatic cooling cycle which comes into action whenever the oven is very hot (for example after something has been cooked for a long time). During this cycle the word "COOL" will appear on display 1. The fans and the oven light will come on (they will go off automatically).


At the end of each cooking cycle, the oven light and the cooling fan will remain in operation until the oven door is opened.

2.3 AUTOMATIC DEFROSTING AND COOKING SEQUENCE


In order to programme an automatic defrosting and cooking sequence proceed as follows:

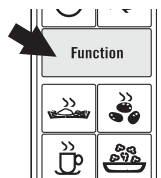


- 1** Set the automatic defrosting mode by pressing the **Function** key (3) twice (mode selection). The indicator corresponding to the automatic defrosting will appear on the display.

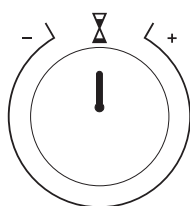


- 2** Set the length of time required for the defrosting (in minutes) by turning the knob (14).

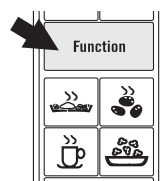

- 3** Set the cooking by selecting the desired mode with the **Function** key (3) (mode selection) until the corresponding indicators appear.
(ex. Combined microwave + fan function)

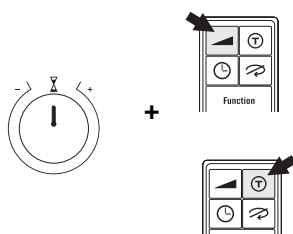


- 4** Adjust the length of cooking time and, if included in the mode, the microwave power level and the oven temperature as shown in the preceding paragraph (par. 2.2).

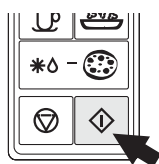

- 5** Press the key (13).

 
The passage from defrosting to cooking will be signalled by a sound signal.

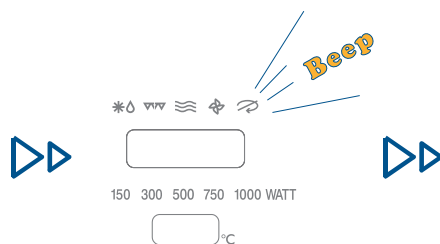


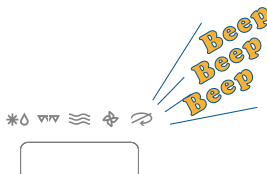
2.4 RECALLING THE PRE-MEMORISED RECIPES ("AUTOMATIC FUNCTIONS" KEYS)



- 1 Press the desired "**Automatic Functions**" key.
(The indicators of the length and temperature set will flash on the display and the pre-memorised mode and power level indicators will come on.)
Refer to paragraph 3.8 in order to choose the most suitable menu.





- 2 Press the  key (13) in order to start cooking.




- 3 At the end of the time set 3 long beeps will be heard and the word "**END**" will appear on the display.

2.5 QUICK REHEAT

This mode is very useful for heating small quantities of food or drink.


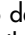
- Press the  key (13); the oven will come on for 30 seconds at full power. By pressing the  key again the time will extend by 30 seconds up to 3 minutes intervals.
- This mode is activated only if it is carried out within 1 minute after the food has been placed in the oven. The Quick Reheat is also useful to complete unfinished cooking.

Once the cooking procedure has begun, the programmed time can be modified with the  (14) knob to a maximum time limit of 60 minutes.


2.6 CHILD LOCK-OUT FEATURE


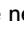

The oven is equipped with a safety device which prevents pre-set cooking times from being tampered with while the cooking is underway, in order to avoid accidental and dangerous extensions to the cooking time which might cause the food to burn.

To activate the safety device:

- Keep the  key (12) pressed down for 5 seconds.
- A short beep is emitted: from this point it will no longer be possible to alter the times during all cooking.
- In order to deactivate the safety device once it has been previously activated, keep the  key (12) pressed until the beep is heard.



2.7 TURNTABLE STOP KEY

When using large sized containers/recipients (or containers with handles) that are not able to rotate, the movement of the turntable can be stopped. Press the  key (15), after having first set a cooking function: the LED in the top right will start flashing.

After having pressed  key (13) the LED will flash a further 5 times, and will then remain on for the entire set time; for best results, the food should be mixed/stirred a number of times during cooking. The **Turntable Stop** function will remain on the next time the oven is used, that is until the  key is pressed again. For the microwave-only function, the maximum power available is 750W (reduced automatically by the electronic controller when pressing the  key).

2.8 "MEMOTIME" FUNCTION

This function allows for the use of the timer, with the oven **NOT** functioning, for up to 60 minutes.

- Press the **Function** key until 3 dashes appear on display 2, then select the time desired by turning the  (14) knob and start the timer by pressing the  (13) key.
- At the end, 3 beeps will sound and the "**END**" warning will appear on display 1.

CHAPTER 3 – USING THE OVEN: SUGGESTIONS AND TIME GRIDS

3.1 DEFOSTING

- Frozen food in plastic bags, plastic film or cardboard packets can be placed directly in the oven for defrosting as long as the packet has no metal parts (e.g. metal twist ties or staples).
- Certain foods, such as vegetables and fish, do not require complete defrosting before cooking.
- Boiled foods, stews and meat sauces defrost better and more quickly if they are stirred from time to time, turned over and/or separated.
- Meat, fish and fruit lose a certain amount of liquid during defrosting. Defrost these foods in a bowl.
- It is advisable to separate each individual piece of meat into its own bag before putting it into the freezer. This will enable you to save precious preparation time.
- It is important to observe the standing times immediately after defrosting, before cooking; the standing time (in minutes) is the length of time for which the food must be left to stand to allow the heat to continue spreading evenly in the food.

TABLE OF DEFOSTING TIMES IN "AUTOMATIC DEFOSTING" MODE

TYPE	QUANTITY	TIME (minutes)	NOTES/SUGGESTIONS	WIRE RACK TO BE USED	STANDING TIME
MEAT					
• Roasts (pork, beef, veal etc.)	1 kg	19 - 21	Turn over halfway through defrosting	None	20
• Steaks, chops, rashers	200 gr	4 - 6		None	5
• Stew, goulash	500 gr	10 - 12	See note *	None	10
• Minced	250 gr	5 - 7		None	15
	500 gr	10 - 12		None	15
• Hamburgers	200 gr	5 - 7		None	10
• Sausages	300 gr	6 - 8		None	10
POULTRY					
• Duck, turkey	1,5 kg	25 - 27	Turn the poultry over halfway through defrosting. When the standing time is over, wash under warm water to remove any ice.	None	20
• Whole chicken	1,5 kg	25 - 27		None	20
• Pieces of chicken	700 gr	13 - 15		None	10
• Chicken breast	300 gr	8 - 10		None	10
VEGETABLES					
			Frozen vegetables do not need to be defrosted before cooking.		
FISH					
• Fillets	300 gr	7 - 9	Turn the fish over halfway through defrosting	None	7
• Slices	400 gr	8 - 10		None	7
• Whole	500 gr	10 - 12		None	7
• Prawns	400 gr	8 - 10		None	7
MILK/DAIRY PRODUCTS					
• Butter	250 gr	4 - 6	Remove the silver foil or the metal parts. Cheese should not be completely defrosted. Respect the standing time. The cream should be removed from its container and placed in a dish.	None	10
• Cheese	250 gr	5 - 7		None	15
• Cream	200 ml	7 - 9		None	5
BREAD					
• 2 medium-sized rolls	150 gr	1 - 2	Put the bread directly onto the turntable.	None	3
• 4 medium-sized rolls	300 gr	2 - 4		None	3
• Sliced bread	250 gr	2 - 4		None	3
• Sliced wholemeal bread	250 gr	2 - 4		None	3
FRUIT					
• Strawberries, plums, cherries, redcurrants, apricots	500 gr	8 - 10	Stir 2-3 times	None	10
• Raspberries	300 gr	5 - 7	Stir 2-3 times	None	10
• Blackberries	250 gr	3 - 5	Stir 2-3 times	None	6

* These indications are suitable for performing the minced meat defrosting test according to Regulation 60705, Par. 13.3 (see page 2). Turn over halfway through the set time. Place directly on the turntable.

Further information, including on other performance tests according to Regulation 60705, is given in the table on page 2.


3.2 REHEATING

Reheating food is one of the modes in which your microwave oven displays all its usefulness and efficiency. Compared to traditional methods, using a microwave obviously saves time and therefore electricity.

- It is advisable to reheat food (especially if it is frozen) to a temperature of at least 70°C (it must be piping hot). This means the food will not be ready to eat immediately because it is too hot!) but it will be completely sterilised.
- In order to reheat pre-cooked or frozen food, always observe the following rules:
 - always remove the food from metal containers
 - cover it with transparent film (of the kind suitable for microwave ovens) or grease proof paper so that all the natural flavour is preserved and the oven will stay cleaner; the food may also be covered with an upturned plate;
 - if possible, stir or turn the food frequently in order to speed up the reheating process and to make it cook more evenly;
 - follow the cooking times shown on the packet with considerable caution; remember that, under certain conditions, the times shown must be increased.
- Frozen food must be defrosted before being reheated. The lower the initial temperature of the food, the longer the reheating time will have to be.

Note: some dishes can also easily be reheated by using the "Automatic Functions" pre-memorised recipes (see table on page 41).








TABLE OF REHEATING TIMES

TYPE	QUANTITY	FUNCTION	POWER LEVEL	TIME minutes	NOTES/SUGGESTIONS
SOFTENING AND MELTING FOOD					
• Chocolate/icing	100 gr		500	4 - 5	Put in a dish. Mix the icing once.
• Butter	50-70 gr	"	1000	0'.10"-0'.15"	To melt butter, add one minute.
CHILLED FOODS (5/8°C) up to 20/30°C					
• Yoghurt	125 gr	"	1000	0'.15"-0'.20"	Remove the metal top. Heat the baby's bottle without the teat and mix it immediately after heating to make the temperature uniform. Check the temperature of the contents before use. With milk at room temperature the heating time is lower. To avoid risk of fire when using dried milk please stir evenly. Please use already sterilized milk.
• Feeding bottle	240 gr	"	"	0'.30"-0'.35"	
PRE-COOKED CHILLED FOODS (initial temp. 5/8°C) up to approx. 70°C					
• Packet of lasagne or stuffed pasta	400 gr	"	1000	3 - 5	Packets of any type of pre-cooked food available in the shops, to be reheated to 70°C. Remove the food from any metal container and put it directly onto the plate from which it is to be eaten. For best results the food should always be covered.
• Packet of meat with rice and/or vegetables	400 gr	"	"	3 - 5	
• Packet of fish and/or vegetables	300 gr	"	"	2 - 4	Plate of meat and/or vegetables Portions of any type of cooked food to be reheated to 70°C. The food should be placed directly onto the plate from which it is to be eaten and should always be covered either with transparent film or with an upturned plate.
• Plate of meat and/or vegetables	400 gr	"	"	4 - 6	
• Plate of pasta, cannelloni or lasagne	400 gr	"	"	4 - 6	
• Plate of fish and/or rice	300 gr	"	"	3 - 5	
FROZEN FOOD TO BE REHEATED/COOKED (initial temp. -18/-20°C) up to approx. 70°C					
• Packet of lasagne or stuffed pasta	400 gr	"	1000	5 - 7	All kinds of pre-cooked frozen food to be reheated to 70°C directly in the packet. For metal containers, place the food directly onto the dish from which it is to be eaten and increase the cooking time by a few minutes.
• Packet of meat with rice and/or vegetables	400 gr	"	"	4 - 6	
• Packet of pre-cooked fish and/or vegetables	300 gr	"	"	2 - 4	
• Packet of fish and/or raw vegetables	300 gr	"	"	6 - 8	Remove raw food from the packets, place it in a container suitable for microwaves and cover. Portions of cooked frozen food to be heated to 70°C. Place the frozen food onto the dish from which it is to be eaten and cover it with an upturned plate or Pyrex lid. Make sure that it is thoroughly heated in the centre; if possible, stir the food.
• Portion of meat and/or vegetables	400 gr	"	"	5 - 7	
• Portion of pasta, cannelloni or lasagne	400 gr	"	"	6 - 8	
• Portion of fish and/or rice	300 gr	"	"	3 - 5	
CHILLED DRINKS (5/8°C) up to approx. 70°C					
• 1 cup of water	180 cc	"	1000	1'30" - 2'	All drinks should be shaken after reheating to spread the temperature evenly. We recommend covering clear soup with an upturned plate.
• 1 cup of milk	150 cc	"	"	1'15" - 1'45"	
• 1 cup of coffee	100 cc	"	"	1'15" - 1'45"	
• 1 bowl of clear soup	300 cc	"	"	3 - 4	
DRINKS AT ROOM TEMPERATURE From 20/30°C up to approx. 70°C					
• 1 cup of water	180 cc	"	1000	1'15" - 1'45"	All drinks should be shaken after reheating to spread the temperature evenly. We recommend covering clear soup with an upturned plate.
• 1 cup of milk	150 cc	"	"	1 - 1'30"	
• 1 cup of coffee	100 cc	"	"	0'45" - 1'15"	
• 1 bowl of clear soup	300 cc	"	"	2 - 3	

3.3 - COOKING STARTERS, PASTA AND ENTREES








 

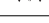
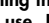
Vegetable soups and other soups in general require less liquid because in a microwave oven evaporation is rather minimal. Salt must be added only at the end of cooking or during standing time as it dehydrates the food.

It is fair to say that the time needed to cook rice in the microwave oven (as indeed for pasta) is more or less equal to that needed to cook it on a stove in the traditional manner. The advantage of preparing a risotto in a microwave oven is that it does not need stirring continually (this only needs to be done 2 or 3 times).

TYPE	QUANTITY	FUNCTION	POWER LEVEL	TEMPERATURE	TIME minutes	NOTES/SUGGESTIONS	WIRE RACK TO USE
• Lasagne	1100 gr		1000 1000	- -	8 + 8	Suitable times for uncooked pasta. If the pasta is pre-cooked, 8 minutes of Combined MICROGRILL cooking is enough.	Low
• Gnocchi alla romana	600 gr		1000	-	12	Avoid piling them up too heavily	Low
• Macaroni	1500 gr		1000	-	8	The pasta should have previously been boiled separately.	Low
• Risotto	300 gr. of rice		1000	-	12-15	The ingredients should all be placed together in a container suitable for microwaves and covered with transparent film (750 g of clear soup is needed for 300 g of rice with the microwaves on full power for approx. 10-12 minutes).	None
• Pizza	800 gr		-	200°C	30	Spread the pizza on oven paper resting on a shelf for cakes or on the detachable base of metal baking sheet for cakes. Preheat the oven to 200°C.	Low
• Fresh Quiche Lorraine	800 gr		-	160°C	40	Use a cake tin with a handle (the oven should be pre-heated).	Low
• Frozen Quiche Lorraine	550 gr		-	190°	45	Place on the bottom of a metal baking sheet (the oven should be pre-heated).	Low

3.4 - COOKING MEAT

Cooking is closely linked to the size and uniformity of the food which is to be cooked: kebabs cook faster than a roast because they consist of smaller, more evenly-sized pieces of meat. To keep roasts, chicken and kebabs moist, it is advisable to add 1 or 2 cups of water at the start of cooking.

TYPE	QUANTITY	FUNCTION	POWER LEVEL	TEMPERATURE	TIME minutes	NOTES/SUGGESTIONS	WIRE RACK TO USE
• Roasts (pork, beef)	1000 gr		500	190°C	35-40	Leave on a little fat to avoid it drying out. Do not add much sauce.	Low
• Meatloaf	800 gr		500	180°C	22-25	Mix 500 g of minced beef with egg, ham, Bread crumbs, etc. Add a touch of oil and a little white wine.	Low
• Meatloaf	900 gr		750	-	20	See note *	None
• Whole chicken	1200 gr		750	190°C	40	Prick the skin to allow the fat to run off. See note **	Low
• Pieces of chicken	850 gr		750	190°C	25	Stir once during cooking	Low
• Kebabs	600 gr		500	180°C	17-20	Turn halfway through cooking	Low
• Goulash	1500 gr		1000	-	30-35	Cook uncovered and stir 2-3 times	None
• Chicken breast	500 gr		700	-	10-15	Turn halfway through cooking	None
• Veal or pork chop	3 pieces		-	-	16-18	Preheat the oven for 3 minutes. Turn through cooking, as the heating element only irradiates heat from the upper part of the oven.	High
• Sausages	3 pieces		-	-	10-12	Preheat the oven for 3 minutes. Turn through cooking, as the heating element only irradiates heat from the upper part of the oven.	High
• Hamburgers	3 pieces		-	-	10-12	Preheat the oven for 3 minutes. Turn through cooking, as the heating element only irradiates heat from the upper part of the oven.	High

* These indications are suitable for performing the minced meat cooking test according to Regulation 60705, Para. 12.3.3. Cover the container with clear film for microwave use. Further information, including on other performance tests according to Regulation 60705, is given in the table on page 2.

** These indications are suitable for performing the cooking test according to Regulation 60705, Para. 12.3.6. Further information, including on other performance tests according to Regulation 60705, is given in the table on page 2.

3.5 - COOKING SIDE DISHES AND VEGETABLES

Vegetables cooked in a microwave oven preserve their colour and nutritional value better than in traditional cooking.

Wash and peel the vegetables before starting to cook.

Larger vegetables should be cut into evenly-sized pieces.

Add approx. 5 spoonfuls of water for every 500g of vegetables (vegetables which have a high fibre content require more water).

The vegetables should always be covered with transparent film.

Stir at least once halfway through cooking and add a little salt only at the end.

Warning: the cooking times in the table are purely intended as guidelines and are on the basis of the food's weight and initial temperature as well as its texture and structure.

TYPE	QUANTITY	FUNCTION	POWER LEVEL	TEMPERATURE	TIME minutes	NOTES/SUGGESTIONS	WIRE RACK TO USE
• Asparagus	500 gr	≡	1000	-	8-9	Cut into 2 cm pieces	None
• Artichokes	300 gr	≡	1000	-	10-11	It would be better to use artichoke bottoms	None
• Green beans	500 gr	≡	1000	-	10-11	Cut in pieces	None
• Broccoli	500 gr	≡	1000	-	6-7	Separate into single "flowerets"	None
• Brussels sprouts	500 gr	≡	1000	-	6-7	Leave whole	None
• White cabbage	500 gr	≡	1000	-	6-7	Leave whole	None
• Red cabbage	500 gr	≡	1000	-	6-7	Leave whole	None
• Carrots	500 gr	≡	1000	-	8-9	Cut into evenly-sized pieces	None
• Cauliflower	500 gr	≡	1000	-	10-11	Separate into "flowerets"	None
• Cauliflower in béchamel sauce	1000 gr	≡ + ≡ ▼▼	1000	-	7 + 10	Same cooking time as for raw cauliflower. If pre-cooked, needs only 10 minutes with grill in Combined mode	Low
• Celery	500 gr	≡	1000	-	6-7	Separate into pieces	None
• Aubergines	800 gr	≡	1000	-	5-6	Cut into cubes	None
• Grilled aubergines	4 slices	▼▼▼	-	-	9-11	Preheat for 3 minutes. Turn halfway through cooking	High
• Aubergines "parmigiana"	1300 gr	≡ ▼▼▼	1000	-	7-9	The aubergines may be first grilled or fried	Low
• Leeks	500 gr	≡	1000	-	5-6	Leave whole	None
• Button mushrooms	500 gr	≡	1000	-	5-6	Leave whole and cover. No need for water	None
• Onions	250 gr	≡	1000	-	4-5	Whole if even-sized. No need for water	None
• Spinach	300 gr	≡	1000	-	5-6	Cover after washing and draining	None
• Peas	500 gr	≡	1000	-	9-10		None
• Fennel	500 gr	≡	1000	-	11-12	Cut into quarters	None
• Grated tomatoes	800 gr	≡ ▼▼▼	500	-	9-11	It is preferable for them to be even-sized	Low
• Peppers	500 gr	≡	1000	-	8-9	Cut into pieces	None
• Grilled peppers	4 quarters	▼▼▼	-	-	9-11	Preheat for 3 minutes. Turn halfway through cooking	High
• Stuffed peppers	1400 gr	≡ + ≡ ▼▼▼	1000 1000	- -	8 + 9	Preferably the short, broad kind	Low
• Potatoes	500 gr	≡	1000	-	7-8	Cut into evenly-sized pieces	None
• Roast potatoes (fresh)	500 gr	≡ ☞	500	190°C	25-30	Stir 2-3 times	Low
• Roast potatoes (frozen)	900 gr	≡ ☞	500	200°C	35-40	Stir 2-3 times	Low
• Potato gratin	1100 gr (total)	≡ ☞	750	190°C	20	See note *	Low
• Courgettes	500 gr	≡	1000	-	6-7	Leave whole	None

* These indications are suitable for performing the cooking test according to Regulation 60705, Para. 12.3.4. Further information, including on other performance tests according to Regulation 60705, is given in the table on page 2.

3.6 - COOKING FISH

Fish cooks very quickly and with excellent results. It can be dressed with a little butter or oil (or even left without). Cover it with transparent film. Naturally if it has its skin, this must be scored or cut; the fillets should be arranged evenly. It is not advisable to cook fish breaded with egg.

TYPE	QUANTITY	FUNCTION	POWER LEVEL	TEMPERATURE	TIME minutes	NOTES/SUGGESTIONS	WIRE RACK TO BE USED
• Fillets	300 gr	≡	750	-	5-7	Cover with film	None
• Pieces	300 gr	≡	750	-	7-9	Cover with film	None
• Whole	500 gr	≡	750	-	8-10	Cover with film	None
• Whole	250 gr	≡	750	-	5-7	Cover with film	None
• Slices	400 gr	≡	750	-	7-9	Cover with film	None
• Prawns	500 gr	≡	750	-	7-9	Cover with film	None
• Oven cooked	600 gr	≡ ✱	150	190°	30	Add oil, a clove of garlic and drop of white wine and water. Do not cover.	Low

3.7 - COOKING DESSERTS AND CAKES

For cooking all cakes the oven must be preheated to the temperature shown in the table. Only after reaching the temperature set (signalled by 5 beeps) may the cake be placed in the oven

TYPE	QUANTITY	FUNCTION	POWER LEVEL	TEMPERATURE	TIME minutes	NOTES/SUGGESTIONS	WIRE RACK TO BE USED
• Hazelnut cake	1100 gr	≡ ✱	150	170°C	25-30	Use a heat-resistant container	Low
• Cheese cake	1500 gr	≡ ✱	500	160°C	35-40	Use a heat-resistant container	Low
• Jam tart	700 gr	✱	-	160°C	40	Use a metal cake tin	Low
• Plum cake	950 gr	✱	-	160°C	90	Use a rectangular mould	Low
• Light sponge cake	700 gr	✱	-	160°C	40	Use a metal cake tin	Low
• Walnut cake	650 gr	✱	-	160°C	40	Use a metal cake tin	Low
• Egg custard	750 gr	≡	1000	-	16	See note *	None
• Sponge cake	475 gr	≡	1000	-	6	See note **	Low
• Cake	710 gr	≡ ✱	150	160°C	30	See note ***	Low






* These indications are suitable for performing the cooking tests according to Regulation 60705, Para. 12.3.1. Further information, including on other performance tests according to Regulation 60705, is given in the table on page 2.

** These indications are suitable for performing the cooking tests according to Regulation 60705, Para. 12.3.2. Further information, including on other performance tests according to Regulation 60705, is given in the table on page 2.

*** These indications are suitable for performing the cooking tests according to Regulation 60705, Para. 12.3.5. Remember to preheat the oven in fan only mode with the low wire rack in place. Further information, including on other performance tests according to Regulation 60705, is given in the table on page 2.

3.8 - REHEATING/COOKING USING THE "AUTOMATIC FUNCTIONS" KEYS

The "Automatic Functions" keys are 5 different programmes with "pre-memorised" length of cooking time, power level and oven temperature; they afford excellent results for the dishes described in the following table.

KEY	WHAT TO DO	SUGGESTIONS
(10) 	<ul style="list-style-type: none"> Press once Press twice Press 3 times Press 4 times 	<ul style="list-style-type: none"> Reheat 1 small coffee cup (50 cc) at room temperature. Reheat 1 coffee cup (125 cc) starting from room temperature. Reheat one large cup (200 cc) starting from chilled Reheat 1 soup dish (300 cc) starting from chilled
		After reheating the liquid, stir well to spread the temperature evenly.
(8) 	<ul style="list-style-type: none"> Press once Press twice Press 3 times 	<ul style="list-style-type: none"> Cook 200 g of potatoes Cook 400 g of potatoes Cook 600 g of potatoes
		Wash the potatoes thoroughly in their jackets, pierce them and put them on the turntable. They can be served stuffed with butter or cheese.
(11) 	<p>Warning: at the end of the reheating the food and the containers may be very hot. Use tweezers or oven gloves.</p> <ul style="list-style-type: none"> Press once Press twice 	<ul style="list-style-type: none"> Reheat 1 portion (250-350 g) Reheat 2 portions (450-550 g)
		Suitable for cooked portions of food, stored in the refrigerator on the plate (the one from which the food is to be eaten). In the case of pre-cooked food products, remove the food from any aluminium packaging/containers and place it on an ovenproof plate.
(9) *Δ - 	<p>Warning: at the end of the reheating the food and the containers may be very hot. Use tweezers or oven gloves.</p> <ul style="list-style-type: none"> Press once Press twice Press 3 times 	<ul style="list-style-type: none"> Reheat 1 frozen pizza (250-500 g) Reheat 1 portion (250-350 g) Reheat 2 portions (450-550 g)
		Place the pizza directly on the low wire rack. Place the packet on the turntable, being careful to remove any covers (film, bags). If the packet is not suitable for microwaves, however, (e.g. metal pans), remove the food from the packet on to the serving dish, placing it uncovered on the turntable.
(7) 	<ul style="list-style-type: none"> Press once 	<ul style="list-style-type: none"> Cook 1 100 g packet of popcorn for microwaves
		Follow the instructions written on the box closely and place it on the turntable.

3.9 - SIMULTANEOUS COOKING ON 2 LEVELS


By using the spacer wire rack at medium height with the microwave-only function, you can defrost, reheat and cook foods at the same time, even different dishes on two levels. The special double-microwave-emission system makes possible, in fact, a perfect distribution of energy.

When you wish to cook two food dishes at the same time, all you have to do is keep these basic rules in mind:

- 1) The cooking times for food dishes cooked at the same time are different from those for the cooking of single dishes. So always consult the reference table on page 39.

<i>Times for simultaneous cooking</i>	
Potatoes (above)	16 min
Goulash (below)	40 min
<i>Cooking times for single dishes</i>	
Potatoes	7 - 8 min
Goulash	30 - 35 min

- 2) Be careful to ALWAYS place on the MEDIUM WIRE RACK that food which requires less cooking time: it will thus be easier to remove the upper pan.
Take the grill out and finish cooking the food underneath.

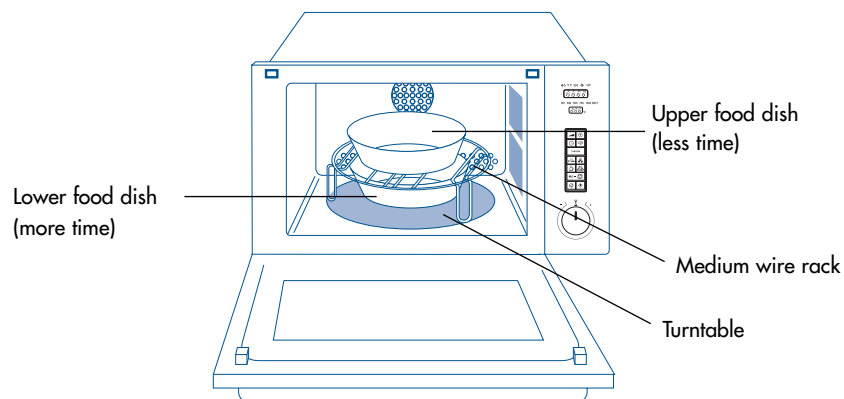

- 3) Pay strict attention to the indications and recommendations in the tables. In particular, always check to be sure that the food being reheated is very hot before removing it from the oven.

REFERENCE TABLES FOR COOKING ON TWO LEVELS

Defrosting times

Type	Pan position	Quantity (grams)	Power level	Minutes	Notes
• Ground meat	above	500	*Δ	20	Turn the meat over after 10 min. When the cooking is finished, let the meat sit for 15 min.
• Ground meat	below	500		20	
• Chicken in pieces	above	500	*Δ	24	During the defrosting, pull the pieces apart. When the cooking is finished, let the meat sit for 15 min.
• Stew	below	500		24	
• Cauliflower	above	450	*Δ	22	At the end, let sit for 5 to 10 min.
• Whole fish	below	500		22	At the end, let sit for 5 to 10 min.

Reheating times

Type	Pan position	Quantity (grams)	Power level	Minutes	Notes
• Meat, single serving	above	150	1000	6	Cover the food with plastic wrap
• Vegetables, single serving	below	250	1000	6	Cover the food with plastic wrap
• Plate of lasagne	above	500	1000	9	Cover the food with plastic wrap
• Plate of lasagne	below	500	1000	9	Cover the food with plastic wrap
• Meat, single serving	above	150	1000	6	Cover the food with plastic wrap
• Plate of lasagne	below	500	1000	8	Cover the food with plastic wrap

Cooking times

Type	Pan position	Quantity (grams)	Power level	Minutes	Notes
• Potatoes	above	500	1000	16	Cut in equal-size pieces and cover with plastic wrap.
• Potatoes	below	500	1000	16	Cut in equal-size pieces and cover with plastic wrap.
• Carrots	above	500	1000	18	Cut in equal-size pieces and cover with plastic wrap.
• Carrots	below	500	1000	18	Cut in equal-size pieces and cover with plastic wrap.
• Zucchini	above	475	1000	14	Leave whole and cover with plastic wrap. After 14 min., take out the rack.
• Sliced fish	below	400	1000	16	Cover with plastic wrap.
• Zucchini	above	475	1000	13	Leave whole and cover with plastic wrap. After 13 min., take out the rack.
• Whole fish	below	200	1000	14	Cover with plastic wrap.
• Whole fish	above	200	1000	14	Cover with plastic wrap.
• Whole fish	below	200	1000	14	Cover with plastic wrap.
• Potatoes	above	500	1000	16	Cut in equal-size pieces and cover with plastic wrap.
• Goulash	below	1500	1000	40	After 16 min., take out the grill. Stir 2 or 3 times.
• Cabbage	above	500	1000	14	Leave whole and cover with plastic wrap. After 14 min., take out the rack.
• Rice	below	300	1000	20	Cover with plastic wrap and stir 2 times
• Brussels sprouts	above	500	1000	14	Cover with plastic wrap. After 14 min., take out the rack.
• Peas	below	500	1000	18	Cover with plastic wrap.

CHAPTER 4 – CLEANING AND MAINTENANCE

4.1 CLEANING

Before any cleaning and maintenance are carried out, always disconnect the plug from the power socket and wait for the appliance to cool down.

The internal cavity of your oven is covered with a special non-stick finish to which splashes and food particles do not stick, thus making cleaning particularly simple. Always keep the microwave outlet cover (C) clean and free from grease and splashes of fat.

Do not use abrasive detergents, wire sponges and sharp metal tools when cleaning the external surface of the oven. Also be careful to ensure that water or liquid detergent does not penetrate the air and steam vent grilles on the top of the appliance.

It is also advisable not to use alcohol, abrasive detergents or ammonia-based detergents to clean the internal and external surfaces of the door.

Do not steam clean the inside of the oven.

Always keep the inside of the door clean to ensure that it closes properly, so that dirt and food residues do not become trapped between the door and the front panel of the oven.

Check from time to time that the ventilation openings located on the back and underneath the cabinet which houses the appliance are free from any obstructions or dust.

Contact your Service Assistance Centre for any necessary controls of the ventilation openings found on the back of the appliance.

It is necessary to remove the turntable (H) and its corresponding support (I) periodically in order to clean them; the bottom of the oven should also be cleaned.





Wash the turntable and its support in soapy water using mild soap. They can also be washed in a dishwasher.

Do not immerse the turntable in cold water after prolonged heating; the sudden change in temperature would cause it to crack.

The turntable motor is sealed. Nevertheless, be careful to avoid the water penetrating under the turntable spindle (D) when the bottom of the oven is being cleaned.

To make the cleaning of the inside of the oven easier, the upper heating element can be lowered by turning the ceramic hook.

IMPORTANT: After cleaning, reposition and refasten the electrical element. The oven must not be used with the element in the lowered positioned.

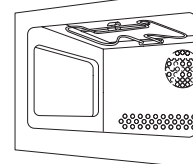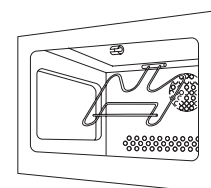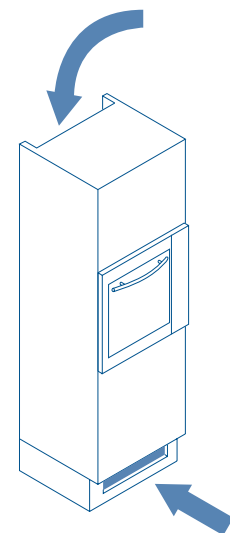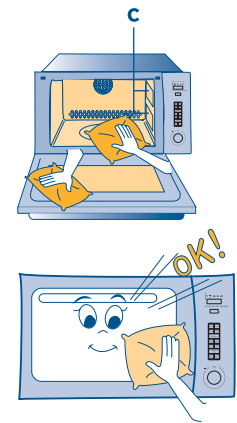


4.2 MAINTENANCE

If something does not quite work or if a defect materialises, contact the Service Centre authorised by the manufacturer. It is always worth carrying out the following simple checks before calling our technicians:

PROBLEM	CAUSE/SOLUTION
The appliance does not work	<ul style="list-style-type: none">• The door is not closed properly.• The plug is not correctly inserted.• No power at the socket• No power at the socket (check the fuse box)
Condensation on the work surface, inside the oven or around the door.	<ul style="list-style-type: none">• When food is cooked which contains water it is quite normal for the steam which is generated inside the oven to escape and condense inside the oven, on the cooking surface or around the doorframe.
Sparks inside the oven	<ul style="list-style-type: none">• Do not turn the oven on without food in Microwave and Combined cooking modes.• Do not use metal containers for the above cooking modes or bags or packets with metal parts.
The food does not heat or cook properly	<ul style="list-style-type: none">• Select the correct cooking mode or reduce the cooking time.• The food has not been completely defrosted before being cooked.
The food burns	<ul style="list-style-type: none">• Select the correct cooking mode or reduce the cooking time.
The food does not cook evenly	<ul style="list-style-type: none">• Stir the food during cooking. Remember that food cooks better when cut in evenly-sized pieces.• The turntable does not rotate.

NOTE: The oven may be used safely even if the light bulb is not working. Contact an authorised Service Centre for bulb replacement.

•ISTRUZIONI PER L'INCASSO • INSTRUCTION FOR INSTALLATION • INSTRUCTION POUR L'ENCASTREMENT • ANLEITUNG FÜR DEN EINBAU • INSTRUCTIES VOOR INBOUWEN • INSTRUCCIONES PARA EL EMPOTRADO • INSTRUÇÕES PARA ENCASTRAR

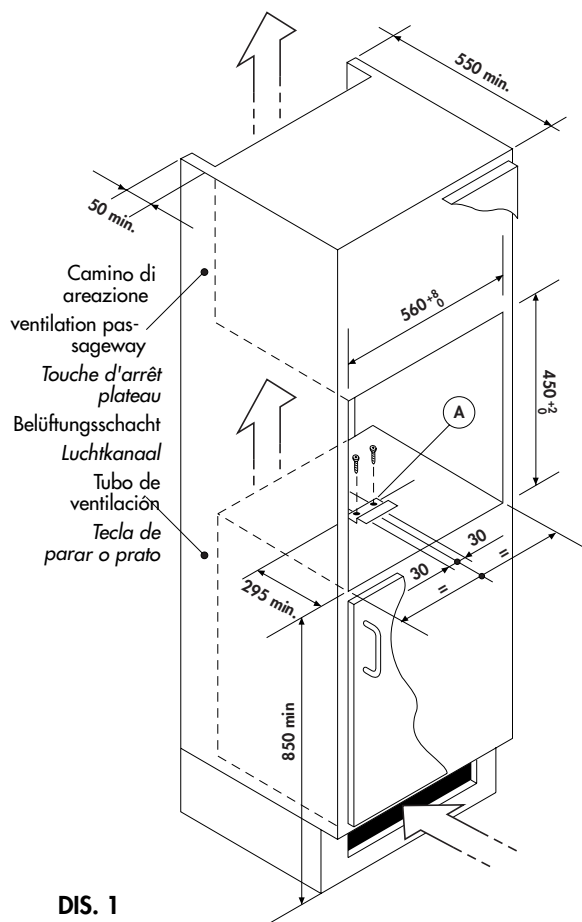

DIS. 1

Deve essere garantita un'apertura minima di 280 cm² per l'ingresso dell'aria di raffreddamento.

There must be a minimum space of 280 cm² in order for ventilation air to enter.

Prévoir obligatoirement une ouverture minimale de 280 cm² pour l'entrée de l'air de refroidissement.

Es muß eine Mindestöffnung von 280 cm² für den Eintritt der Kühlluft gewährleistet sein.

Een opening van minimaal 280 cm² dient gegarandeerd te worden voor de toevoer van lucht voor de afkoeling.

Se tiene que garantizar una abertura mínima de 280 cm² para el ingreso del aire de refrigeración.

Deve ser garantida uma abertura mínima de 280 cm² para a entrada do ar de arrefecimento.

1. Fissare la aletta **A** con le 2 viti da 13 mm (il tutto si trova nella busta accessori all'interno della cavità del forno).

Affix the metal strip (**A**) with the two 13 mm screws (all of which can be found in the accessory bag, inserted inside the oven cavity).


Fixer l'ailette **A** au moyen des 2 vis de 13 mm (le tout est coté nu dans le sachet des accessoires à l'intérieur de l'enceinte du four).

Den Bügel **A** mit den beiden 13 mm-Schrauben befestigen. (Diese Teile befinden sich im Zubehörbeutel im Garraum des Backofens).

Het vleugeltje **A** bevestigen met de 2 schroeven van 13 mm (deze onderdelen zijn te vinden het zakje met accessoires dat zich in de ovenruimte bevindt).

Fijar la aleta **A** con los dos tornillos de 13 mm (todo se encuentra en el sobre accesorios, en el interior de la cavidad del horno).

Fixar a palheta **A** com os dois parafusos de 13 mm (todos os elementos estão no envelope de acessórios dentro da cavidade do forno).

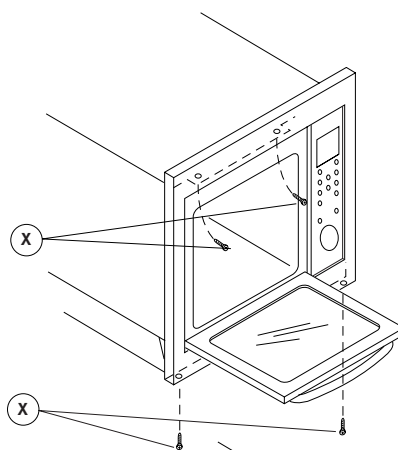

DIS. 2

2. Togliere le 4 viti **X** che fissano la cornice al forno, per poterla così rimuovere.

Remove the 4 screws **X** which affix the oven frame to the body of the oven in order to remove the frame.


Enlever les 4 vis **X** qui fixent le bandeau au four afin de pouvoir le retirer.

Die vier Befestigungsschrauben **X** der Backofeneinfassung lösen, die so entfernt werden kann.

De 4 schroeven **X**, waarmee de omlijsting van de oven vastzit, losdraaien, om deze te kunnen verwijderen.

Sacar los 4 tornillos **X** que fijan el marco del horno para poder, de este modo, extraerlo.

Retirar os 4 parafusos **X** que fixam a moldura no forno para poder retirá-la.

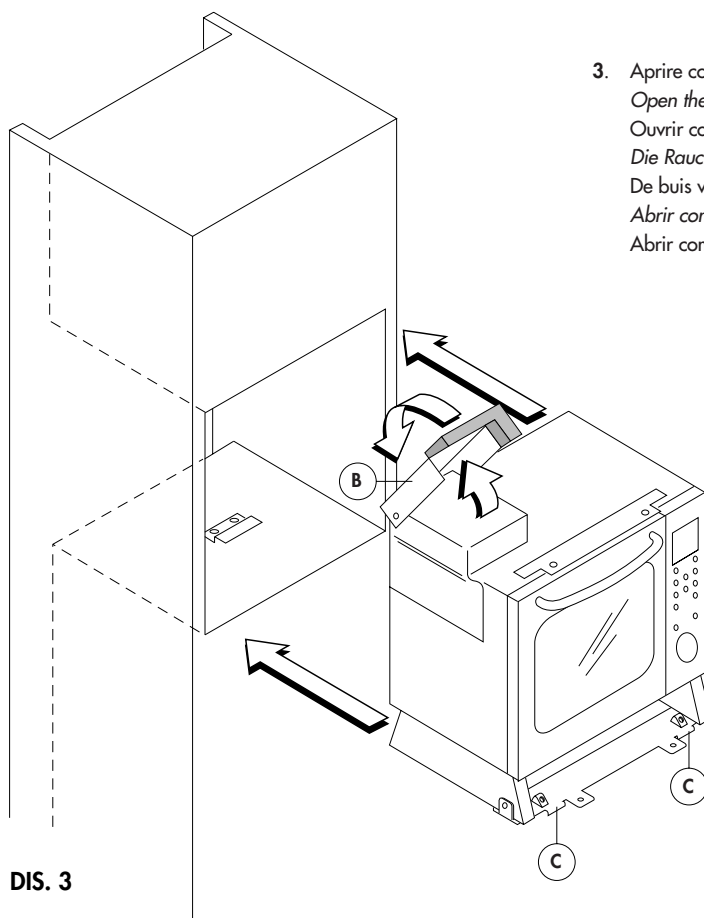

DIS. 3

3. Aprire completamente il condotto di scarico fumi **B**
*Open the fume exhaust exit **B** completely.*
 Ouvrir complètement le conduit d'évacuation de la fumée **B**.
*Die Rauchablaßleitung (**B**) vollständig öffnen.*
 De buis voor rookafvoer **B** helemaal openen.
 Abrir completamente el tubo de descarga humos **B**.
 Abrir completamente a conduta de descarga de fumo **B**.

4. Inserire l'apparecchio nella nicchia spingendo fino al contatto delle 2 alette **C** con il mobile.

*Insert the appliance into the niche, pushing it until the two strips (**C**) make contact with the cabinet.*

*Insérer l'appareil dans la niche en le poussant de manière à ce que les 2 ailettes **C** soient en contact avec le meuble.*

*Das Gerät in die Öffnung einsetzen und so weit drücken, bis die beiden Bügel **C** mit dem Möbel in Kontakt ge gen.*

*Het apparaat in de nis zetten en naar binnen duwen totdat de 2 vleugeltjes **C** tegen het meubel aanzitten.*

*Introducir el aparato en el hueco, empujándolo hasta el contacto de las dos aletas **C** con el mueble.*

*Inserir o aparelho no vão empurrando-o até que encontre a 2 palhetas **C** com o móvel.*

5. Mantenere una misura equidistante tra il forno e il mobile in modo da centrarlo all'interno della nicchia.
 Fissare l'apparecchio al mobile con 2 viti da 16 mm **D** che si trovano nella busta accessori.

*Keep an even distance between the oven and the cabinet in order to centre it properly inside the niche. Attach the appliance to the cabinet with two 16 mm screws (**D**) which can be found in the accessory bag.*


*Maintenir une mesure équidistante entre le meuble et le four afin de placer ce dernier bien au centre de la niche. Fixer l'appareil au meuble au moyen des 2 vis de 16 mm (**D**) contenues dans le sachet des accessoires.*

*Zwischen dem Backofen und dem Möbel einen gleichbleibenden Abstand halten, um ihn in der Öffnung zu zentrieren. Das Gerät mit den beiden 16 mm-Schrauben (**D**) am Möbel befestigen, die sich im Zubehörbeutel befinden.*


*Een gelijke afstand aanhouden tussen de oven en het meubel aan beide kanten zodat de oven in het midden van de nis komt te staan. Het apparaat aan het meubel bevestigen met 2 schroeven van 16 mm (**D**) die te vinden zijn in het zakje met accessoires.*

*Mantener una medida equidistante entre el horno y el mueble con el fin de centrarlo en el interior del hueco. Fijar el aparato al mueble con 2 tornillos de 16 mm (**D**) que se encuentran en el sobre accesorios.*

*Manter uma distância igual entre o forno e o móvel de modo que fique centrado dentro do vão. Fixar o aparelho no móvel com os 2 parafusos de 16 mm (**D**) que se encontram no envelope de acessórios.*

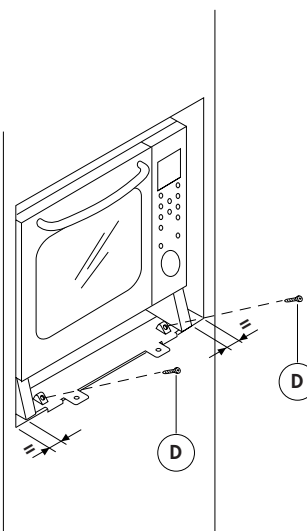

DIS. 4

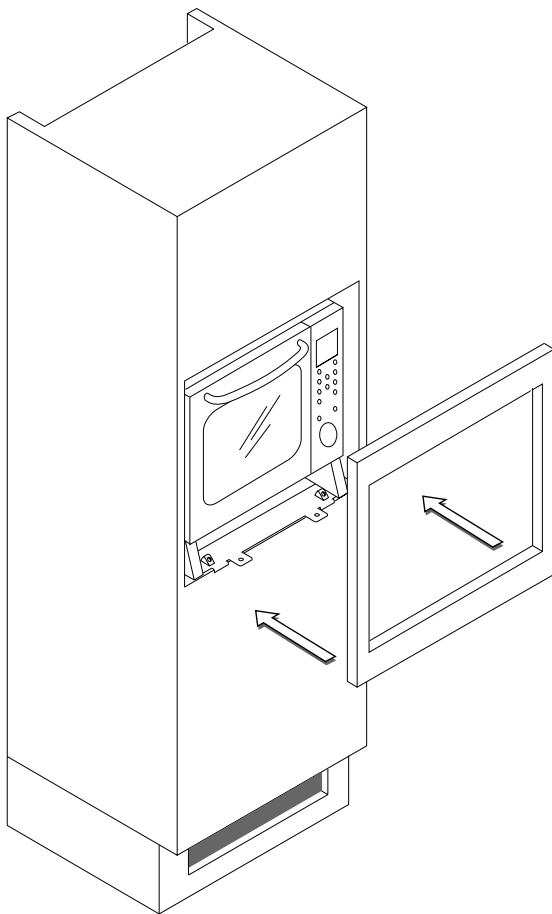

6. Riposizionare la cornice forno fissandola con le viti tolte precedentemente come da disegno 2.

Reposition the frame onto the oven, attaching it with the previously removed screws, as shown in design 2.


Remettre en place le bandeau du four en le fixant au moyen des vis enlevées précédemment comme illustré sur le dessin 2.

Die Einfassung des Backofens mit den zuvor gelösten Schrauben wieder anbringen, siehe Zeichnung 2.

De omlijsting van de oven weer op zijn plaats bevestigen met behulp van dezelfde schroeven waarmee de omlijsting in de eerste plaats vastzat, zoals aangegeven op tekening 2.

Volver a colocar el marco del horno, fijándolo con los tornillos que se han quitado anteriormente, como en el dibujo 2.

Recolocar a moldura do forno fixando-a com os parafusos retirados anteriormente, conforme ilustra o desenho 2.

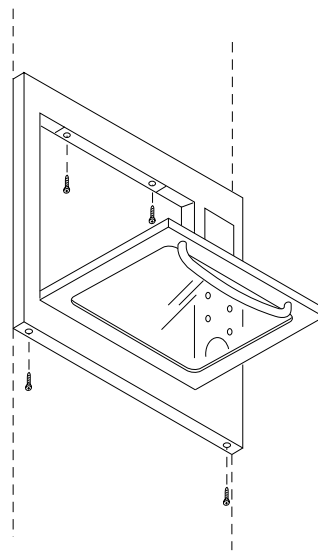

DIS. 5

COLLEGAMENTO ELETTRICO - AVVERTENZE:

Se l'apparecchio è provvisto di cavo di alimentazione E spina, fare in modo che la spina sia sempre accessibile. Se l'apparecchio è provvisto di cavo di alimentazione SENZA spina, collegare l'apparecchio ad un dispositivo di alimentazione fisso dotato di interruttore con distanza tra i contatti aperti non inferiore a 3 mm, dotato di messa a terra permanente.

ELECTRICAL CONNECTION - IMPORTANT:

If the appliance is provided with supply cord AND plug, the appliance shall be positioned so that the plug is always accessible. If the appliance is provided with a supply cord WITHOUT the plug, the appliance must be connected to a fixed main wiring incorporating a disconnection switch with contact separation of at least 3 mm in all poles and provided with permanent connection to earth.

RACCORDEMENT ÉLECTRIQUE - RECOMMANDATIONS

Si l'appareil est muni d'un câble d'alimentation ET d'une fiche, la fiche doit toujours être accessible. Si l'appareil est muni d'un câble d'alimentation SANS fiche, raccorder l'appareil à un dispositif d'alimentation fixe muni d'un interrupteur avec une distance entre les contacts ouverts de 3 mm au moins, muni d'une mise à la terre permanente.

ELEKTRISCHER ANSCHLUSS - HINWEISE:

Falls das Gerät mit einem Einspeisekabel UND einem Stecker ausgerüstet sein sollte, achten Sie bei der Positionierung des Geräts darauf, dass der Stecker stets zugänglich ist. Sollte das Gerät hingegen mit einem Einspeisekabel, aber OHNE Stecker ausgerüstet sein, verbinden Sie das Gerät an eine mit einem Schalter sowie einer Permanenterdleitung ausgestattete Festleitung, wobei der Abstand zwischen den Öffnungskontakten nicht unter 3 mm betragen sollte.

ELEKTRISCHE AANSLUITING - WAARSCHUWINGEN:

Indien het apparaat voorzien is van een stroomsnoer MET stekker, zorgt u ervoor dat de stekker steeds bereikbaar is. Indien het apparaat voorzien is van een stroomsnoer ZONDER stekker, koppelt u het apparaat op een vaste voedingsinrichting met schakelaar met een afstand tussen de contacten die niet minder dan 3 mm bedraagt en voorziet u een permanente aardleiding.

CONEXIÓN ELÉCTRICA - ADVERTENCIAS

Si el aparato está equipado con cable de alimentación Y clavija, procurar que sea siempre posible acceder a la clavija. Si el aparato está equipado con cable de alimentación SIN clavija, conectar el aparato a un dispositivo de alimentación fijo equipado con interruptor con una distancia mínima de 3 mm entre los contactos abiertos y con puesta a tierra permanente.

LIGAÇÃO ELÉCTRICA - ADVERTÊNCIAS:

Se o aparelho possuir cabo de alimentação E ficha, proceda de forma a que a ficha esteja sempre acessível. Se o aparelho possuir cabo de alimentação e NÃO tiver ficha, ligue-o a um dispositivo de alimentação fixo equipado com um interruptor cuja distância entre os contactos abertos não seja inferior a 3 mm, dotado de ligação à terra permanente.