 
 
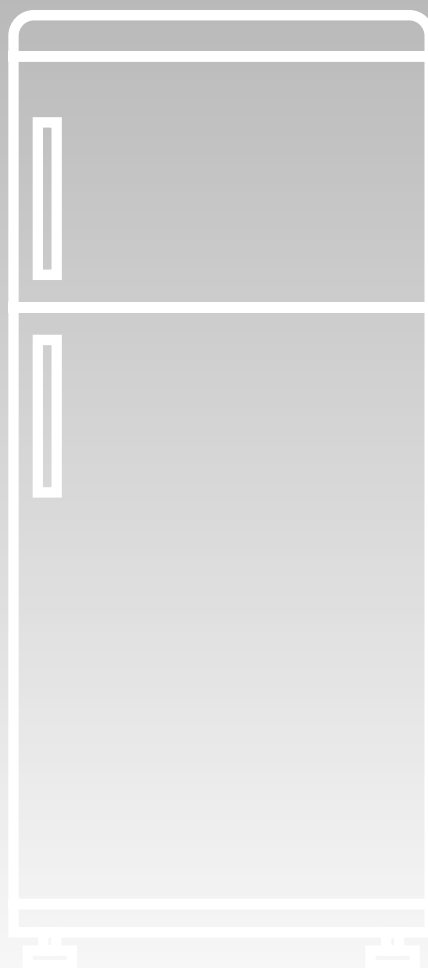 


## MAINTENANCE AND USER'S GUIDE

EN

Congratulations on purchasing this fridge, which has been designed using the latest technologies for an easy-to-use, environmentally friendly appliance.

We recommend you read this guide and the technical datasheet carefully to find out everything you need to know about your new fridge.



## A SPACE IS NEEDED BETWEEN „GENERAL“ AND „RECOMMENDATIONS“

This appliance is only intended for storing foods. Any other use is considered hazardous and the manufacturer may not be held liable for any damages.

**Conformity declaration:** the parts of this appliance intended to come into contact with foodstuffs conform to the directive 89/109/EEC and the Italian Law decree no. 108 of 25/01/92 implementing this directive.

CE Appliance conforming to the European directives 2004/108/EC and 2006/95/EC and subsequent amendments.

The dealer shall be notified of any damage within 7 days from purchasing the appliance.

We also recommend you read the terms of the warranty.

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.



This appliance is marked according to the European directive 2002/96/EC on Waste Electrical and Electronic Equipment (WEEE).

By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product.

The symbol on the product indicates that this product may not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. Disposal must be carried out in accordance with local environmental regulations for waste disposal.

For more detailed information about treatment, recovery and recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

Leave the power plug accessible even after the installation of the apparatus.

 
Do not use electrical devices inside the food compartments, except for the ones equipped with the apparatus or available from our service centres.

Before plugging in the appliance, make sure the voltage on the rating plate is the same as the voltage in your home. The rating plate is inside the appliance, in the bottom left-hand corner of the fridge compartment.

The manufacturer may not be held liable for any damage caused by unearthed wiring systems.

After you have installed the fridge, wait for at least two hours before turning it on.

To ensure your appliance works as efficiently as possible, leave at least a 5 cm gap between the fridge and the wall and between the fridge and items behind or above it (see diagram below).

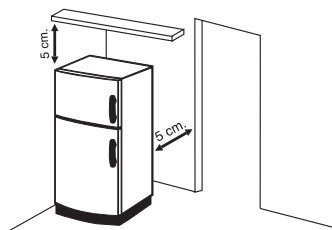


### What to avoid...

Do not install the fridge close to sources of heat.

Do not alter plugs or use adapter plugs or extension leads.

 If you have purchased a stainless steel fridge, it will have a peel-off film protecting the surface. Do not use sharp implements to remove the film, as these could damage the steel.

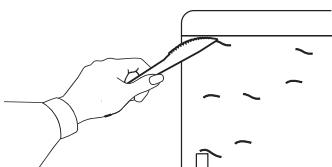

Do not install the appliance outside.

The appliance works properly at the following temperature ranges:

Climatic class: SN +10 +32°C

 
Climatic class: N +16 +32°C

Climatic class: ST +18 +38°C

Climatic class: T +18 +43°C

Climatic class: N/ST +16 +38°C

(See appliance's rating plate)

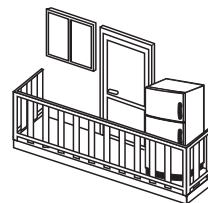


## RECOMMENDATIONS

We recommend the following, for greater energy saving:


- Do not put hot foods in the fridge.
- Do not pack foods close together as this prevents air circulating.
- Make sure foods do not touch the back of the fridge.
- If the electricity goes off, do not open the fridge door.

The fridge **makes some noises when working**. This is entirely normal and you might hear HUMMING, GURGLING, RUSTLING AND WHISTLING, as well as slight CLICKING OR JUMPING noises.

 
Adjust the feet to level the appliance.

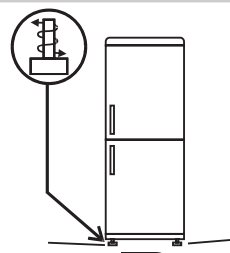

 
Make sure glass containers do not touch in the appliances.

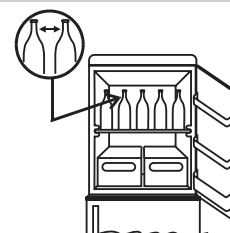

 Install the fridge leaving a gap between it and other furniture or appliances.

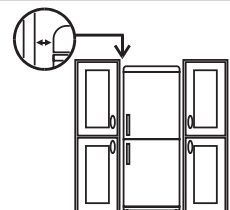

 Make sure accessories are installed properly.

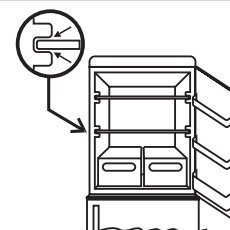

If you have followed the instructions, but your product continues to make irritating noises, other than those resulting from a normal functioning, please contact the technical support service.

## MAINTENANCE

Proper maintenance will ensure a long life for your appliance. Remember to remove the plug before you clean/defrost the fridge, change the fridge light bulb, etc.

### Cleaning

Clean the outside of the fridge at regular intervals with a damp cloth. Use a solution of bicarbonate of soda and water to clean the inside. Do not use abrasive products.

An outlet for draining water is located in the middle of the back of the fridge. Make sure this outlet is not obstructed; clean regularly.

### Defrosting

 
It is recommended to defrost the refrigerator each time an excessive layer of frost is formed, then leave the doors open with the apparatus switched off and avoid using sharp or mechanical objects (knives, scissors, etc) to remove the ice from the internal parts, in order to avoid damaging the refrigerating circuit.

NOTE: a small amount of ice on the back of the fridge compartment is normal.


### Replacing the fridge light bulb

To replace the light bulb in the fridge compartment:


Adjust the thermostat to „0“ and remove the plug from the socket.

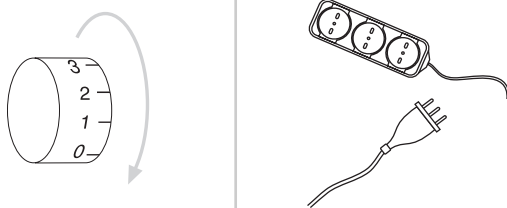

 
Use a flat screwdriver to lift up the grid and remove the see-through cover.

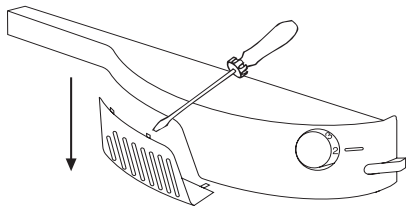

 Remove the light bulb and replace with the same type and same watt bulb.




 Re-fit the cover and plug in the appliance.

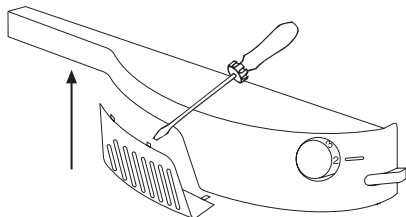

## STORING AND FREEZING FOODS

 To make sure foods retain their flavour and substance and stay fresh, store them in the fridge compartment as shown in the figure below. Wrap foods in tin foil or cling film or put them in closed containers.

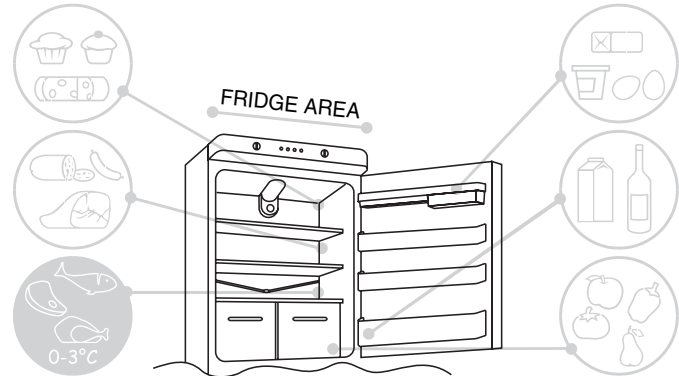

Frozen foods can be stored for approximately one month in compartments **\*\* \***.

See the table for storing foods in **\* \*\* \*** compartments.

Foods can only be frozen in **\* \*\* \*** compartments.

2 - 3 MONTHS			
4 - 6 MONTHS			
6 - 8 MONTHS			
10 - 12 MONTHS			

## Trouble-shooting

Please contact our service department if you have any difficulties. However you can often solve small or apparently alarming problems yourself. In fact problems may be caused by incorrect use or installation or by unsuitable ambient conditions and in these cases you will be charged.

### THE FRIDGE DOES NOT WORK

- Make sure the plug is inserted properly in the socket.
- Make sure the thermostat is not set to „0“ or Stop.
- Make sure the electricity is working.

### THE FRIDGE IS NOT COLD ENOUGH

- Make sure the thermostat is set properly. Adjust to higher settings.
- Make sure the fridge doors have not been left open for too long.
- Make sure you haven't stored too much food in the fridge.
- Make sure you haven't put hot foods in the fridge.

### THERE IS TOO MUCH FROST

- Make sure the door has not been left open for too long. Unplug the fridge, defrost and then turn it back on.
- Make sure the thermostat is not set at a temperature which is too cold (high settings). Adjust to lower settings.

### THERE IS TOO MUCH CONDENSATION

- Make sure the door has not been left open for too long.
- Make sure you haven't stored too many fresh foods in the fridge.
- Make sure you haven't put hot foods in the fridge.

### THERE IS WATER IN THE FRIDGE COMPARTMENT

- A few drops of water on the sides of the fridge compartment is normal, particularly when a room is humid/damp.
- Make sure the water outlet is not obstructed.

### THE LIGHT DOES NOT WORK

- Make sure the plug is inserted in the socket properly.
  - Make sure the electricity is working.
  - Follow the instructions in the technical datasheet to replace the bulb.
- If the problem continues, contact our service department, giving the appliance number and serial number on the rating plate.



 


## FROST FREE COMBIS

### CONTROL PANEL

Open the top door of the fridge in order to access the control panel.

Turn on the knob to switch on the appliance and set the temperature of the freezer compartment and Fridge. (Recommended setting – 2-3).  
Turn the knob to “0” to turn off the appliance.

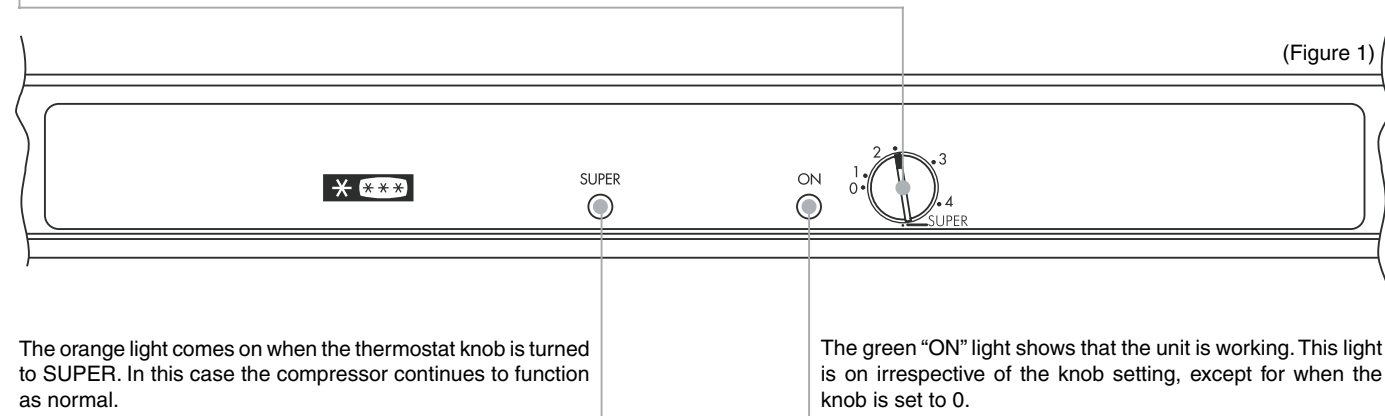

**Important: Some appliances will start to function at least 6 minutes after the plug has been connected to the power supply outlet and the temperature has been set.**

### FREEZING

The preservation of frozen foods is guaranteed in all of the freezer's compartments.  
During maximum capacity of the freezer, it is advised to remove the drawers and to place the food directly on the shelves for optimal freezing.

In some products there is a section in the top part, (see quick guide).


Place the foods to be frozen in the drawer, turn the thermostat clock-wise to SUPER position, and the orange light will come on (see figure 1).  
After 24 hours, freezing is completed. Therefore, reset the thermostat to position 2-3. The SUPER function is automatically disabled from the circuit board after 26 hours.

The rating plate states the maximum quantity of foods that can be frozen, (see figure 2).


**N.B. For better air circulation, leave some room in between the foods and avoid blocking the cooling air outlets.**

### DEFROSTING

 (Figure 2)

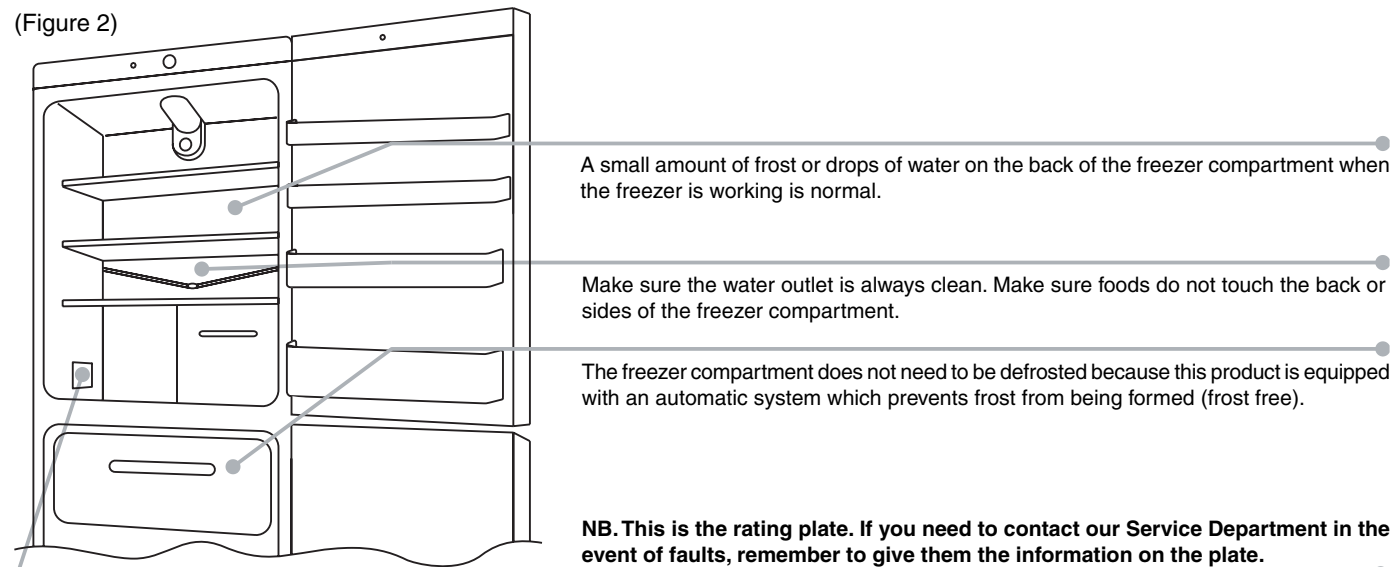





**Important: If the room temperature is very warm, the appliance may work continuously and a layer of frost will deposit on the back of the fridge compartment. In this case, turn the knob to lower settings (1-2).**

 

### REVERSING THE OPENING OF THE DOORS


In order to reverse the opening of the doors, follow the indications in relation to the insert and hinge type your product is made up of.

    **A**

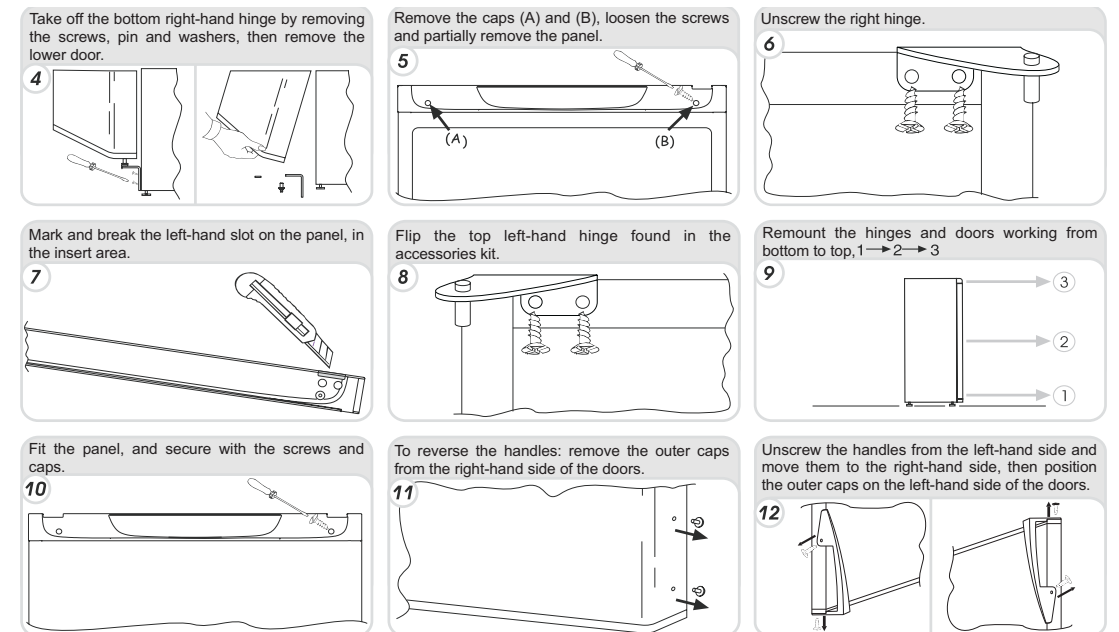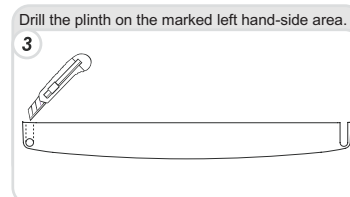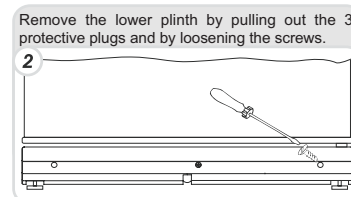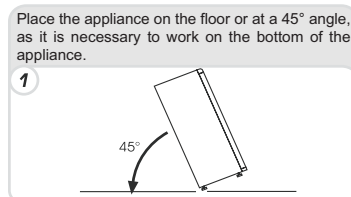


Put the appliance in an upright position and wait two hours before turning it on.

**B**

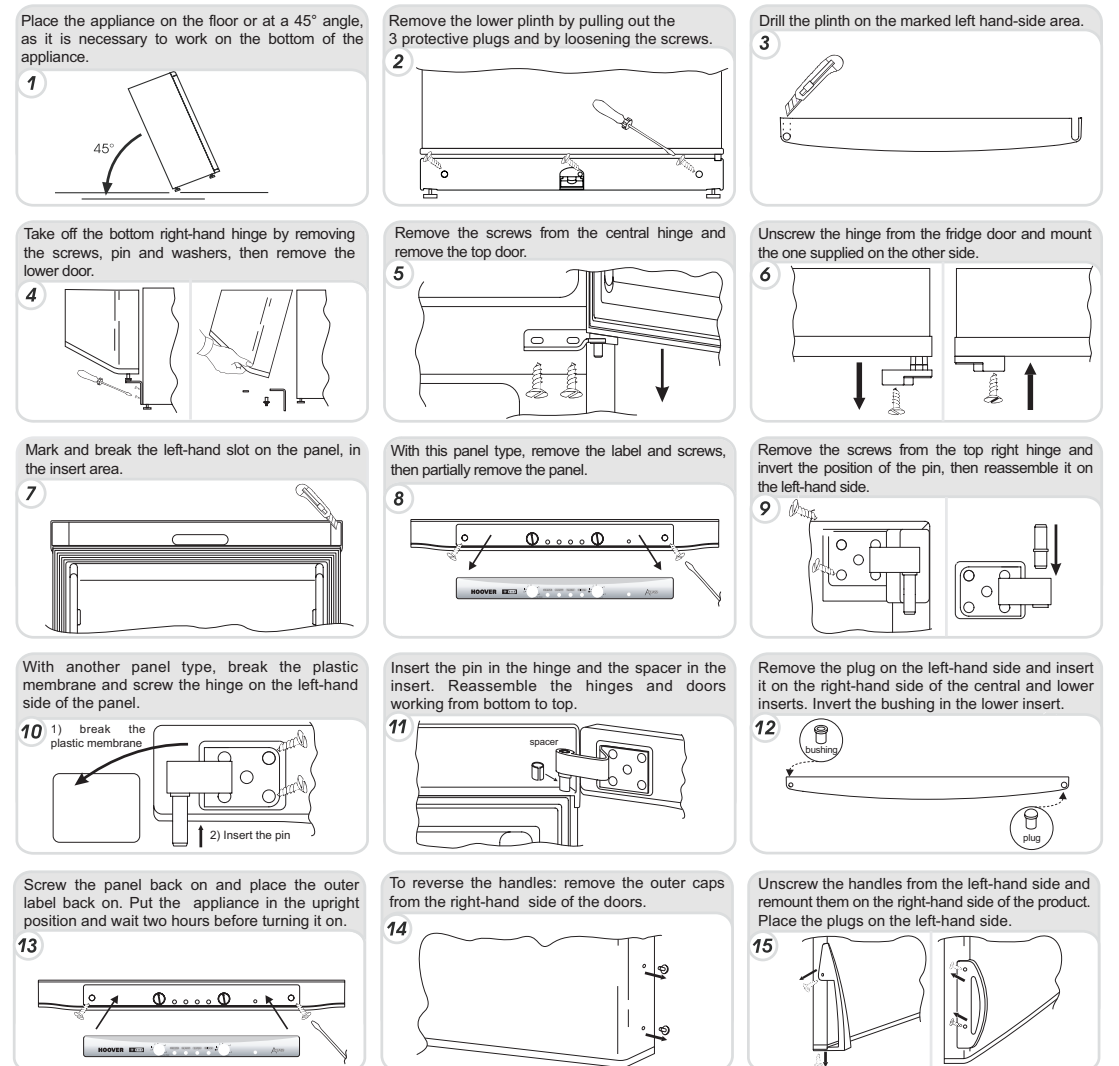 


**TOTAL NO FROST**

 I prodotti total No frost sono costituiti da un sistema di aereazione composto da 2 bocchette regolabili manualmente  
Si consiglia di tenere le bocchette parzialmente e completamente aperte

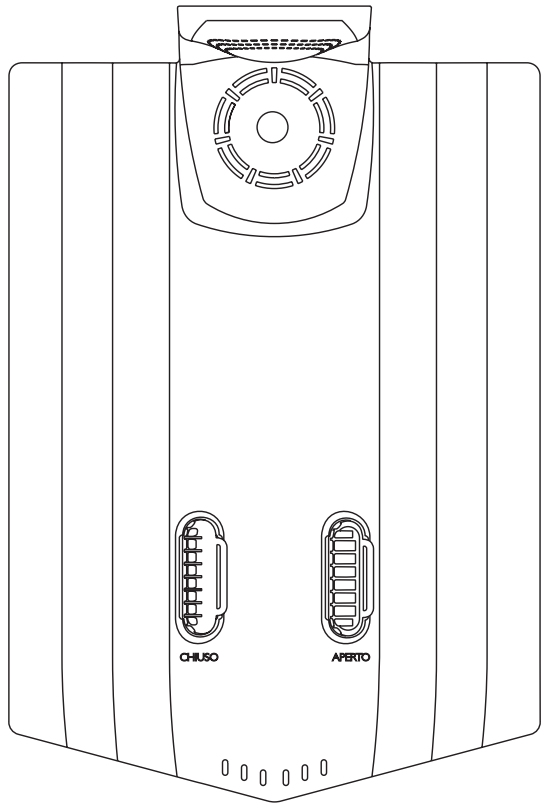


**FROST FREE PLUS**

 The Frost Free Plus system uses the two manually adjustable vents to circulate cold air evenly around the fridge.  
It is recommended that the vents are kept partially or completely open

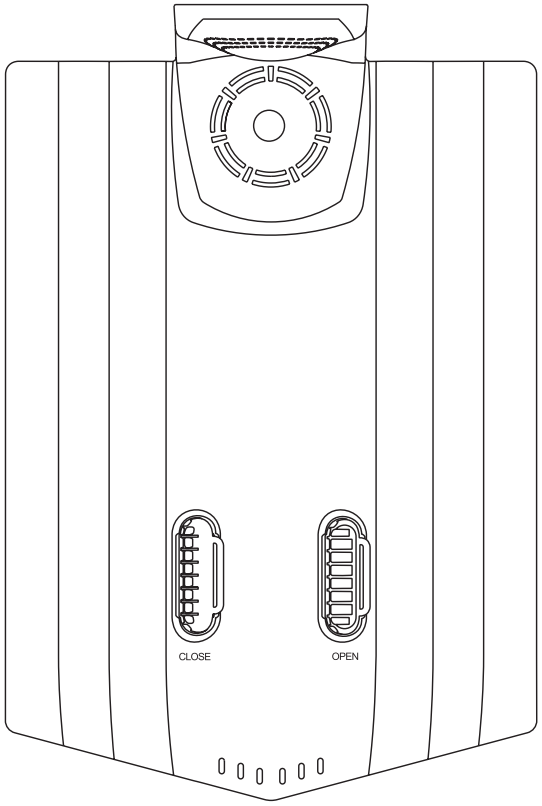


**VÖLLIG FROSTFREI**

 Die völlig frostfreien Produkte bestehen aus einer Lüftungsanlage, die sich aus zwei von Hand einstellbaren Düsen zusammensetzt  
Es wird empfohlen, die Öffnungen jeweils teilweise und vollständig geöffnet zu halten.

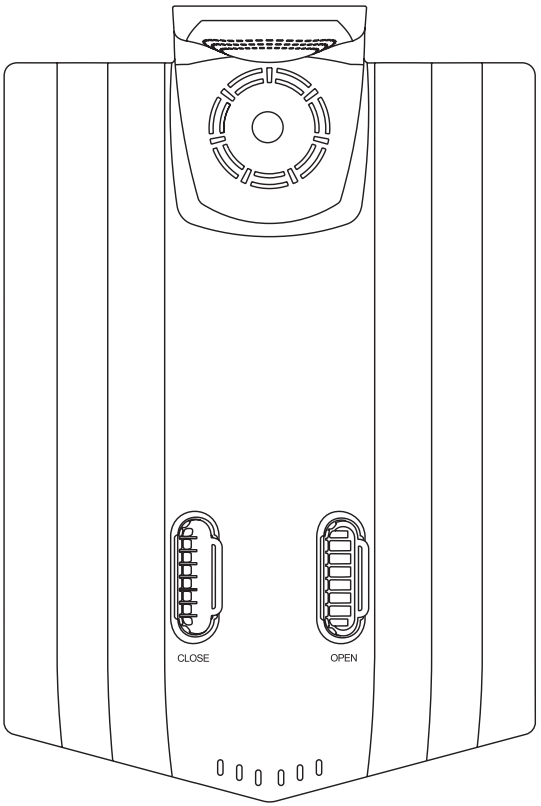


**NO FROST TOTAL**

 Los productos Total No frost estan compuestos por un sistema de ventilación formado por dos difusores ajustables manualmente.  
Es recomendable mantener las aberturas parcial o totalmente abiertas

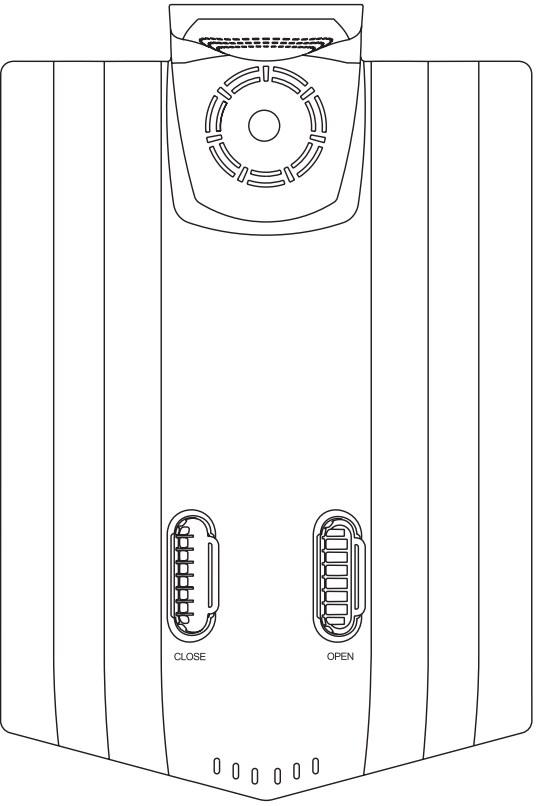


**NO FROST TOTAL**

 Os equipamentos No Frost são compostos por um sistema de ventilação que inclui 2 bocais manualmente ajustáveis.  
É recomendável manter as aberturas parcial ou totalmente abertas.

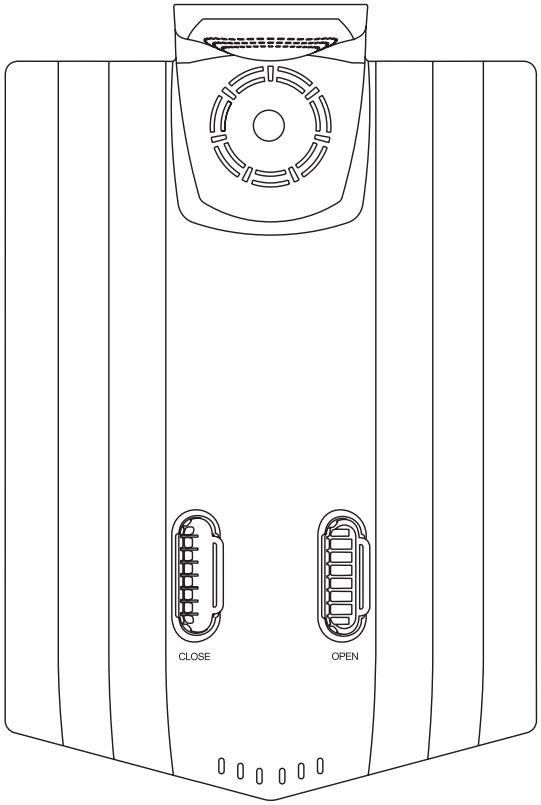


**NO FROST TOTAL**

 Les produits total No Frost sont constitués d'un système de ventilation qui comprend 2 sorties d'air froid, réglables manuellement.  
Il est recommandé de maintenir les ouvertures partiellement et complètement ouvertes.

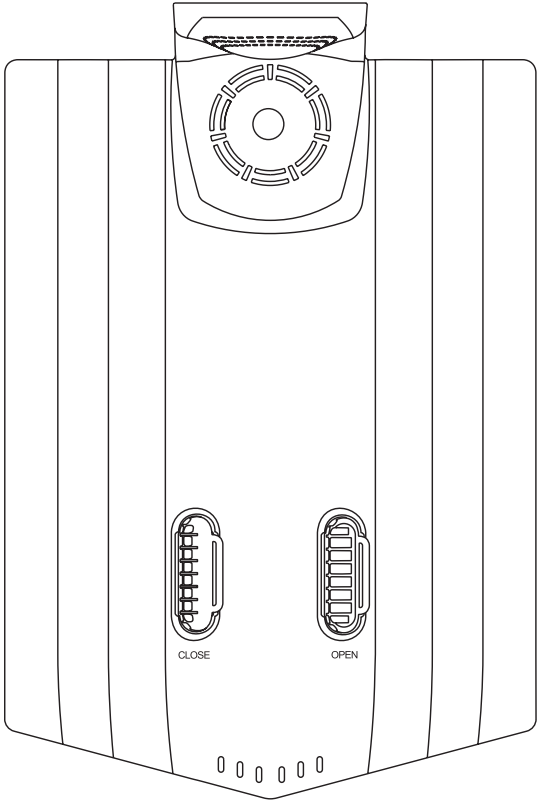


**ΠΛΗΡΩΣ ΑΥΤΟΜΑΤΗ ΑΠΟΨΥΞΗ**

 Τα προϊόντα με πλήρως αυτόματη απόψυξη αποτελούνται από ένα σύστημα αερισμού το οποίο περιλαμβάνει 2 ακροφύσια που ρυθμίζονται χειροκίνητα  
Συνιστάται να διατηρείτε τα ανοίγματα εν μέρει και πλήρως ανοικτά

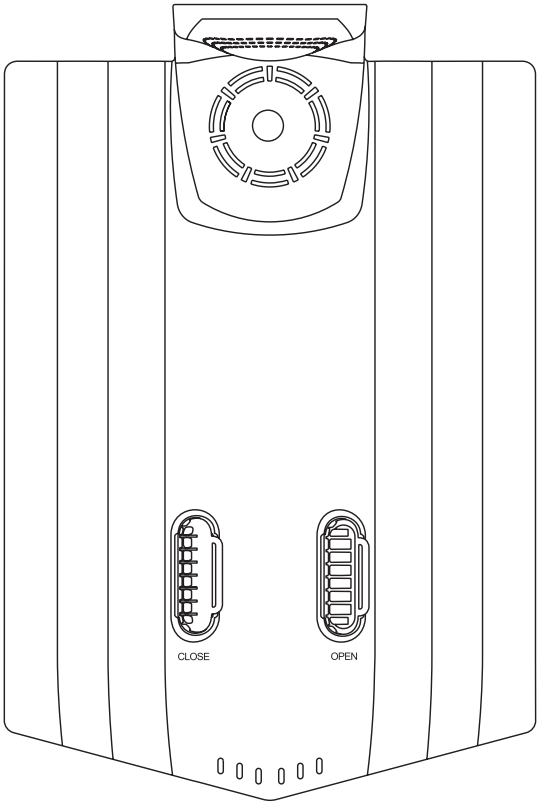

**CAŁKOWICIE AUTOMATYCZNE ROZMRAŻANIE**

 
Produkty z systemem całkowicie automatycznego rozmrażania zawierają system wentylacyjny, w którego skład wchodzi dwie ręcznie regulowane dysze  
Zaleca się, aby otwory pozostawały częściowo lub całkowicie otwarte

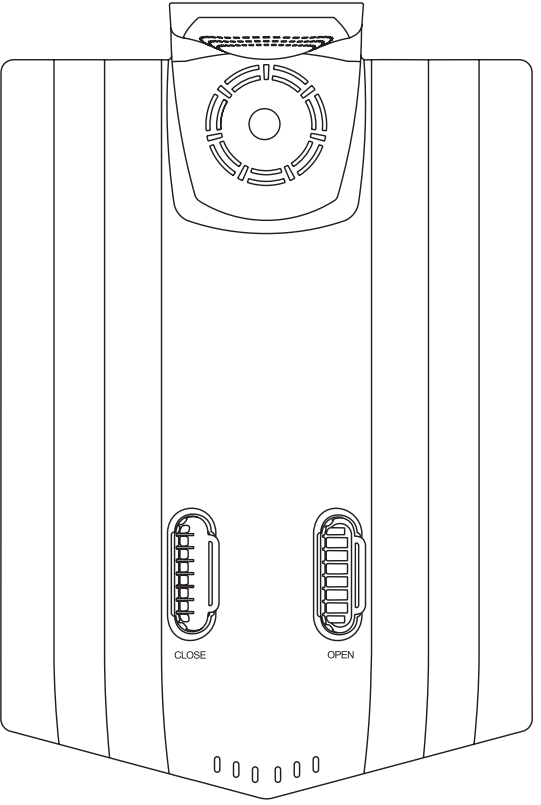




**TOTAL FROST FREE**

 Výrobky s označením Total No frost jsou vybaveny systémem větrání, který je tvořen 2 ručně nastavitelnými větracími otvory.  
Doporučujeme nechat tyto otvory částečně a úplně otevřené.

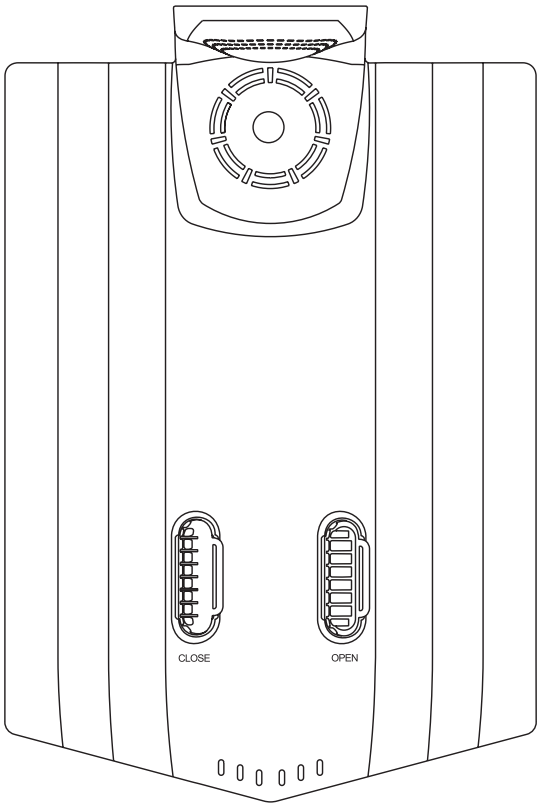


**TOTAAL 'FROST FREE'**

 De 'totaal frost free' producten hebben een ventilatiesysteem dat twee handmatig verstelbare openingen bevat  
Het is aan te bevelen om de openingen gedeeltelijk of compleet open te houden

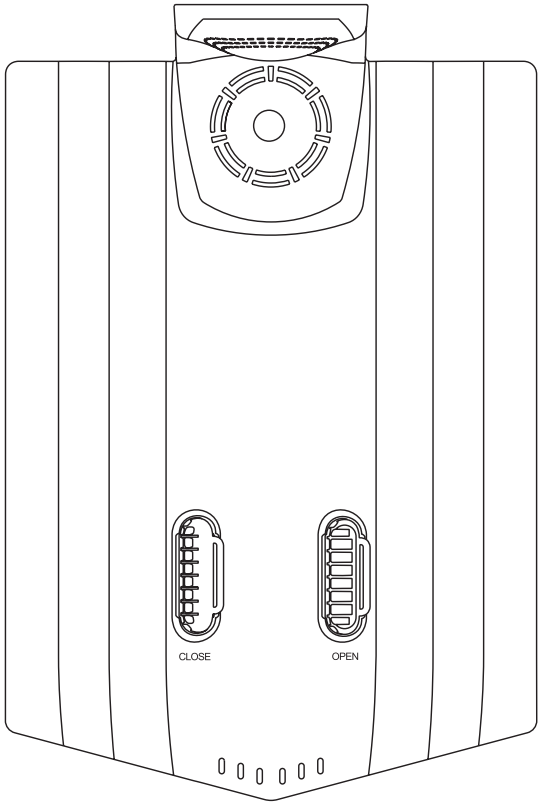


**HELT FROSTFRI**

 Helt frostfria produkter består av ett ventilationssystem som består av 2 manuellt justerbara munstycken  
Vi rekommenderar att öppningarna hålls delvis och helt öppna

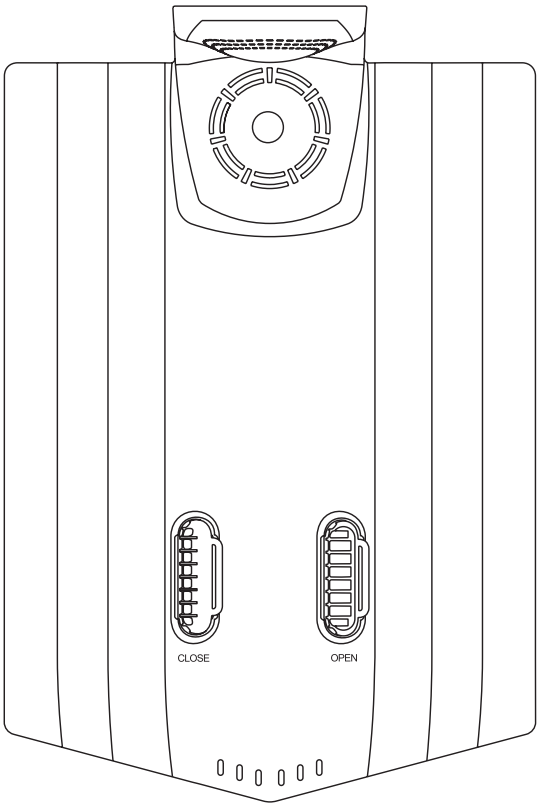


**TOTAL FROSTFRI**

 Totalt frostfrie produkter består af et ventilationssystem, som indeholder 2 manuelt justerbare dyser  
Det anbefales at holde åbningerne delvist og fuldstændigt åbne

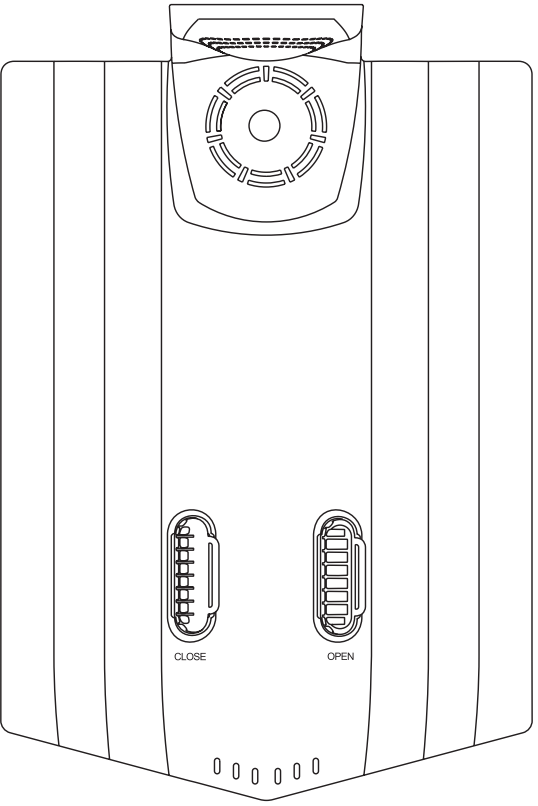

**TOTAL FROST FREE**

 Total frost free -tuotteissa on ilmanvaihtojärjestelmä, joka muodostuu kahdesta manuaalisesti säädettävästä suuttimesta  
Suosittelemme pitämään aukot osittain ja täysin auki.

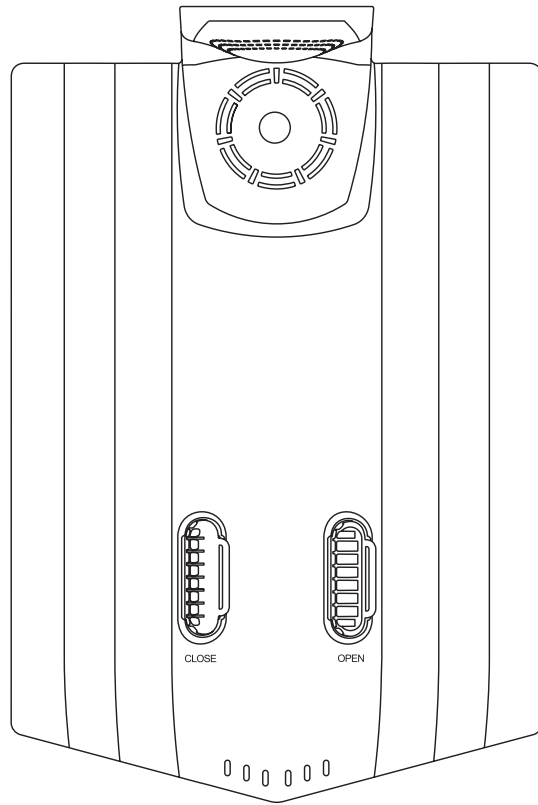

**TOTAL FROST FREE**

Total frost free-produktene har et ventilasjonssystem som består av to manuelt justerbare munnstykker  
Det anbefales å holde åpningene delvis og komplett åpne

