




BORN INNOVATIVE

HOOVER

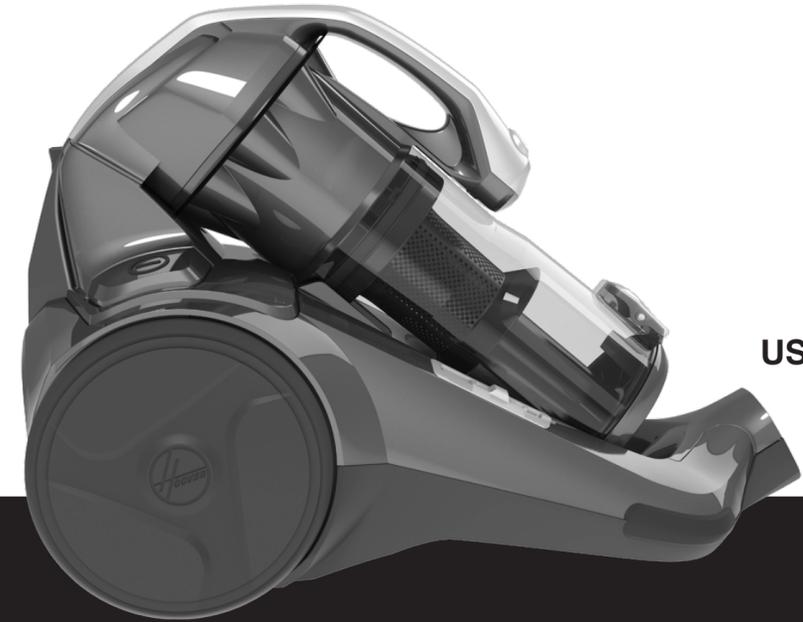


USER MANUAL




PRINTED IN P.R.C.
48022134





BORN INNOVATIVE

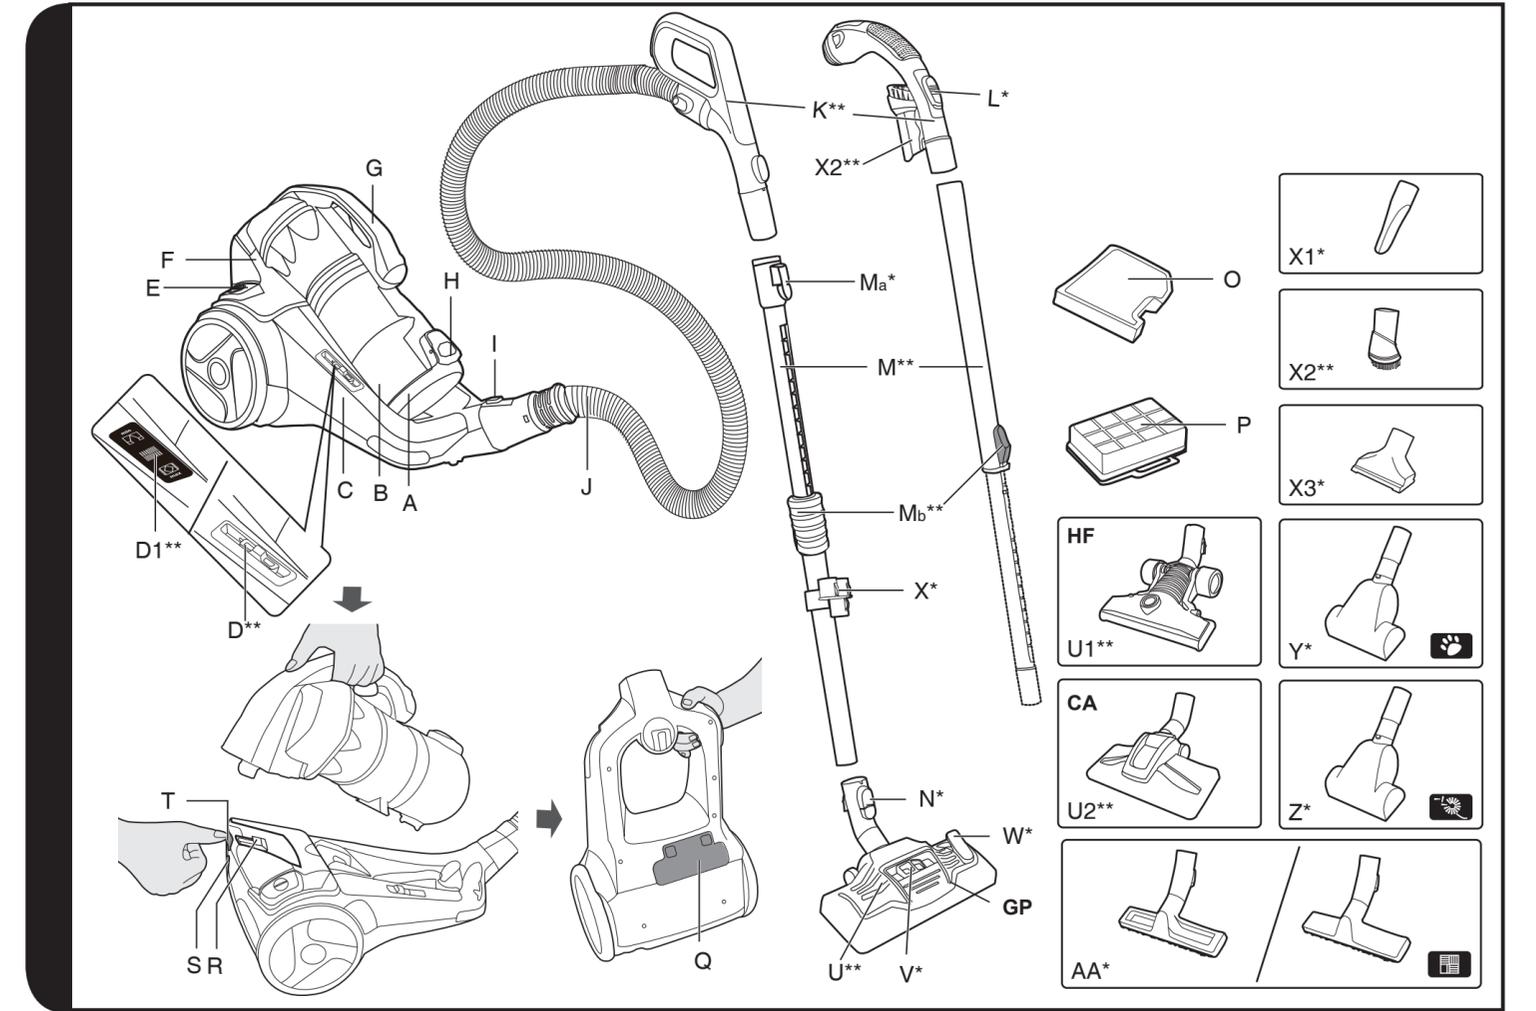

*Certain Models Only **May vary according to models

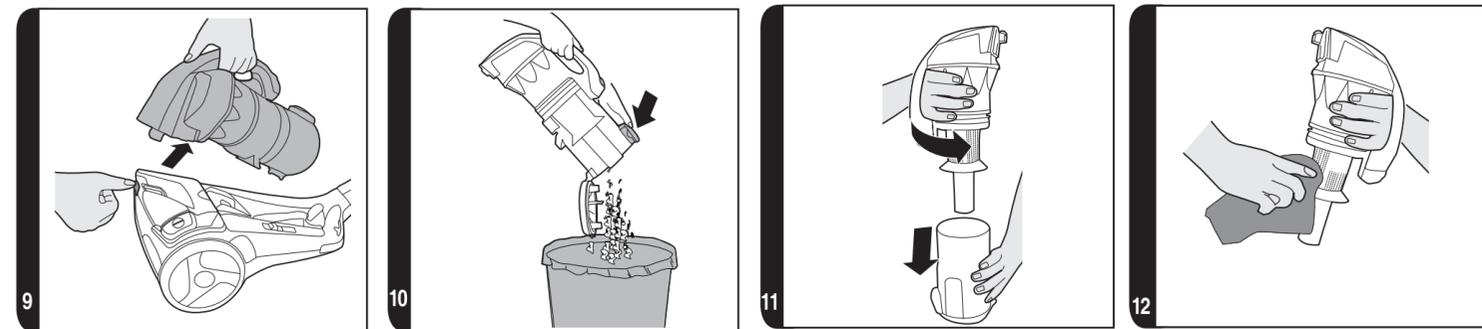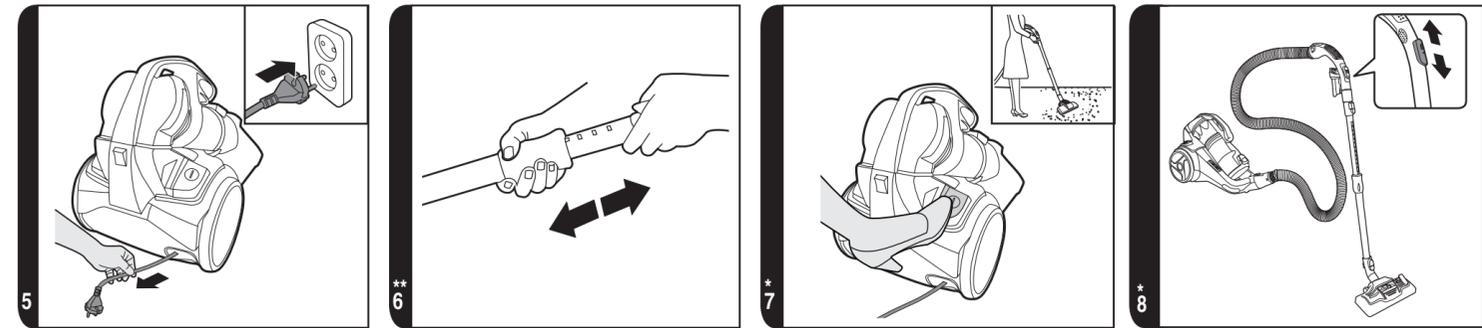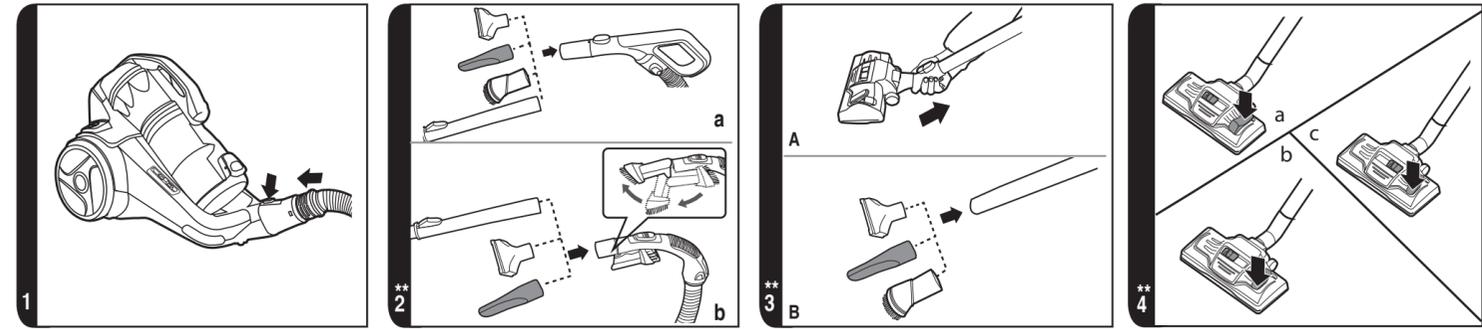

*Certain Models Only **May vary according to models

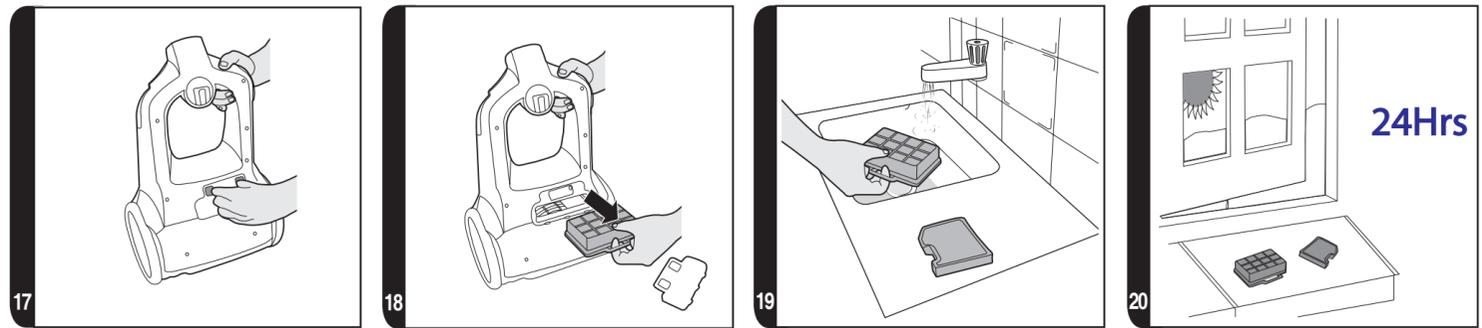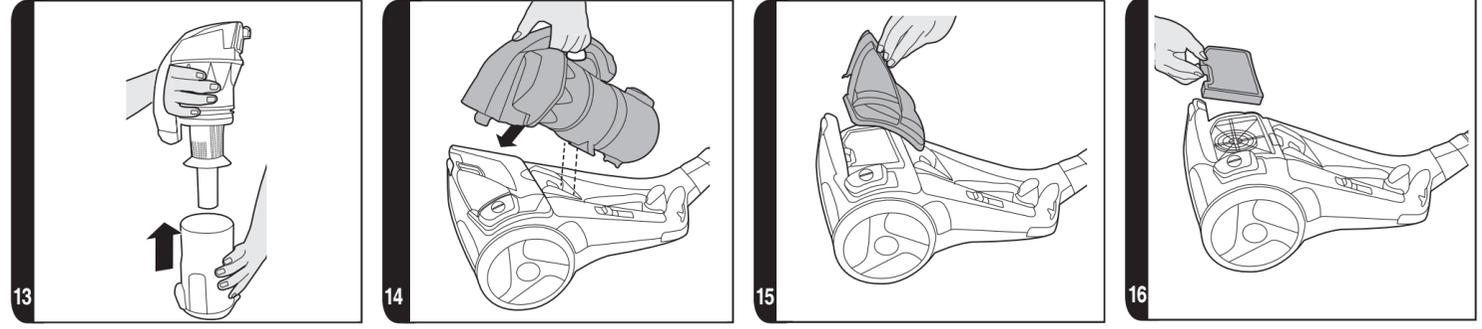

*Certain Models Only **May vary according to models

INSTRUCTIONS FOR SAFE USE

This appliance should only be used for domestic cleaning, as described in this user guide. Please ensure that this guide is fully understood before operating the appliance.

Do not leave the appliance plugged in. Always switch off and remove the plug from the socket after use, or before cleaning the appliance or any maintenance task.

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

If the power cord is damaged stop using the appliance immediately. To avoid a safety hazard, an authorised HOOVER service engineer must replace the power cord.

Keep hands, feet, loose clothing and hair away from rotating brushes.

Use only attachments, consumables or spares recommended or supplied by HOOVER.

Static electricity: Some carpets can cause a small build up of static electricity. Any static discharge is not hazardous to health.

Do not use your appliance out of doors or on any wet surface or for wet pick up.

Do not pick up broken glass or other sharp objects, matches, hot ashes, cigarette ends or other similar items.

Do not spray with or pick up flammable liquids, cleaning fluids, aerosols or their vapours.

Do not run over the power cord when using your appliance or remove the plug by pulling on the power cord.

Do not continue to use your appliance if it appears faulty.

Do not open the bin flap or press the bin flap release button when cleaner is working.

HOOVER service: To ensure the continued safe and efficient operation of this appliance we recommend that any servicing or repairs are only carried out by an authorised HOOVER service engineer.

Do not stand on or wrap the cord around arms or legs when using your appliance.

Do not use the appliance to clean animals or people.

Do not position the appliance above you when cleaning the stairs.

Do not use to pick up sand, masonry dust or other construction materials.

The Environment

The symbol on this appliance indicates that this appliance may not be treated as household waste. Instead it must be handed over to the applicable collection point for the recycling of electrical and electronic equipment. Disposal must be carried out in accordance with local environmental regulations for waste disposal.  For more detailed information about treatment, recovery and recycling of this appliance, please contact your local city office, your household and waste disposal service or the shop where you purchased the appliance.

 This appliance complies with the European Directives 2014/35/EU, 2014/30/EU and 2011/65/EU.

CANDY HOOVER GROUP S.r.l. Via Privata Eden Fumagalli, 20861 Brugherio (MB) Italy

GETTING TO KNOW YOUR CLEANER

- | | |
|---------------------------------------|--|
| A. Dust Container Flap | P. Exhaust Filter |
| B. Dust Container | Q. Exhaust Filter cover |
| C. Main Cleaner | R. Pre-Motor Filter Cover Latch |
| D. Variable Power Control Slider** | S. Parking Slot |
| D1. LED display with touch controls** | T. Bin Release Latch |
| E. On/Off Pedal | U. Carpet and Floor Nozzle (GP)** |
| F. Pre-Motor Filter Cover | U1. Hard Floor Nozzle (HF)** |
| G. Bin Handle | U2. Carpet Nozzle (CA)** |
| H. Bin Flap Release Button | V. Carpet & Floor Nozzle Slider* |
| I. Hose End Latch Button | W. Floor Type Selector Pedal* |
| J. Hose | X. Accessories Holder* |
| K. Hose Handle** | X1. Crevice Tool* |
| L. Suction Regulator* | X2. Dusting Brush** |
| M. Telescopic Extension Tube** | X3. Furniture Nozzle* |
| Ma. Telescopic Tube Latch* | Y. Pet Hair Remover Mini Turbo Nozzle* |
| Mb. Telescopic Tube Adjuster** | Z. Allergen Remover Mini Turbo Nozzle* |
| N. Carpet and Floor Nozzle Latch* | AA. Parquet Nozzle* |
| O. Pre-Motor Filter | |

ASSEMBLING YOUR CLEANER

Remove all components from the packaging.

1. Fit the bin assembly to the cleaner making sure the hook has been positioned correctly in the main body . Then lock the container in place by pushing the bin handle down until the latch connects with the main body of the cleaner, you will hear a click when fully connected.[14]
2. Connect the hose to the cleaner main body, ensuring it clips and locks into position. To release the hose: simply press the hose end latch button on the hose end and pull. [1]
3. Connect the hose handle to the end of the extension tube upper [2a], or accessories if required. [2b]
4. Connect the extension tube lower to the carpet and floor nozzle** [3a] or accessories if required. [3]
5. The cleaning accessory tools* can be stored after use on the underside of the extension tube, using the accessories holder provided*.

*Certain Models Only **May vary according to models

USING YOUR CLEANER

1. Extract power cord and plug it into the power supply. Do not pull the cord beyond the red marker. [5]
2. Adjust the extension tube** to the desired height by moving the extension tube adjuster** up and raise or lower to the most comfortable cleaning position. [6]
3. After connecting the telescopic tube lower end to Carpet and Floor Nozzle** or accessories if required, press the floor type selector* pedal on the nozzle to select the ideal cleaning mode for the floor type:

Hard Floor – Brushes are lowered to protect the floor.

Carpet – Brushes are raised for deeper cleaning.

Carpet & Floor Nozzle:** [4]

- **Hard floor Cleaning:** Press the pedal on the nozzle on Hard Floor mode and adjust the slider on the nozzle on ALL FLOORS. In this position brushes, wheels and wiper blade are lowered to protect hard floors. [4a]

- **Standard Carpet & Rugs Cleaning:** Press the pedal on the nozzle on Carpet mode and adjust the slider on the nozzle on ALL FLOORS. In this position brushes and wiper blade are raised while wheels are lowered to allow a perfect ease of movement on such surfaces. [4b]

- **Deep Carpet cleaning:** Press the pedal on the nozzle on Carpet mode and adjust the slider on the nozzle on DEEP CARPET CLEANING. In this position brushes, wheels and wiper blade are raised for a deeper cleaning of your carpet. [4c]

WARNING: It is recommended to avoid potential scratching of wooden floors that the pedal is not set on hard floor mode and the slider on deep carpet cleaning.

4. Switch the cleaner on by pressing the on/off pedal on the cleaner main body. [7]
5. Adjust the power level by pressing the variable power control buttons on the display** or by adjusting the variable power control slider**. [D1** & D**]
6. Adjust the suction by moving the suction regulator* to the desired level. [8]
7. Switch the cleaner off at the end of use by pressing the on/off pedal. Unplug and pull the power cord again to wind the power cord back into the cleaner. [5]

Parking and storage – The tube can be parked on the back of the cleaner for storage or temporary storage while in use.

ACCESSORIES

To obtain the best performance and energy efficiency^{#1} it is recommended that the correct nozzles are used for the main cleaning operations. These nozzles are indicated in the diagrams by the letters **GP**, **HF** or **CA**.

A nozzle type **GP** can be used to clean both carpet and hard floor.

A nozzle type **HF** is suitable for use only on hard floor.

A nozzle of type **CA** is suitable for use only on carpet.

The other nozzles are accessories for specialist cleaning tasks and are recommended for occasional use only.

It is important to note that this vacuum cleaner is supplied with an Energy Label as required by European Regulation (EU) 665/2013.

If the label shows a red prohibition circle on the left covering the carpet symbol, then this indicates that the vacuum cleaner is not suitable for use on carpets.

If the label shows a red prohibition circle on the right covering the hard floor symbol, then this indicates that the vacuum cleaner is not suitable for use on hard floors.

#1 NOTE: Dust pick up ability carpet, dust pick up ability hard floor, and energy efficiency in accord with Commission Regulations (EU) 665/2013 and (EU) 666/2013.

The crevice tool*, furniture nozzle* and dusting brush** are stored on the telescopic tube through a practical accessories' holder. They can be fitted to the handle or the end of telescopic tube.

On certain models the dusting brush is conveniently integrated in the hose handle.

Crevice Tool* – For corners and hard to reach areas.[X1]

Dusting Brush**– For bookshelves, frames, keyboards and other delicate areas.[X2]

Furniture Nozzle* – For soft furniture and fabrics.[X3]

Parquet Nozzle* – For parquet floors and other delicate floors.[AA]

Pet Hair Remover Mini Turbo Nozzle* - Use the mini turbo nozzle on stairs or for deep cleaning on textile surfaces and other hard to clean areas. Particularly suitable for pet hair removal. [Y]

Allergen Remover Mini Turbo Nozzle* – Use the mini turbo nozzle on stairs or for deep cleaning on textile surfaces and other hard to clean areas. Particularly suitable for allergen removal. [Z]

IMPORTANT: Do not use mini turbo nozzles on rugs with long fringes, animal hides and carpet pile deeper than 15mm. Do not keep the nozzle stationary while brush is rotating.

CLEANER MAINTENANCE

Emptying the Dust Container

When the dust reaches the max level indicator on the container, empty the dust container.

IMPORTANT: To maintain optimum performance do not allow the dust to sit higher than the max level.

1. Release the dust container pressing the bin release latch to detach the dust container from the main cleaner and pull upward to remove.[9]
2. Once the dust container is released from the main cleaner body, hold it by the handle grip and put it above a waste container. With the other hand press the bin flap release button to open the container and release the dust. [10]
3. Once emptied, close the bin flap and refit the dust container onto the cleaner

*Certain Models Only **May vary according to models

ensuring the hook has been positioned correctly in the main body. [14] Then lock the container in place by pushing the container bin handle down until the latch connects with the main body of the cleaner: you will hear a click when fully connected.

NOTICE: Ensure the power cord has been unplugged before emptying.

NOTICE: Ensure the bin flap has been closed before refitting it to the cleaner main body.

Cleaning the washable filters

The cleaner is fitted with pre- motor filter and exhaust filter. To maintain optimum cleaning performance, regularly remove the filters and tap against the side of the waste container to release dust. The filters should be washed every 5 dust container empties or when the filter has excessive dust level.

IMPORTANT: All bagless cleaners require regular filters cleaning. Failure to clean your filter may result in air blockage, overheating and product failure. This may invalidate your guarantee.

IMPORTANT: Regularly check and maintain the filters.

IMPORTANT: Always ensure the filter pack is fully dry before use.

To access the pre-motor filter:

IMPORTANT: Switch off and unplug the power cord before accessing the filters.

1. Release the dust container pressing the bin release latch to detach the dust container from the main cleaner and pull upward to remove. [9]
2. Release the pre-motor filter cover pressing the pre-motor filter cover latch and rolling pre-motor filter cover on the opposite edge. [15]
3. Remove the filter from main cleaner and wash it by hand using warm water. Do not use hot water or detergents. Remove excess water from the filter and leave to dry fully before reusing. [16,19,20]
4. Refit it to the cleaner once fully dry. Press on the top of the filter to ensure it is back into place. [16]
5. Lock the pre-motor filter cover pressing at the top: you will hear a click once the pre-motor filter cover fits into place. [15]
6. Refit the dust container to the cleaner ensuring the hook has been positioned correctly in the cleaner body. Then lock the container in place pushing the container bin handle down until the latch connects with the main body of the cleaner: you will hear a click when fully connected. [14]

To access the exhaust filter located on the base of the cleaner.

1. Unlock the exhaust filter cover pressing two buttons and pulling outward from the main cleaner. [17]
2. Remove the filter pack pulling the ring-pull of the exhaust filter.[18]
3. Gently tap and wash the filter pack. Do not use hot water or detergents. Remove excess water from the filter and leave to dry fully before using. [19,20]
4. Reassemble the filter pack once it is fully dry and refit it onto the cleaner inserting back into the location.
5. Lock the exhaust filter cover by pressing the edge with the clips: you will hear a click once the exhaust filter door fits into place. [17]

3 IMPORTANT: Do not use the product without the filter pack fitted.

Cleaning the dust container / multi-cyclonic separation unit

This cleaner uses a multi-cyclonic separation system, unique to Hoover. If necessary, the separation unit can be disassembled from the dust container and cleaned:

1. Release the dust container from the cleaner pressing the bin release latch to detach the dust container from the main cleaner and pull upwards to remove. **[9]**
2. Hold the dust container with one hand and with the other rotate the dust bin handle anti clockwise to release it from the container. **[11]**
3. Remove the multi-cyclonic separation unit from the dust container pulling the handle. **[11]**
4. If necessary, use a cloth to remove excessive dust from the multi-cyclonic unit surface. **[12]**
5. Reassemble the multi-cyclonic separation unit with the dust container and rotate it in position. **[13]**
6. Refit the dust bin to the cleaner ensuring the hook has been positioned correctly in the cleaner body. Then lock the container in place by pushing the handle down until the latch connects with the main body of the cleaner: you will hear a click when fully connected. **[14]**

Removing a blockage from the system

1. Check if the dust container is full. If so, refer to “Emptying the dust container”.
2. If the dust container is empty but suction is still low:
 - A. Do the filters need cleaning? If so, refer to “Cleaning the washable filters”.
 - B. Check if there is any other blockage in the system. Use a rod or pole to remove any blockage from the extension tube or flexible hose.
 - C. Check if pre-motor filter is fitted and filter cover is entirely closed.
 - D. Check if the dust container is fitted into place.
 - E. Check if the multi-cyclonic unit needs to be cleaned. Refer to “Cleaning the multi-cyclonic unit”.

USER CHECK LIST

Should you have a problem with the product, complete this simple user checklist before calling your local Hoover service.

- Is there a working electricity supply to the cleaner? Please check with another electrical appliance
- Is the dust container over-filled? Please refer to “emptying the dust container”.
- Is the filter blocked? Please refer to ‘Cleaning the washable filters’.
- Check if the pre-motor filter is fitted correctly and filter cover is entirely closed.
- Check if the dust container is fitted into place.
- Check if the multi-cyclonic unit needs to be cleaned. Refer to “Cleaning the multi-cyclonic unit”.
- Is the hose or nozzle blocked? Please refer to ‘Removing a blockage from the system’.

***Certain Models Only **May vary according to models**

- Has the cleaner overheated? If so, it will take approximately 30 minutes to automatically reset.

IMPORTANT INFORMATION

Hoover spare and Consumables

Always replace parts with genuine Hoover spares. These are available from your local Hoover dealer or direct from Hoover. When ordering parts always quote your model number.

Hoover Service

Should you require service, spares and consumables at any time, please contact your local Hoover Service Office.

Quality

Hoover’s factories have been independently assessed for quality. Our products are made using a quality system which meets the requirements of ISO 9001

Your Guarantee

The guarantee conditions for this appliance are as defined by our representative in the country in which it is sold. Details regarding these conditions can be obtained from the dealer from whom the appliance was purchased. The bill of sale or receipt must be produced when making any claim under the terms of this guarantee.

Subject to change without notice.