



ENGLISH

PLEASE READ THESE INSTRUCTIONS THOROUGHLY

This product must be assembled and should only be used for its intended purpose as described in these instructions. Use only for domestic cleaning.

Safety reminders.

- DO NOT pick up liquids, hard or sharp objects, matches, hot ashes, cigarette ends or other similar items.
- DO NOT pick up solvent based products or inflammable liquids such as cleaning fluids, petrol, etc., or their vapours.
- DO NOT use the appliance if it appears to be faulty, or the cord to the charger is damaged.
- DO NOT replace the NiMH battery pack with nonrechargeable batteries. DO frequently clean the dust bin and filter assembly when picking up fine powder.
- DO recharge the batteries. Occasionally fully discharge the batteries to obtain maximum battery life.

FEATURES [1]

1. On/off Switch
2. Charging Light
3. Dust Cup Release Button
4. Crevice Tool
5. Dust Cup
6. Charging socket
7. Charger
8. Flip Flap Nozzle* - *Available only on certain models.

CHARGING

CHARGING

NOTE: Use only the charger supplied with your cleaner to recharge.
IMPORTANT: BEFORE FIRST USE, CHARGE YOUR CLEANER FOR AT LEAST 24 HOURS.

When charging the Cleaner power switch must be Off. Always recharge the cleaner after each use.

It is normal for the charger to become warm to the touch when charging. If the operating time reduces after repeated use, let the cleaner run until it stops, then recharge for 24 hours and repeat this monthly for best results.

1. Connect the charger to an ac wall outlet.
2. Connect the plug from the charger to the jack to charging socket. [2]
3. Before using the product disconnect the charger from the appliance and the ac outlet.

Important: Never charge the batteries in temperatures above 37°C or below 0°C.

HOW TO USE

TO USE: Slide the power switch to the ON position. Empty and clean the unit and filter after each use or when the unit becomes full.

ATTACHMENTS

The crevice tool is permanently stored on board for your convenience.

To Use

1. Flip crevice tool down to line up with nozzle and press up until securely in place. [3]
2. To store crevice tool: Pull down until loose. Flip up towards cleaner and clip back into storage area. [4]

FLIP FLAP NOZZLE

For easier and more comfortable dust removal on all surface types, either flat or irregular.

Fit the Flip Flap Nozzle onto the dust cup.

DUST CONTAINER & FILTER: REMOVAL AND REPLACEMENT IMPORTANT: FOR BEST RESULTS CLEAN THE FILTER AFTER EACH USE

1. Depress the release button and remove dust cup assembly. [5]
2. Hold dust container over waste bin and gently remove filter or Hepa filter*. [6]
3. Empty dust container. Brush the dust and dirt off the filter / Hepa filter* or shake the filter inside the waste bin. [7]
4. The filter may be washed in warm soapy water, make sure the filter is completely dry before replacing in your cleaner.
5. The Hepa filter* should be washed in warm water only. Do not use any detergent, make sure the hepa filter* is completely dry before replacing in your cleaner. [8]
6. Replace the filter/Hepa filter* into the dust container and re-assemble the dust container to the cleaner. [9, 10]

* Available only on certain models

End of product life battery disposal.

If the cleaner is to be disposed of the batteries should be removed. Used batteries should be taken to a recycling station and not disposed with household waste.

IMPORTANT: Always fully discharge the batteries before removal.

Battery removal

Remove dust container. Unscrew 6 screws and open the unit. Remove motor assembly and disconnect the cables. Remove the batteries.

Note: Should you experience any difficulties in dismantling the unit or for more detailed information about treatment, recovery and recycling of this product, please contact your local city office, your household waste disposal service.

WEEE

This appliance is marked according to the European Directive 2002/96/EC on Waste Electrical and Electronic Equipment (WEEE).

By ensuring this product is disposed of correctly you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product.

The symbol on the product indicates that this product may not be treated as household waste. Instead it shall be handed over to the appropriate collection point for recycling of electrical and electronic equipment.

Disposal must be carried out in accordance with the local environmental regulations for waste disposal.

For more detailed information about treatment, recovery and recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

GUARANTEE STATEMENT

Your new appliance is fully guaranteed for 12 months from the date of purchase against electrical/mechanical breakdowns excluding:

- a) Any faults which occur due to incorrect installation or misuse of the machine or accidental damage.
- b) Repair of, or interference with the machine by any person not authorised by the manufacturer to carry out service.
- c) Any parts which are fitted to the machine which are not original manufacturers parts.
- d) Non-domestic use of the machine.
- e) Operation at incorrect voltage.

The guarantee applies to Great Britain and Northern Ireland only. The foregoing does not affect your statutory rights.

Hoover spares and Consumables

Always replace parts with genuine Hoover spares. These are available from your local Hoover dealer or direct from Hoover. When ordering parts always quote your model number.

Hepa Filter - S90-35800831