




WINE COOLER
WEINKÜHLER
HANDBOK
BRUKERVEILEDNING
BRUGSVEJLEDNING
KÄYTTÖOHJE
REFRIGERADOR DE VINO
Vinska omara
CANTINETTA
BORHÚTÓ
WIJNKOELER
Cave à vin

DUAL TEMPERATURE ZONE
DUAL TEMPERATURE ZONE
DUBBLA TEMPERATURZONER
MED TO TEMPERATURSONER
TO TEMPERATURZONER
KAHDEN LÄMPÖTILAVYÖHYKKEEN
DOS TEMPERATURAS
Dva temperaturna območja
DUE ZONE DI TEMPERATURA
KETTŐS HŐMÉRSÉKLETI ZÓNA
TWEЕ TEMPERATUURZONES
Deux zones de températures indépendantes

HWC 2335
HWC 2336DL

LCD DISPLAY
LCD DISPLAY
M. DISPLAY MED
LCD-DISPLAY
LCD-DISPLAY
LCD-NÄYTTÖ
PANTALLA DE LCD
Prikazovalnik LCD
DISPLAY LCD
LCD KIJELZŐ
LCD-SCHERM
Ecran LCD

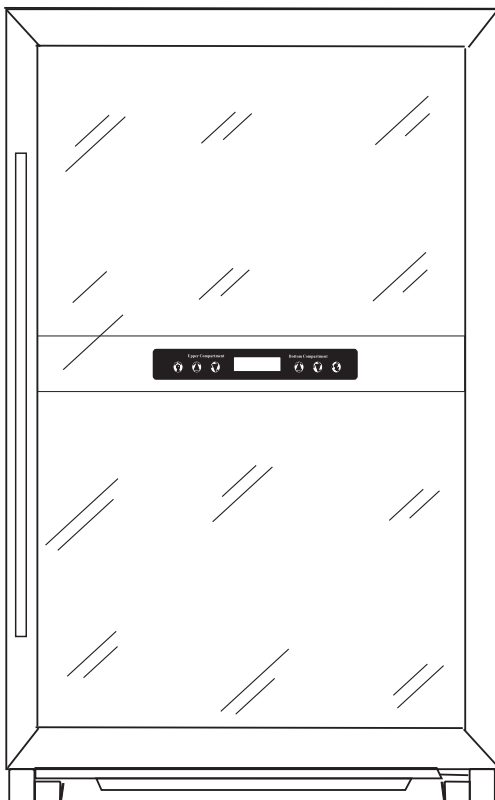


Please read this instruction booklet carefully before using your Hoover Wine Cooler

Thanks for your choice.

You are going to start a trip in a full taste and smell world, granting yourself. With your new Wine Cellar you could explore the real meaning of a glass of wine because . . . in "Hoover Wine Cooler" veritas!

PARTS AND FEATURES

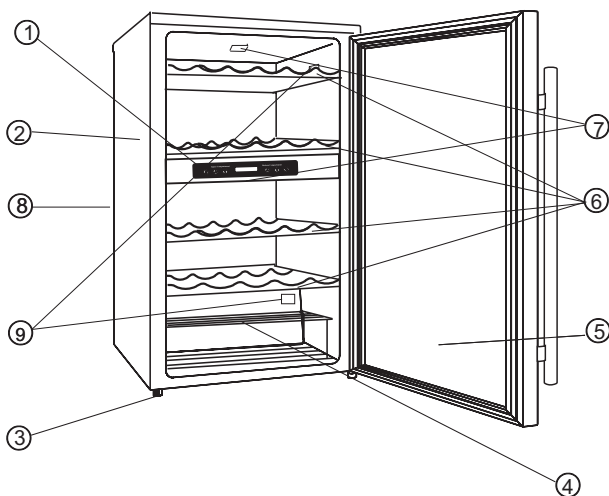

- 1. Operation and Display Panel**
- 2. Cabinet**
- 3. Levelling Leg**
- 4. Wine Rack**
- 5. Glass Door**
- 6. Wooden Shelves**
- 7. Interior Lamp**
- 8. Electrical Control Assembly (at the back)**
- 9. Temperature Sensor**

Important Safety Instructions

- Read all instructions before using the appliance.
- Child entrapment and suffocation are not problems of the past. Junked or abandoned appliances are still dangerous... even if they will "just sit in the garage a few days."
- **Before you throw away your old wine cooler:**
take off the door, leave the shelves in place, so that children may not easily climb inside.
- Never allow children to operate, play with, or crawl inside the appliance.
- Never clean appliance parts with flammable fluids. The fumes can create a fire hazard or explosion.
- Do not store or use gasoline or any other flammable vapors and liquids in the vicinity of this or any other appliance. The fumes can create a fire or explosion.

INSTALLATION INSTRUCTIONS

Before Using Your Wine Cooler

- Remove the exterior and interior packing, including protective foam on door panels .
- Check to be sure the following parts are included:
 - 4 slide out shelves
 - 1 wine rack
 - 1 Instruction manual
- Before connecting the appliance to the power source, let it stand upright for approximately 2 hours. This will reduce the possibility of a malfunction in the cooling system from handling during transportation.
- Clean the interior surface with lukewarm water using a soft cloth.

Installation of Your Wine Cooler

- Place your appliance on a floor that is strong enough to support the appliance when it is fully loaded. To level your appliance, adjust the legs at the front of the appliance.
- Allow 5 inches of space between the back and sides of the appliance, which allows the proper air circulation to cool the compressor.
- Locate the appliance away from direct sunlight and sources of heat (stove, heater, radiator, etc.). Direct sunlight may affect the acrylic coating and heat sources may increase electrical consumption. Extreme cold ambient temperatures may also cause the appliance not to perform properly.

- Avoid locating the appliance in moist areas. Too much moisture in the air will cause frost to form quickly on the evaporator.
- Plug the appliance into an exclusive properly installed-grounded wall outlet. Do not under any circumstances cut or remove the third (ground) prong from the power cord. Any questions concerning power and or grounding should be directed toward a certified electrician or an authorized HOOVER Products service center.

Improper use of the grounded plug can result in the risk of electrical shock. If the power cord is damaged, have it replaced by an authorized HOOVER Products service center.

IMPORTANT SAFEGUARDS

Do not store food in wine cooler, as interior temperature may not get cool enough to prevent spoilage. As a natural result of condensation, in summer months or area of high humidity, the glass door may built up moisture on the outside. Just wipe it away.

OPERATING YOUR WINE COOLER

Before starting the wine cooler, ensure the cabinet is level. This will eliminate any vibrations. This wine cooler is designed for climatic class N and to use at temperature from 16 to 32 degree Celsius.



It is recommended for best result you install the wine cooler in a place where the ambient temperature is between 22-25 degree Celsius. If the ambient temperature in above or below the recommended temperature, conditions may cause the interior temperature to fluctuate. Recommended temperature ranges for chilling wine.

Red wines:	15-18°C
Dry/White Wines	10-15°C
Rose Wines	9-10°C
Sparkling Wines	6-9°C
Beverage	3-6°C

SETTING THE TEMPERATURE CONTROLS

Each cooling compartment of the wine cooler (upper & lower) are independently controlled. To set the temperature:

1. Connect the power cord to a properly grounded outlet. The temperature preset at factory of each compartment are:



12 C (54°F)-Upper Compartment
6 C (43°F)-Lower Compartment

2. Set the desired cooling temperature by pressing the button⬆ or⬇ which are under the Upper Compartment/Lower Compartment program. When you push the two buttons for the first time, the LCD readout will show the original temperature set at previous time. The temperature that you desire to set will increase 1°F or 1°C if you push the⬆ once, on the contra the temperature will decrease 1°F or 1°C if you push the⬇ once.

Upper Compartment: The temperature setting can be adjusted from 10°C - 18°C (50°F - 64.4°F) ;

Lower Compartment: The temperature setting can be adjusted from 3°C - 10°C (37.4°F - 50°F) .


The setting temperatures may fluctuate depending on whether the bottles are located on the upper/middle or lower section.

3. To view the setting temperature, (anytime) press the corresponding  or  button, the setting temperature will temporarily flash in the LCD display for 5 seconds.

Flashing LCD = Setting Temperature

Steady LCD = Cabinet Temperature

4. This unit has the option to display temperature in either Celsius or Fahrenheit. To change the setting, press the button marks C/F

5. You can turn the interior lights on or off by pressing the button marked  symbol. The interior lights are LED lights which are low power(only 0.25W for each one) and low heat. They can be left on for long term. The temperature inside the wine cooler will not be influenced.

6. Your wine cooler is designed with an Auto-Cycle defrost system. During the Off-Cycle the refrigerated surface of the wine cooler (interior rear wall) defrost automatically. The defrost water is channelled into a condensate drain pan which is located at the back of the wine cooler on the top of the compressor from where it evaporates.

Shelves

Shelving is wooden. To accommodate different size bottles, they can be moved up or down by sliding them out of the tracks. The shelves are designed to accommodate the maximum amount of bottles.

Wine Rack

There is an additional wine rack at bottom section of the unit where you can store up to 6 wine bottles. recommended for WHITE SPARKING WINE (Champagne, Spumante, ...) This rack is removable for cleaning purpose.

NOTE:

When you use the wine cooler for the first time or restart the wine cooler after it has been turned off for long time , there could be a few degrees variance between the temperature you select and the one indicated on the LCD readout. This is normal and it is due to the length of the activation time . Once the wine cooler is running for a few hours everything will be back to normal.

Also, there is a 2 to 3 °C variance between the top and bottom shelves of each wine chiller. Therefore, If you have set the wine cellar for red wine only and the temperature reads 16 °C and you want to place a mix of white and red wines, you should place the wine bottles on the bottom shelves and the red wines on the top shelves.

CARE AND MAINTENANCE

CHANGING THE LED LIGHT

Note: All parts removed must be saved to do the replacement of the LED light. Before removing the LED light, either unplug the refrigerator or disconnect the electricity leading into the refrigerator at the main power supply. Failure to do so could result in electrical shock or personal injury. You should use the LED light which is permitted by the seller.

Cleaning Your Wine Cooler

- Unplug the wine cooler, and remove the bottles.
- Wash the inside with a warm water and baking soda solution. The solution should be about 2 tablespoons of baking soda to a quart of water.
- Wooden shelves does not require cleaning.
- The outside of the wine cooler should be cleaned with mild detergent and warm water.
- It may also be necessary to periodically wipe the bottom part of the storage area, as the wine cooler is designed to retain humidity, and condensation may collect there.

Maintenance of Your Wine Cooler

- Power Failure
Most power failures are corrected within a few hours and should not affect the temperature of your wine cooler if you minimize the number of times the door is opened. If the power is going to be off for a longer period of time, you need to take the proper steps to protect your contents.

Vacation Time

During long absences, remove all the bottles; unplug your wine cooler, clean your wine cooler, and leave the door open slightly to avoid possible formation of condensation, mold, or ordure.

Moving Your Wine Cooler

- Remove all the bottles.
- Securely tape down all loose items inside your wine cooler.
- Turn the levelling screws up to the base to avoid damage.
- Tape the doors shut.
- Be sure the wine cooler stays in the upright position during transportation.

Troubleshooting

You can solve many common wine cellar problems easily, saving you the cost of a possible service call. Try the suggestions below to see if you can solve the problem before calling the servicer.

TROUBLESHOOTING GUIDE

PROBLEM	POSSIBLE CAUSE
Wine cooler does not operate.	Not plugged in. The circuit breaker tripped or blown fuse.
Wine cooler is not cold enough.	Check to be sure the temperature control setting. External environment may require a higher setting. The door is opened too often. The door is not closed completely. The door gasket does not seal properly. The wine cooler does not have the correct clearances.
Compressor turns on and off frequently	The room temperature is hotter than normal. A large amount of warm wine has been added to the wine cooler. The door is opened too often. The door is not closed completely. The temperature control is not set correctly. The door gasket does not seal properly. The wine cooler does not have the correct clearances.
The light does not work.	The home circuit breaker or fuse has tripped. The wine cooler is unplugged. The LED light has burned out(see maintenance section for the replacement procedure). The switch is in the "OFF" position.

Vibrations.	Check to assure that the wine cooler is level.
The wine cooler seems to make too much noise.	<p>The rattling noise may come from the flow of the refrigerant, which is normal.</p> <p>As each cycle ends, you may hear gurgling sounds caused by the flow of refrigerant in your wine cooler.</p> <p>Contraction and expansion of the inside walls may cause popping and crackling noises.</p> <p>The wine cooler is not level.</p>
The door will not close properly.	<p>The wine cooler is not level.</p> <p>The doors were reversed and not properly installed.</p> <p>The gasket is dirty.</p> <p>The shelves are out of position.</p>

Technical Specifications:

For detailed specifications, please refer to the nameplate at the back of the wine Cellar. The specifications are subject to change without prior notice due to products Improvement.